

 
3.1101.621478.0000000

原材料 机乐堂 (A-US) JR-MI01 浴室防水盒蓝牙音箱 全英说明书 V1.0

尺寸: 97x140mm


材质: 128g铜版纸+正反单色印刷+风琴折

JOYROOM

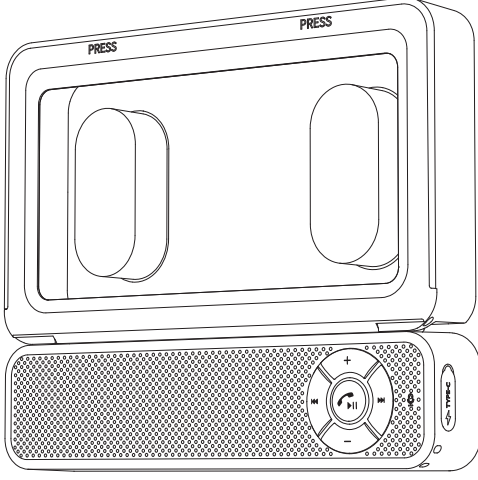


USER MANUAL
JR-MI01 Shower Phone Holder with Wireless Speaker

 I. Installation Guide
(Note: tear off the protective film on the phone holder before use!)

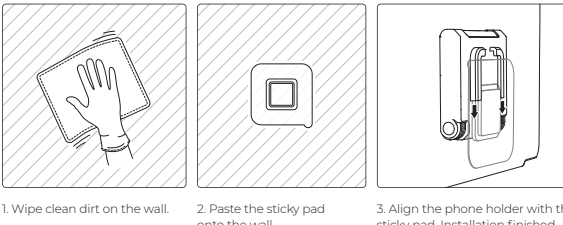


II. Operation Instructions

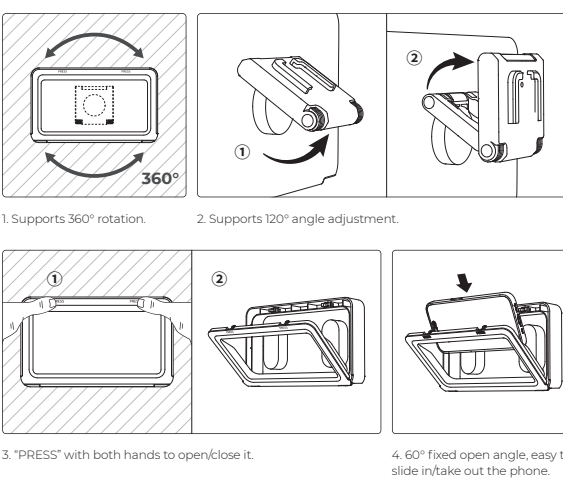 


Universal Compatibility
Widely compatible with mainstream phones within 7 inches.

 5. Attach the speaker & phone holder magnetically.
(Note: tear off the protective film on the phone holder before use!)

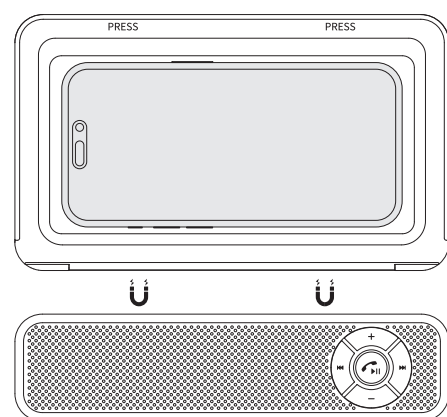

Attention:
DO NOT immerse the phone holder completely in water. Keep the wall dry when installing the sticky pad, and leave it for 24h before hanging the phone holder for use.

 III. Product picture

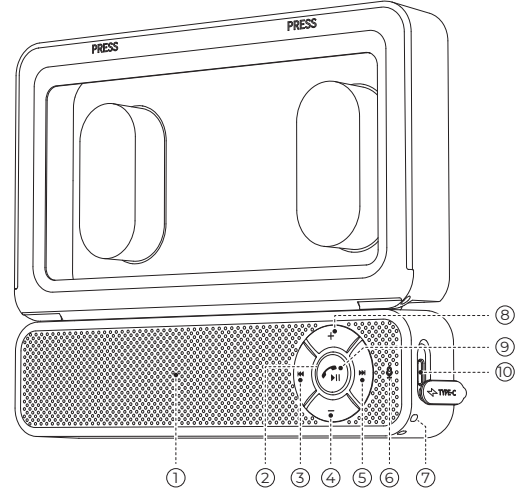

① Audio out ④ Next track ⑦ Volume+
② Light ring ⑤ Microphone ⑧ Multifunctional button
③ Previous track ⑥ Lanyard hole ⑨ Type-C charging port

IV. Packing list

- Phone holder *1
- Wireless speaker*1
- Traceless sticky pad *3
- Charging cable*1
- User Manual & Warranty Card

V. Basic parameters

Name: Shower Phone Holder with Wireless Speaker
Model: JR-MI01
BT version: V5.4
Audio decoding: SBC
Supported protocols: HFP, A2DP, AVRCP
Control mode: button control
Interconnection: TWS interconnection
Working frequency: 2402-2483MHz
Max output power: 0dBm±2 (EIRP)
BT range: 10m (barrier-free open environment)
Frequency response range: 50Hz-18kHz
Speaker: φ40mm + passive radiator
Rated output power: 3W
Music time: about 60h (70% volume)
Standby time (connected): about 120h
Battery capacity: 3800mAh
Charging time: about 3.5h
Type-C charging input: 5V = 1A
Material: ABS+PC+silicone
Water resistance: speaker IPX7, phone holder IPX4
Net weight: speaker 794g, phone holder 255g
Size: speaker 200*49*52mm; phone holder 200*118*45.5mm

VI. Pairing operation

- Turn on**
Press and hold the multifunctional button for 2s to turn on the speaker manually.
- Connected**
When the ice blue light ring breathes quickly, it means the speaker is ready for pairing. Turn the phone's BT function on and search for the BT device "Joyroom Immense MI01", connect with it.
- Turn off**
Press and hold the multifunctional button for 5s to turn off the speaker manually. The speaker will turn off automatically if not connected for 10min.

Warranty Card

User Name: _____

User Tel: _____

User address (with postcode): _____

Purchase date: _____

Invoice No: _____

Dealer Name: _____

Dealer Tel: _____

Dealer Address (with postcode): _____

Warranty service instructions

A. If there is performance failure on this product and it's not caused by human error, we will provide a 24-month free warranty service for consumers from the date of purchase.

B. Warranty exceptions:

- * Human damage;
- * Expired the warranty period;
- * Failure to provide valid purchase certificate;
- * Product damage caused by failure to follow the use, maintenance and care instructions;
- * Product damage caused by disassembling or repairing the product without authorization, or immersing the product in water;
- * Damage caused by force majeure.

VII. Operation instructions

Music function

- Play/Pause: Click the multifunctional button to pause or play music.
- Previous track: Click the previous track button.
- Next track: Click the next track button.
- Volume up: Click or long press the volume+ button.
- Volume down: Click or long press the volume- button.

Call function

- Answer/end call: Click the multifunctional button to answer or end a call.
- Reject call: Press and hold the multifunctional button for 2s.
- Redial last number: Double-click the multifunctional button under phone connected status.

Voice assistant

Activate/turn off voice assistant: In music or standby status, press and hold the multifunctional button for 1s and then release after hearing a "do" sound to activate or turn off Siri.

 
Factory reset

Restore factory settings: In turned on status, press and hold the volume+ and volume- buttons simultaneously for 3s.

Interconnection

Enter TWS interconnection mode:
3-click the multifunctional button of both speakers simultaneously to enter TWS interconnection mode.

Exit TWS interconnection mode:
3-click the multifunctional button of either speaker to exit TWS interconnection mode.

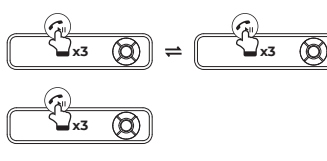

VIII. Indicator instructions

Turn on	The ice blue light ring keeps on for 3s
Turn off	The ice blue light ring flashes twice
Ready for pairing	The ice blue light ring breathes quickly
Charging the speaker	During charging, the ice blue light ring keeps on. When fully charged, it will turn off

IX. FAQ

Q: Why can't the speaker be turned on?
A: ① Please check whether the speaker is still with power. If not, please charge it for more than half an hour before turning it on.
② Please long press the power button, if you press it too shortly or at a wrong position, the speaker may fail to turn on.

Q: Failure to connect with the speaker?
A: ① Check whether the speaker is powered on normally and ready for pairing. (Please check it by the indicator light or prompt tone)
② Check whether the speaker is connected to another device. If so, please disconnect with it and make a reconnection again.
③ Turn off the phone's BT function and the speaker, then turn them on again for reconnection.
④ If the speaker still cannot be connected after above operations, you can restore it to factory settings.

Q: Why does jamming/discontinuity occur when listening to songs?
A: ① The speaker' signal may be disconnected because of the long distance between the speaker and connected device. Please keep them within 12m distance.
② The speaker' signal may be interfered when being used in an environment with strong interference. Please make sure there's no large shield, metal partition or large interference source around you.
③ Please make sure the phone's signal and network are in good condition, in case of poor signal or network cache problems, jamming or discontinuity will happen to your speaker.

Q: Why is the sound of the speaker too low or mute?
A: ① It may be that the playback channel of the speaker and the mobile phone is turned off. You can turn on the phone's BT function, click the icon on the right side of connected device and turn on the media channel.
② Open the "Settings" interface, check if there is a maximum volume limit on the phone.
③ The volume up/down control of the speaker and the mobile phone may be operated separately due to different settings of mobile phones (such as Android). Please adjust the volume of both the mobile phone and the speaker according to the settings of the mobile phone.

Q: Failure to work when the speaker is connected to the computer?
A: In case of BT connection, please turn on the output channel of the computer and set the speaker output mode as default mode.

Q: Why can't the speaker be charged?
A: ① The charging port and cable may not be connected properly, please pull the cable out and plug it in again repeatedly to make sure it is well inserted.
② Please use adapters that conform to national/regional safety standards together with the included charging cable to charge the product. Unqualified or unguaranteed charging cables may damage the speaker.

X. Safety Criteria

- Please follow the instructions, do not disassemble the product or refill it for any reason, otherwise it may break down or burn down.
- Do not immerse it in any liquid or wash it with water.
- Please use adapters that conform to national/regional safety standards together with the included charging cable to charge the product, otherwise its battery may be damaged or cause safety problems.
- Please use and store it in normal temperatures, too low or too high temperature (below 0°C or above 45°C) is not permitted.
- Do not block the openings of the product, such as charging port, indicator, etc.
- Do not use it at high volume levels or for long periods of time to avoid dizziness or hearing damage.
- Do not use it under thunderstorm which may lead to abnormal performance and signal interruption.

WARNING

- Before installing or operating the product, please refer to the electrical and safety information on the bottom of the shell.
- Never expose the battery (or battery pack) to excessive heat, such as sunlight or similar heat sources.
- Please follow the above safety instructions otherwise it will cause fire, electric shock, damage or other injuries.

Correct disposal of used electrical and electronic equipment

This product is in compliance with Directives 2002/96/EC and 2006/66/EC. It is strictly forbidden to dispose of this product with ordinary waste, instead it must be recycled. This symbol indicates that the product shall not be treated as household waste. Instead it must be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

FCC NOTE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
① This device may not cause harmful interference, and
② If this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.