


Waypoints and Altitudes

Waypoint #	Description	Altitude (ft AGL)	Latitude	Longitude
1	Launch	0	32.79778315	-97.1458005
2	Waypoint	0-500	32.79578998	-97.1448196
3	Waypoint	500-1000	32.78793307	-97.1482637
4	Waypoint	500-1000	32.78841043	-97.1597165
5	Waypoint	500-1000	32.79337808	-97.1664611
6	Waypoint	500-1000	32.78898852	-97.1743051
7	Waypoint	500-1000	32.78439632	-97.1740587
8	Waypoint	500-1000	32.78018608	-97.1635029
9	Waypoint	500-1000	32.78309679	-97.1458279
10	Waypoint	500-1000	32.78793250	-97.1475811
11	Waypoint	500-1000	32.79330540	-97.1453618
12	Waypoint	500	32.79329926	-97.1088709
13	Waypoint	500	32.79055414	-97.1033056
14	Waypoint	500	32.79317299	-97.1009922
15	Waypoint	500	32.80209584	-97.1019381
16	Waypoint	500	32.80394080	-97.1051094
17	Waypoint	500	32.80220079	-97.1127447
18	Waypoint	500	32.79363137	-97.1175288
19	Waypoint	500-1000	32.79354502	-97.1429067
20	Land	0	32.79778315	-97.1458005

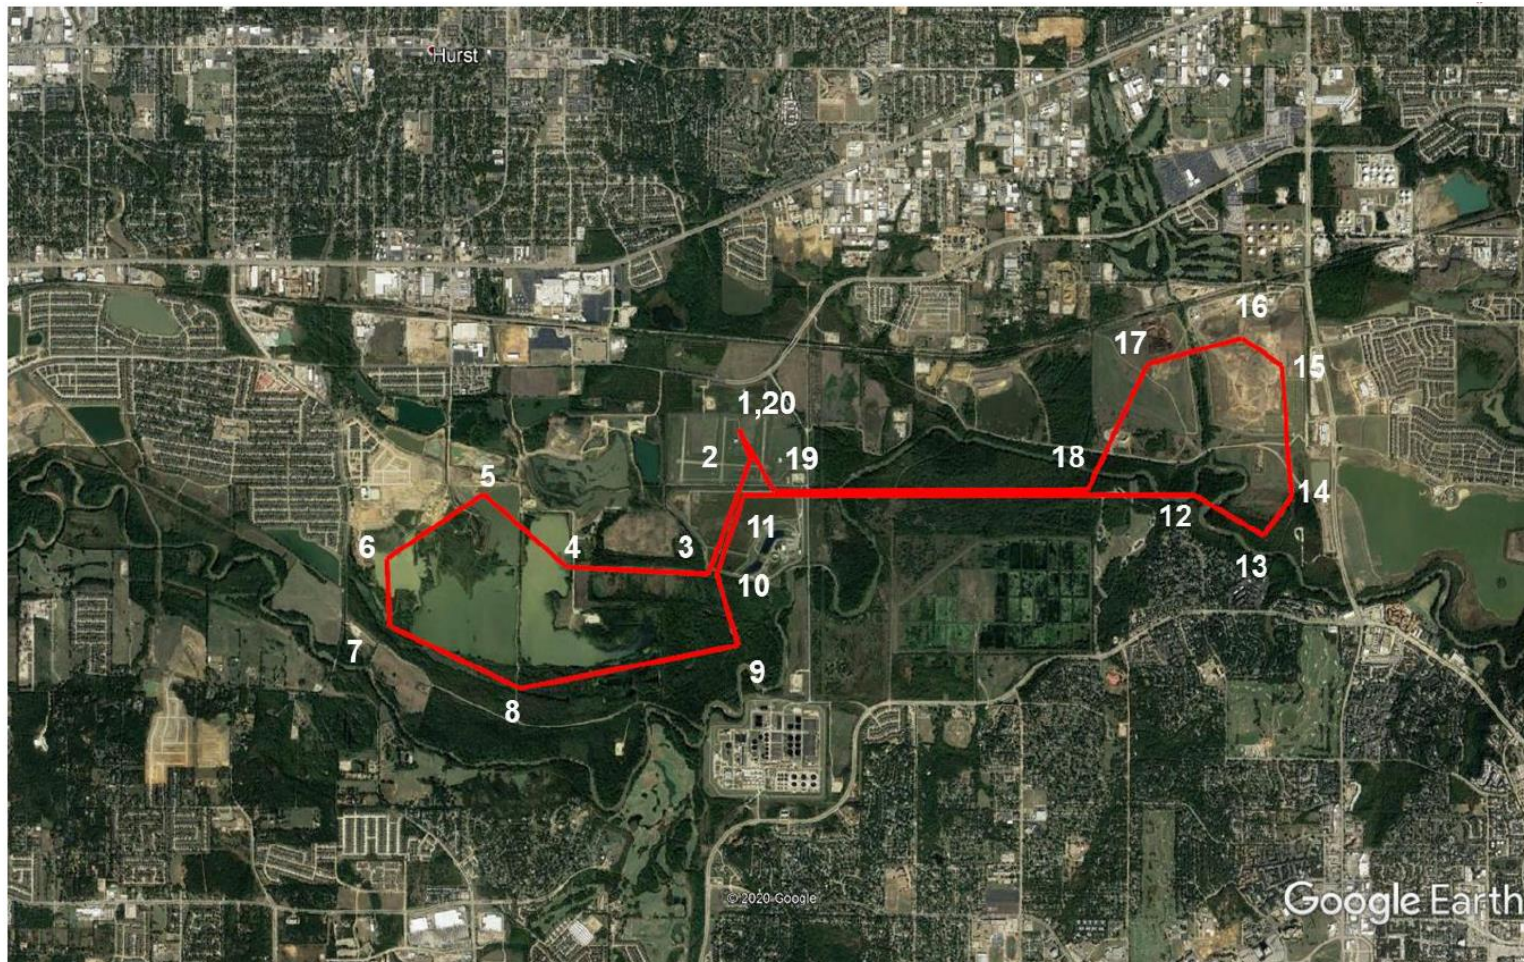

Operating Procedure

1. Ground Auto Tracker Antenna setup within radius of operation at indicated base/mobile location on FCC STA application as the Ground Data Terminal.
2. Ground Auto Tracker Antenna manually or automatically switched to Omni antennas during close-up operation.
3. UAV to fly through all waypoints indicated on the flight profile.
Max altitude 1000 ft.
4. Ground Auto Tracker Antenna manually or automatically switched to Directional antenna if necessary during flight.
5. UAV reached destination and proceed back to home base.
6. Ground Auto Tracker Antenna manually or automatically switched to Omni antennas during close-up operation.
7. UAV to land and shutdown.