

WMT200-RS Remote Controller User Menu

Function Introduction



- ① Lighting ON / OFF
- ② Fan Forward / Reward
- ③ Fan speed
- ④ Fan OFF / Pairing key
- ⑤ Timer
- ⑥ Sleeping wind
- ⑦ Natural Wind

Pairing Method

Press and hold the Key ④ for 2~3 seconds within 1 minute when Fan power on. You will hear 3 sound of “Beep”. It means pairing is successful.

Tips:

The remote control has been paired before leaving the factory and it can be used directly after installation. Re-pairing is required when you need to replace a new remote.

Specification

Model	WMT200-RS
Frequency	433.92 MHz
Size	134.5 (L) *42 (W) * 20 (H) mm
Working Distance	12-15 meter (open space)
Battery	AAA * 2
Voltage	DC 3V

Notices

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Shenzhen WELMAG Intelligence Technology Co.Ltd.
5th floor, Building 3, Hongtu Industrial Zone, North Seventh Road,
Hezhou, Bao'an District, Shenzhen