


Note: If you fail to connect, unplug the lamp and try again.

5. Tap to select preset monochrome.

6. Tap to switch to other modes.

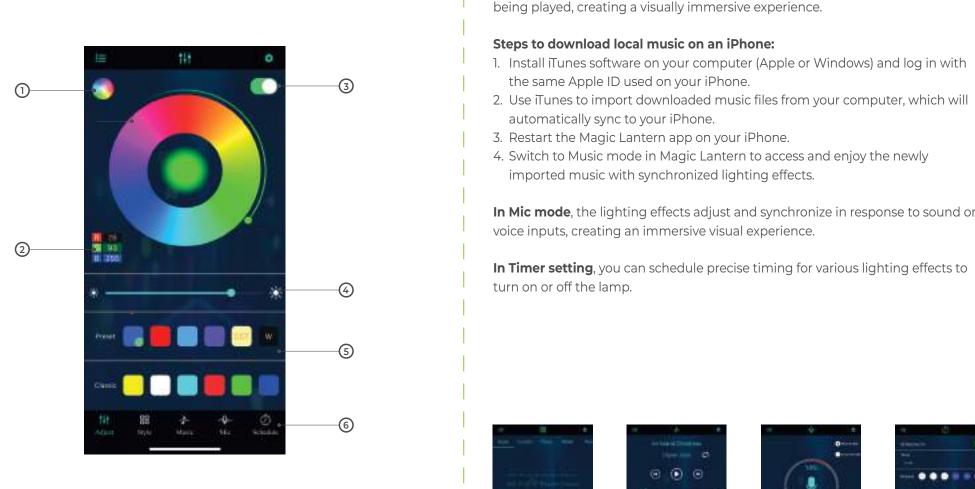

2. Use iTunes to import downloaded music files from your computer, which will automatically sync to your iPhone. 3. Restart the Magic Lantern app on your iPhone. 4. Switch to Music mode in Magic Lantern to access and enjoy the newly imported music with synchronized lighting effects. **In Mic mode**, the lighting effects adjust and synchronize in response to sound or voice inputs, creating an immersive visual experience. **In Timer setting**, you can schedule precise timing for various lighting effects to turn on or off the lamp.

-----.....

In Style mode, you can select preset scenes and adjust its speed.

In Music mode, the lighting effects synchronize with the music

Cleaning Instructions

- 1. Gently wipe the surface of the lamp tubes using a soft, dry sponge or cloth. 2. Avoid using abrasive cleaning tools like steel wool, scouring sponges, or stiff
- 3. Never use strong cleaning agents such as white spirit, turpentine, household glass cleaner, or cellulose thinners.

Troubleshooting

US Importer: JOICOM CORPORATION

14129 The Merge Street, Building 3 Unit A, Eastvale, CA 92880

Manufacturer: Shenzhen Ruiyi Business Technology Co., Ltd.

Economic Zone, Qianhai Bay, Shenzhen, Guangdong Province, 518000 China

No. 810-C063, 8th Floor, Xiangbin International Financial Centre, No.18, West Free Trade Street, China Special

PROBLEM	SOLUTION
The lamp does not light up	Ensure the lamp is properly plugged into a functioning power outlet. Make sure the bulb is securely inserted into the socket and tightened as needed. Replace it with a new bulb.
The remote control does not work.	Check the batteries, if depleted, replace them.
The lamp does not respond to the app.	If the app remains inactive for an extended period, it may become disconnected. Please restart the lamp.

HOMVAIDV Vibrant Lighting Expert

Warranty (1-Year Period)

circumstances but not limited to: · Improper or inadequate maintenance or modification. · Accident, misuse, abuse, contamination, or other external causes. · The use of unspecified adapter and accessories. Loss or damage in transit. Damages that occur as a result of one's failure to follow

· This warranty does not apply to expendable or from which the serial number has been removed. **Customer Service** olutions to any issue you might have within

TEL: +1(844) 417 0149 (US ONLY) Monday-Friday 9:00AM-4:30PM E-MAIL: support@homavida.com contact us with your order number within the specified warranty period. DO NOT dispose of any product parts as they may be required for inspection/repair.

尺寸:210*297

材质:80g书纸 单色印刷 双面印刷

绿色虚线为折痕不印刷