TITILLO

BUD Personal Massager USER MANUAL & WARRANTY INFORMATION

[B-SVH-001]

Always read this manual before use and store this manual without disposing.

WARNING

- Do not excessively stretch the Silicone Cover of the product. This may cause snapping or other product damage.
- Do not remove the Silicone Cover of the product. This may cause product damage or other defects and is a fire hazard.
- Do not exert any strong pressure on the product, such as twisting, or pulling on the product. This may lead to product damage.
- Do not attempt to fix the product if found defective. This may lead to fire and electricity hazards and may put you in danger.
- Do not drop or expose to extreme force as this may cause product damage.
- Do not place the item in or near open flames. Do not attempt to heat the item up or place it in high-temperature areas. Do not use if hot. Any of these may lead to overheating fire hazards or explosion of item.
- Do not place under heavy objects or near hot objects. These may cause electrical and fire hazards.

PRODUCT CONTENTS

Product	$\times 1$
Remote control	×1
USB magnetic charging cable	×1
Micro USB charging cable	×1

IMPORTANT:

For Adult Use Only. Those who may be pregnant, have a pacemaker, diabetes, phlebitis or thrombosis should consult with a medical professional regarding the risk of blood clots before using any personal massage product.

CAUTION

- We recommend that you use high-quality water-soluble lubricants when using TITILLO products.
 Use only water-based lubricants with this product. Silicone-based/oil-based lubricants/ other oils such as massage oil or baby oil may cause damage to the product material.
- Do not place the product in mouth. Do not attempt to swallow the product. Do not insert the item into the anus.
- Do not use when tired or under the influence of alcohol as this may cause health troubles.
- If you notice any adverse physical effects during use, cease use immediately and contact a medical professional. Prolonged use may cause injury or health problems.
- Do not share with others to avoid transmission of contagious diseases and infections.
- Do not use on any damaged, irritated skin or any other bodily areas requiring medical attention.
- Do not use on the same part of the body for over 15 minutes.
- Do not use this product under a blanket.
- Always turn OFF after use to avoid physical accidents or product damage.
- Do not use if the product is malfunctioning. Turn OFF immediately. Use while malfunctioning may lead to injury.

English 04


INSTRUCTIONS

$\overline{\bigcap}$	Power button	Short press: C point vibration intensity control (4 levels). * In automatic mode: pause/continue. Press for 2 seconds: Turn the power on or off.
M	M button	Short press: G point vibration intensity control (4 levels). * In automatic mode: mode switching. Press for 2 seconds: enter/exit automatic mode (10 modes).
	H button	Short press: Straighten control. Press for 2 seconds: Turn on or turn off the heating.
***	S button	Short press: bending control. Press for 2 seconds: swing control (3 amplitudes).

INSTRUCTIONS



English 06

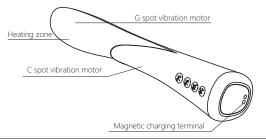

REMOTE CONTROL

You can use the remote control or the buttons on the product to control at the same time. The remote control display will OFF after 10 seconds of operation. At this time, press the multi-function button to wake up the remote control display.



- Up / Down key:
 - Move the box to the function you want to control.
- Multi-function button:
 - Wake up the remote control and switch the amplitude or intensity of the selected function.
- When the box is in the automatic mode:
 - Short press: Confirm, pause, continue.
 - Press for 2 seconds: Exit automatic mode.
- ◎ Left / Right key: Select the angle or mode.
- * When in automatic mode (AUTO MODE is displayed), the G spot and C spot vibration modes are not available (the Mode / Intensity in this area is not displayed).

REMOTE CONTROL

Favorite button:

Short press: Enter or exit the favorite mode. In the favorite mode, the favorite mode icon lights up. Press any button to exit the favorite mode and return to the state before entering the favorite mode.

Press for 2 seconds: Record the current mode (G spot vibration function setting, C spot vibration function setting, bending function stting, heating mode setting) as the favorite mode. When the recording is successful, the favorite mode symbol flashes three times.

*The favorite mode is not available in automatic mode (when AUTO MODE is displayed).

() Heating button: turn on or off the heating.

CLEANING, STORAGE AND SAFETY

- We recommend thoroughly cleaning the TITILLO Product before first use.
- Always wash before and after every use. Do not boil or attempt to wash with hot water.
- Always remove USB Cable from the product before cleaning.
- Please wash with cold or tepid water.
- If using soap, please use only a mild, neutral soap.
- Pat dry with a dry cloth to remove any excess water, and leave to air dry.
- Once dry, put it in the storage bag to ensure the item stays clean.
- Do not clean with alcohol or highly acidic/ alkaline cleaners. This may cause disfiguration of the product.
- Do not clean with hot water. Do not place in hot or cold water for extended periods. Store away from direct sunlight, in a cool, dry place.
- The product is waterproof up to 50cm. Do not place in deeper waters or expose to intense streams of water. This may lead to product damage.

CLEANING, STORAGE AND SAFETY

- The remote control is not waterproof. Please do not use it in a humid environment or underwater, These may lead to damage of the product, overheating, or fire hazards.
- Do not use in saltwater or seawater. This may lead to product damage.
- Do not leave in water for prolonged periods. This may lead to product damage.
- Keep away from hot, humid places and direct sunlight. These may cause product damage or fire hazard.
- Please do not store with insecticides, solvents, silicone items, or oil-based products. This may cause the product to become deformed.
- Product and included USB Cable include a strong magnet. Do not place near cell phones, watches or clocks, magnetic IC cards, music players, or any other items that are affected by a magnetic field. This may lead to product damage or damage of items placed near them.
- •Keep out of reach of children. Detachable parts may cause choking hazards.

CHARGING

Product Charging

- Please insert the USB port with the magnetic charging cable into the PC or other standard USB power adapter.
- Connect the USB Cable to the Magnetic Terminal. TITILLO uses intelligent magnetic charging technology, the Magnetic Terminal can be charged regardless of the front and back.
- 3. If connected properly, the Charging Lamp will flash slowly.
- 4. Once fully charged, the Charging Lamp will light up.
- 5. The Charging Lamp is located on the product.

Remote control charging

- Please insert the USB port with the Micro USB charging cable into a PC or other standard USB power adapter. Then plug the Micro USB port of the charging cable into the charging port on the back of the remote control.
- When charging, the remote control charging light shows red. After charging is complete, the charging light off. The charging light is on the back of the remote control.

CHARGING

- For first use or use after a long period of disuse, please make sure to fully charge.
- To sustain battery life as long as possible, please recharge to full charge at least every 6 months.
- Do not use any Charging Cable other than the included USB Cable.
- To ensure proper connection, place the item on a flat surface when charging.
- * Do not charge the product while ON. This may cause product damage and fire hazards.
- * Do not twist/ bend or forcibly remove the USB Charger.
- •While not charging, always remove the USB charger from the electricity source to avoid dust or other dirt from causing fire and electrical hazards.
- The included USB Cable is not waterproof. Please do not charge the product underwater. This may lead to short-circuiting of item. electrocution, or fire hazards.
- Do not attempt to attach or remove USB Cable with wet hands, as this may lead to burns, electrocution, or injury.

CHARGING

- When removing the USB Cable, always hold the port and NOT the cable, and do not apply excessive force to remove USB Cable. Using excessive force may lead to shortcircuiting, electrocution, or fire hazards.
- Do not use it if USB Cable is damaged. This may lead to short-circuiting of item. electrocution, or fire hazards.
- Please occasionally remove dust from USB Plug and USB Charger, as the excessive build-up of dust in these areas may cause a fire hazard.

The product won't turn on / the product won't stay on

- Ensure the item is fully charged.
- Deplete the battery completely once, then fully charge. There are cases where doing so several times will fix the problem. If a long time has passed since purchase, the product life of the battery may have ceased.

The product won't charge / Charging Lamp won't turn on.

- Is the USB Cable correctly attached?
- Is there any dirt on the connectors of the cables? If there is, please clean with a dry cloth or cotton swab.

The product won't stop charging.

- Have you used a qualified USB power adapter that can be used normally?
- Is there any dirt on the connectors of the cables? If there is, please clean with a dry cloth or cotton swab.
- If the Charging Lamp does not light up after 120 minutes, there may be an issue with the connection.
 Please disconnect completely, reconnect and attempt the charging process once again.

TROUBLESHOOTING

The remote control does not display

- Please short press the confirm button in the middle of the remote control to wake up the remote control.
- Please use the attached Micro USB charging cable to charge the remote control. If a long time has passed since purchase, the product life of the battery may have ceased.

The remote control has power, but it cannot be operated

 In the shutdown state, press and hold the G/M button for three seconds. After seeing the indicator light flashing slowly, press the multi-function button on the remote control twice. The indicator light flashes last time, indicating that the remote control pairing is successful.

DISPOSAL INFORMATION

Disposal of old electronic equipment (Applicable in the EU and other European countries with separate waste collection systems).

The crossed-out dustbin symbol indicates that this product should not be treated as household waste, but rather be brought to the appropriate collection point for the recycling of electrical and electronic equipment.









Disclaimer: Users of this TITILLO Product do so at their own risk. Neither TITILLO nor its retailers assume any responsibility or liability for the use of this product. Further, TITILLO reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation to notify any person of such revision or changes.

WEBSITE: WWW.TITILLO.CO SUPPORT: CUSTOMERCARE@TITILLO.CO

FCC STATEMENT:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1)This device may not cause harmful interference, and

 $\ensuremath{(2)}\xspace{This}$ device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes ormodifications notexpressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will

FCC STATEMENT:

not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

WARRANTY TERMS & CONDITIONS

- TITILLO warrants this pleasure object for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. If you discover a defect and notify TITILLO during the warranty period, TITILLO will, at its discretion, replace the pleasure object free of charge.
- The warranty covers working parts that affect the function of the pleasure object. It does NOT cover cosmetic deterioration caused by fair wear and tear or damage caused by accident, misuse, or neglect. Any attempt to open or take apart the pleasure object (or its accessories) will void the warranty.
- Claims under warranty must be supported by reasonable evidence that the date of the daim is within the warranty period. To validate your warranty, please keep your original purchase receipt together with these warranty conditions for the duration of the warranty period.
- To claim your warranty, fill in your details under CUSTOMER CARE on TITILLO.co. You will be sent a Return Merchandise Authorization (RMA) number which should be returned with the TITILLO product. Shipping costs are non-refundable. This undertaking is in addition to the consumer's statutory rights and does not affect those rights in any way.

PRODUCT SPECIFICATIONS

Product Name:	BUD Personal Massager
Product Code:	B-SVH-001
Product Dimensions and Weight:	Vibrator: 220*55*46mm, 246g
	Remote Control: 140*57*20mm, 57g
Running Time:	Approx. 45min
Rated Voltage:	DC 5V, 1A
USB cable:	0.8m (Magnetic Terminal – USB A Connector)
	0.3m (Micro USB – USB A Connector)
Materials:	Vibrator: Silicone / ABS / PC / Li-ion Polymer Battery
	(Li-Poly)
	Remote control: Silicone /ABS / PC / Li-ion Polymer
	Battery (Li-Poly)
	USB cable: PVC
Country of manufacture:	CHINA

PRODUCT WARRANTY

Name:			
Address:			
Telephone Number:			
Warranty Period:	1 Year		
Date of Purchase			
Place of Purchase	Place of Purchase (Store Name, Address, Phone Number)- Attach Receipt		
(Store Name, Address			
Contact Details:	CUSTOMERCARE@TITILLO.CO		