



X Pro

Operating guide

Product description and accessories



Earphones



Data cable



Charging bay



Operating guide

Note: All pictures in this operating guide are schematic diagrams, which may be different from the real product. Please see the real product.

Charge description



Earphones charging

Put the headset into the charging box for charging. The ice blue lamp of the charging box flashes when charging, and the lamp will be off when it is fully charged.

Charging bay charging Battery capacity

The red light is flashing when charging; The Ice blue light is on after full charge.

30mAh (earphones)

300mAh (charging bay)

Warning: The rechargeable battery of this product must be properly disposed for recycling. Please do not put it into the fire to avoid explosion events.

One-Setp pairing



The earphones automatically powers on after being taken out. powers off after being put back.



 
. <u>-</u>

Settings

ANY DISHOUSE

II Pro

Headset on: please take out the headphones together, The "di" prompt sound appears on the ear directly, that means it's power on successfully, (one headphone light shows the breathing state and the other is flash).



Key operation



Answer calls: When a call coming in, click on the earphones.

Reject calls: When a call coming in, press about two seconds.

Hang up calls: When in a call, click on the earphones.

Pause/Play: Click the left earphone or right earphone

Next song: Double click the right earphone Previous song: Double click the left earphone

Game mode: when the headset is connected, long press 1-2 seconds to hear the prompt tone and then release to enter the game mode; long press 1-2 seconds to hear the prompt tone and then release to exit the game mode.

Specification parameters

Name: Wireless earphones
Model: X Pro
Impedance: 32 Ω
Frequency: 20-20KHz
Connection Range > 10M
Charging voltage: DC 5V=1A
Speaker specification: 013mm
Earphones battery capacity: 30mAh
Battery capacity of charging bay: 300mAh
Product size: 59*51*28mm

Frequently Asked Questions

No sound in the earphones

- Confirm whether the earphones are in working condition.
- Confirm whether the phone volume is proper.
- Confirm whether the earphones are properly connected to the phone.
- Confirm whether the earphones are in the normal area coverage.

Bad calling effect of the earphones

- Confirm whether the phone is in a strong signal area.
- Confirm whether there is no barrier between the earphones and the phone.

製品説明及び付属品



1 447



- 5



データケーブル

(sonog



充電コンパートメント

使用マニュアル

注: 本明経書の写真は全て概略図で、実際の商品と異なる場合があります。実物を基準にしてください。

● 充電説明



● 充電コンパートメント の充電

発電する時、赤いランプが 点滅します。発電が完成し たら、赤いランプが長く点 灯します。

● 電池容量

30mAh (イヤホン) 300mAh (充電コンパートメント)

● イヤホンの充電

ら、消灯します。

イヤホンを充電ケースに

入れて充電します。充電

する時、充電ケースの氷

と青ランプが点滅します。

電気がいっぱいになった

警告: リサイクルするために、本製品の充電式電池を適切に 保管してください。爆発事故を起こさないために、電池を火 の中に入れないでください。

● ヘッドセット



イヤホンを取り出すと、 自動起動します



イヤホンを充電コンパートメントに 入れると、自動的にオフにします。



イヤホンの起動:両方のイヤホンを 一緒に取り出してください。

直接耳につけると「滴」という表示 音が出ます。すなわち起動成功です



電子機器(携帯電話、タブレットな と)を開いて、ベア名の「X Pro」を 見つけたら接続をクリックしてくだ さい。

● ボタン操作



電話に出る:電話が来た場合、イヤホンをクリックします。

電話に出ない:電話が来た場合、二秒ぐらい長押しします

電話を切る:通話中、イヤホンをクリックします

中止/放送: 左耳または右耳のイヤホンをクリックします

次の曲: 右耳のイヤホンをダブルクリックします 前の曲: 左耳のイヤホンをダブルクリックします

ゲームモード:イヤホンが接続されている場合は、1~2秒 押して、プロンプトの音が聞こえたら、手を放してゲームモードに入ります。もう1~2秒押して、プロンプトの音を聞いたら、手を難してゲームモードから退出します。退出します。

● 仕様パラメータ

名称: ワイヤレスヘッドフォン 型番: X Pro インピーダンス: 32Q 周波数: 20-20KHz 接続範囲: DLOM 弁電電圧: DC 5V=1A ホーン仕様: 中13mm イヤホン電池容量: 30mAh 発電コンパートメントの電池容量: 300mAh 物品サイズ: 59*51*28mm

● よくある問題

イヤホンから音が出ない

- ●イヤホンが作動状態であることを確認します。
- 携帯電話の音量の大きさを確認します。
- ●イヤホンと携帯電話とが正常に接続されていることを確認します。
- ●イヤホンが正常なエリアの範囲内にあるかを確認します。

イヤホンの通話効果がよくない

- 携帯電話が信号の強いエリアにあるかを確認します
- ●イヤホンと携帯電話との際に障害物がないことを確認します

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -Reorient or relocate the receiving antenna.
- -Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help.