

SW-B69
USER MANUAL



Battery charge

- 1.The battery charging is done through a USB - micro USB cable (included in the package), connect it to any of the USB ports of a computer, wall adapter or any power source with USB output to charge them.
- 2.Let them fully charge, the LED indicator will be red while charging and turn off when fully charged.

NOTE: WE RECOMMEND YOU USE THE CABLE PROVIDED IN THE PACKAGE TO AVOID FUTURE DAMAGE TO THE BATTERY.

ON/OFF and Paring

To turn on the headphones:

Press and hold for 3 seconds the power button until the LED indicator Red and blue light flash alternatively,we can search pairing name" PROSCAN PBT277 "from wireless device,then start to connect.

Once the headphones are paired with the unit,they will stay connected unless you manually turn them off or restart the connected device.

To turn off the headphones:

Press and hold for 5 seconds the power button until the LED indicator turns red,and finally the indicator turns off.

NOTE: IF YOU CANNOT SET A CONNECTION, REPEAT THE STEPS ABOVE.

Audio playback/Answer or end call

1. To switch to the next song: hold down the button ►► +
2. To switch to the previous song: hold down the button -◄◄
3. To play or pause the selected song: press the ►|| button once
4. To increase the volume: press the ►► + button once
5. To lower the volume: press the -◄◄ button once
6. Press the ►|| button once to answer or end the call

AUX model:

Insert the 3.5mm audio cable into its corresponding space and automatically the reproduced audio will be heard on your entirely through headphones.

NOTE: THE AUXILIARY MODE WILL ALLOW YOU TO CONNECT THE HEADPHONES IN A CONVENTIONAL WAY AND NOT THROUGH WIRELESS CONNECTION SO YOU CAN CONTINUE USING THEM, EVEN IF THEY ARE DISCHARGED.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.