



### WiFi Extender



Installation video



#### LED Explanation

- Power Indicator
- Blinking Green: The extender wired network is active connection.
- Blinking Green: WPS connection is in process.
- (WPS icon) Blinking Green: The extender wireless network is working.

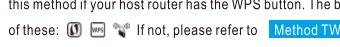
#### Button Explanation

- WPS Button: WPS connection
- Reset button: when the extender is powered on, Press and hold the Reset key until the Indicator flashes.


### Repeater Mode

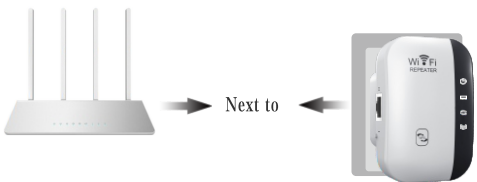
#### Quick Installation Guide

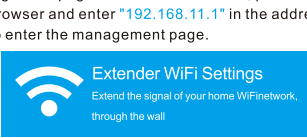
#### Method 1 Use WPS button configuration

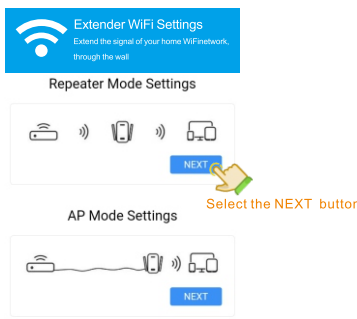
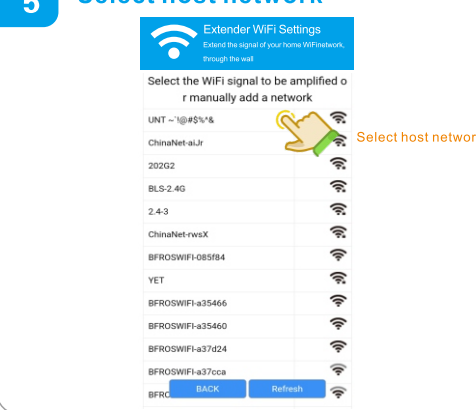
Using WPS is an easier way to extend your host network. You are recommended to use this method if your host router has the WPS button. The button might look like one of these: . If not, please refer to [Method TWO](#).

- Power On**  
Plug the extender into an electrical outlet near your host router and then wait until the (WPS icon) LED is on.
- Connect**  
1. Press the WPS button on your router.  
2. Within 2 minutes, press and hold the Key until Light flashes.  
3. After waiting for the extender to restart, you can find the network name ending with \_EXT in the Wi-Fi list of the phone. It indicates that the WPS configuration is complete. If you cannot find the network name with \_EXT in the Wi-Fi network list, please reset the repeater and use method two to configure.  
Extender reset method: long press the Reset button until the Indicator flashes.


- Relocate**  
1. Plug the extender into the power socket between the router and WiFi. The location you choose must be within the range of the existing host network.  
  
Extended Network Names: Host Router's network name with \_EXT at the end  
**Enjoy!** Extended network Password: Share the same passwords as those of your host networks

- Power On**  
Plug the extender into an electrical outlet near your host router and then wait until the (WPS icon) LED is on.
- Connect to the extender**  
Connect the phone to the extender via WiFi  
  
UNT-!@#%\$%^&  
Saved, encrypted (available)  
**Extender-a2f26**  
Saved (requires login/authorization)  
Wireless-N  
Saved (on Internet access)  
Connect to the extender's network: Extender-a2f26  
(The network name of the extender is printed on the label of the case)


- Login**  
After a while, the phone will automatically jump to the management page of the extender. If not, please open the browser and enter "192.168.11.1" in the address bar to enter the management page.  
  
User Login  
Language: English  
LOGIN  
Select the login button

- Mode Selection**  
Select Repeater mode in the menu bar  
  
Select the NEXT button
- Select host network**  
  
Select host network

### WiFi Extender



Installation video



#### LED Explanation

- Power Indicator
- Blinking Green: The extender wired network is active connection.
- Blinking Green: WPS connection is in process.
- (WPS icon) Blinking Green: The extender wireless network is working.

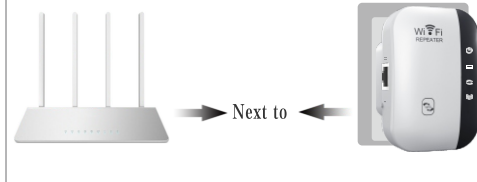
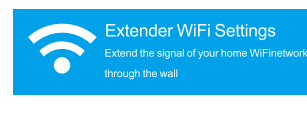
#### Button Explanation

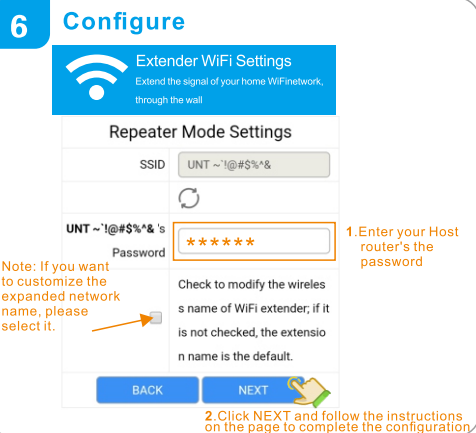
- WPS Button: WPS connection
- Reset button: when the extender is powered on, Press and hold the Reset key until the Indicator flashes.


### AP Mode

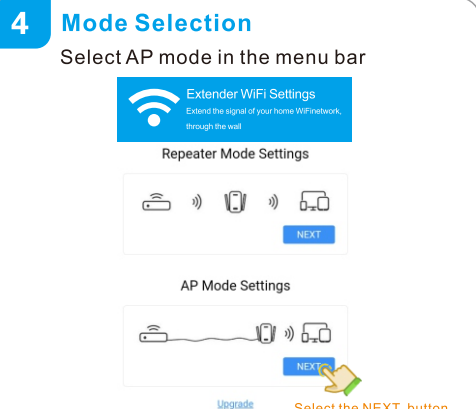
#### Quick Installation Guide

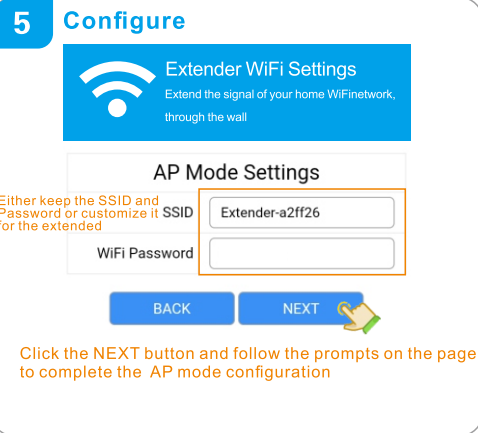
#### Method 2 use network configuration

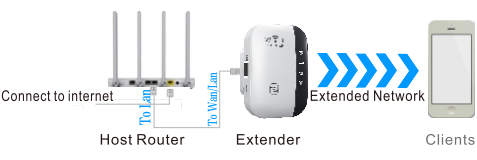
- Power On**  
Plug the extender into an electrical outlet near your host router and then wait until the (WPS icon) LED is on.
- Connect to the extender**  
Connect the phone to the extender via WiFi  
  
UNT-!@#%\$%^&  
Saved, encrypted (available)  
**Extender-a2f26**  
Saved (requires login/authorization)  
Wireless-N  
Saved (on Internet access)  
Connect to the extender's network: Extender-a2f26  
(The network name of the extender is printed on the label of the case)
- Login**  
After a while, the phone will automatically jump to the management page of the extender. If not, please open the browser and enter "192.168.11.1" in the address bar to enter the management page.  
  
User Login  
Language: English  
LOGIN  
Select the login button

- Configure**  
  
1. Enter your Host router's the password  
2. Click NEXT and follow the instructions on the page to complete the configuration

- Relocate**  
1. Plug the extender into the power socket between the router and WiFi. The location you choose must be within the range of the existing host network.  
  
**Enjoy!** Extended network name: The network name of the host router is suffixed with \_EXT, but if you customize them during the configuration process, they may have different SSIDs (network names).  
Extended network password: the same as the password of the host network.

- Mode Selection**  
Select AP mode in the menu bar  
  
Select the NEXT button

- Configure**  
  
Either keep the SSID and Password or customize it SSID for the extended.  
Click the NEXT button and follow the prompts on the page to complete the AP mode configuration

- Connect the Hardware**  
  
**Enjoy!** Connect to the extended network (default SSID and password), or you can redefine the SSID and password.

#### FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

#### RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.