

Quick installation guide

Model:U9

1. Panel Layout



WPS Button
Reset button
LAN / WAN port

LED Explanation

Name	Status	Indication
Power	Red	Power indicator
2.4GHz Wireless	On	The 2.4GHz wireless band is enabled.
2.4GHz Wireless	Off	The 2.4GHz wireless band is disabled.
WPS	Blinking Blue	WPS connection is in process. This may take up to 2 minutes.
WPS	Blinking Green	The extender is connected to the Internet.
WPS	Solid orange	The USB router is connected to the Host router, but is too far away from the Host router.
WPS	Solid green	The USB router is connected to the router, and is in a good location.
LAN / WAN	Blinking green	One powered-on device is connected to the router's LAN / WAN port.
LAN / WAN	Off	No powered-on device is connected to the router's LAN / WAN port.

Button and port Explanation


Item	Description
Reset Button	Press and hold this button for more than 5 seconds to reset the router to its factory default settings.
WPS Button	Press this button to enable the WPS function.
LAN / WAN port	For connecting to a DSL/Cable modem, or an Ethernet jack.

WiFi Repeater mode

In this mode, the router boosts the existing wireless coverage in your home.

1 Connect Your Router

Plug the extender into an electrical outlet near your host router, and then wait until the LED is on and then off.

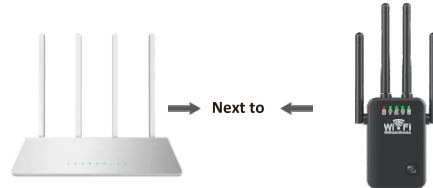


2 Configure repeater mode

Method ONE Using WPS (Wi-Fi Protected Setup)

Using WPS is an easier way to extend your host network. You are recommended to use this method if your host router has the WPS button. The button might look like one of these: . If not, please refer to **Method Two**.

Connect

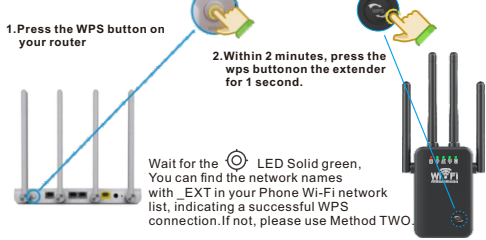

Relocate


1. Plug the extender into an electrical outlet between your router (Host Network) and the Wi-Fi "dead" zone. The location you choose must be within the range of your existing host network.
2. Wait until the LED is lit and solid Green. If not, relocate it closer to the router to achieve a good (or better) signal quality.



Enjoy! Extended Network Names: Host Router's network name with _EXT at the end
Extended networks Password: Share the same passwords as those of your host networks


Method TWO Using a Web Browser

For Mobile phone users
1. Find the SSID (Network Name) printed on the label of the U9 router.
2. Connect your Mobile phone to the U9 router's network

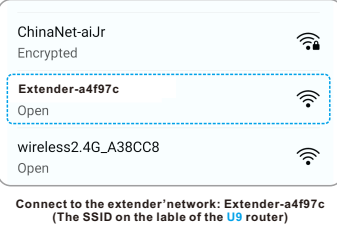


3 Login

1. Launch a web browser and type http://192.168.11.1 in the address field. (If the phone is connected to the repeater for the first time, The phone will automatically pop up the login page)
2. Use admin (all lowercase) for Password to login.

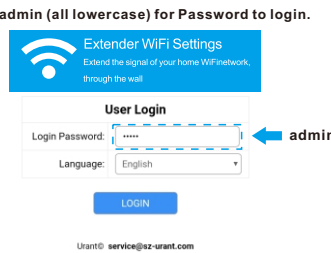


4 Mode selection

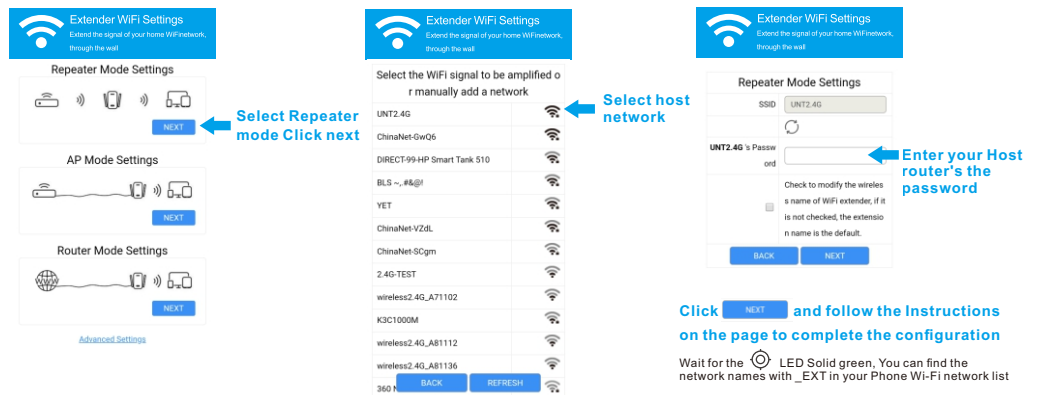

Relocate

1. Plug the extender into an electrical outlet between your router (Host Network) and the Wi-Fi "dead" zone. The location you choose must be within the range of your existing host network.

2. Wait until the LED is lit and solid Green. If not, relocate it closer to the router to achieve a good (or better) signal quality.

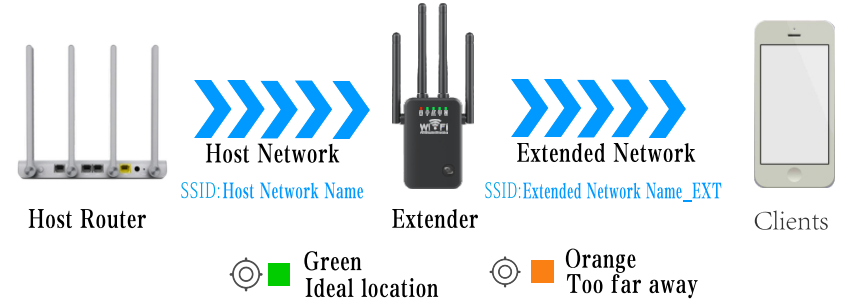

Enjoy! Extended Network Names: Host Router's network name with _EXT at the end, but may have different SSIDs (network names) if you have customized them during the configuration.
Extended networks Password: Share the same passwords as those of your host networks.


Frequently Asked Questions(FAQ)

- Q1. What can I do if the login window does not appear?**
- If the computer is set to a static or fixed IP address, change the setting to obtain an IP address automatically.
 - Verify if http://192.168.11.1 is correctly entered in the web browser.
 - Make sure your computer is connected to the Mini Router's network.
 - Use another web browser and try again.
 - Reboot your router and try again.
 - Disable the network adapter used currently and then enable it again.
- Q2. What can I do if I cannot access the Internet?**
- Check if the internet is working properly by connecting a computer directly to the modem via Ethernet cable. If not, connect your internet provider.
 - Reboot your router and try again.
 - While the router is powered on, press and hold the reset button on the rear panel of the router for approximately 5 seconds.
- Q3. How do I restore the router to its factory default setting?**
- While the router is powered on, press and hold the reset button on the rear panel of the router for approximately 5 seconds.
- Q4. Why set the repeater mode is unsuccessfully?**
- You may have typed in the router's wireless password incorrectly, please log in and check the wireless password.
 - The Mini router may be out of range, please move it closer to the router.
 - Please reset the Mini Router and go through the configuration again.
- A. If you need reset the extender. You need press and hold the reset button inside the tiny hole for 10 seconds.**

AP mode


In this mode, the router transforms your existing wired network to a wireless.

1. Connect Your Router

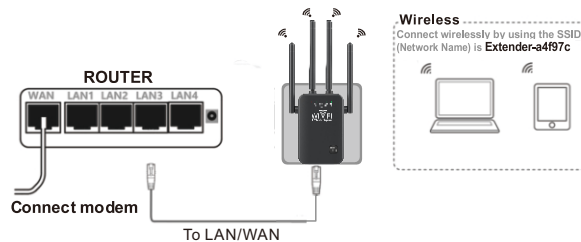

2. Connect to the U9 router

For Mobile phone users
1. Find the SSID (Network Name) printed on the label of the U9 router.
2. Connect your Mobile phone to the U9 router's network

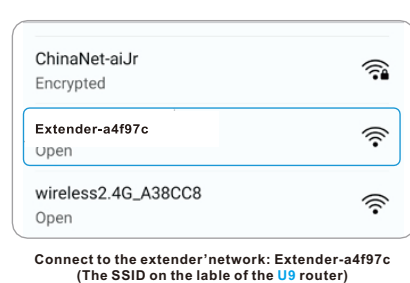


3. Login

1. Launch a web browser and type http://192.168.11.1 in the address field. (If the phone is connected to the repeater for the first time, The phone will automatically pop up the login page)
2. Use admin (all lowercase) for Password to log in.



4. Mode selection

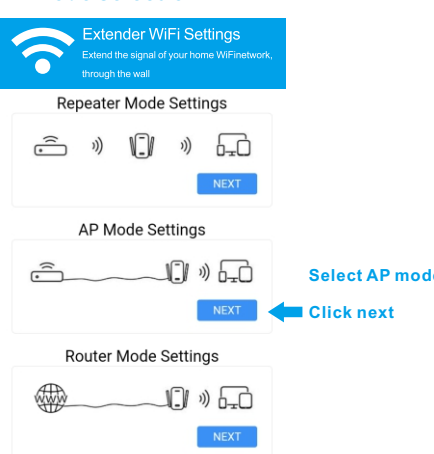

Click **NEXT** and follow the prompts on the page to complete the AP mode configuration

Enjoy! Connect to the Extended networks (default SSID and password) and enjoy internet, but may have different network name and password, if you have customized them during the configuration.


Frequently Asked Questions(FAQ)

- Q1. What can I do if the login window does not appear?**
- If the computer is set to a static or fixed IP address, change the setting to obtain an IP address automatically.
 - Verify if http://192.168.11.1 is correctly entered in the web browser.
 - Make sure your computer is connected to the Mini Router's network.
 - Use another web browser and try again.
 - Reboot your router and try again.
 - Disable the network adapter used currently and then enable it again.
- Q2. What can I do if I cannot access the Internet?**
- Check if the internet is working properly by connecting a computer directly to the modem via Ethernet cable. If not, connect your internet provider.
 - Reboot your router and try again.
 - While the router is powered on, press and hold the reset button on the rear panel of the router for approximately 5 seconds.
- Q3. How do I restore the router to its factory default setting?**
- While the router is powered on, press and hold the reset button on the rear panel of the router for approximately 5 seconds.
- Q4. Why set the repeater mode is unsuccessfully?**
- You may have typed in the router's wireless password incorrectly, please log in and check the wireless password.
 - The Mini router may be out of range, please move it closer to the router.
 - Please reset the Mini Router and go through the configuration again.
- A. If you need reset the extender. You need press and hold the reset button inside the tiny hole for 10 seconds.**

Router mode


1. Connect Your Router

If your internet connection is through a DSL/Cable modem, follow steps 1, 2 and 4 to complete the hardware connections.
If your internet connection is through an Ethernet cable from the wall, follow steps 3 and 4 to complete the hardware connections.

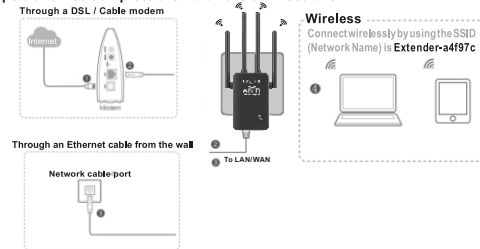


2. Connect to the U9 router

For Mobile phone users
1. Find the SSID (Network Name) printed on the label of the U9 router.
2. Connect your Mobile phone to the U9 router's network

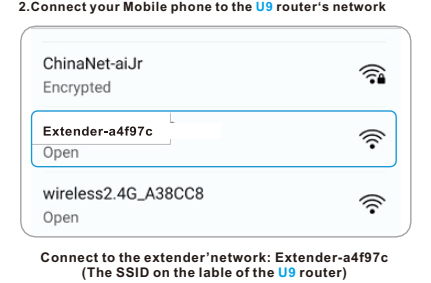


3. Login


1. Launch a web browser and type http://192.168.11.1 in the address field. (If the phone is connected to the repeater for the first time, The phone will automatically pop up the login page)
2. Use admin (all lowercase) for Password to log in.

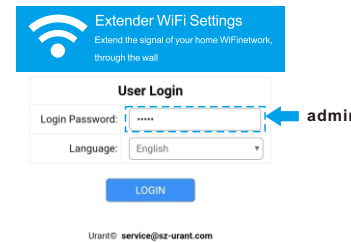


4. Mode selection

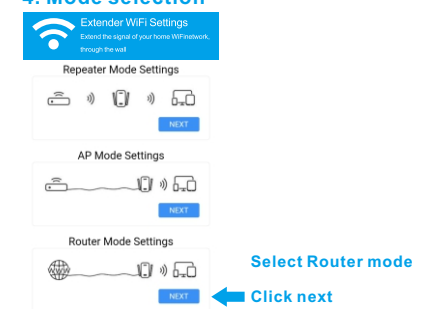


5. Set up Your Internet Connection
You can modify the settings according to the service information provided by your ISP.

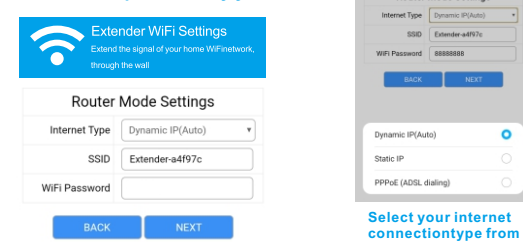


If you choose Dynamic IP, Dynamic IP users are usually equipped with a cable TV or fiber cable.

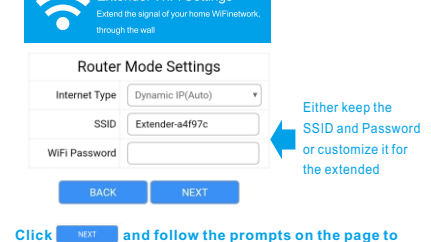

If you choose Static IP, enter the information provided by your ISP in the corresponding fields.

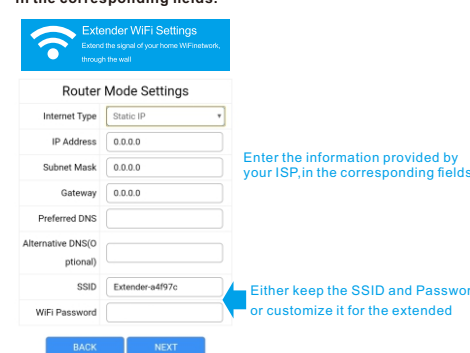

If you choose PPPoE, enter the username and password provided by your ISP. PPPoE users usually have DSL cable modems.

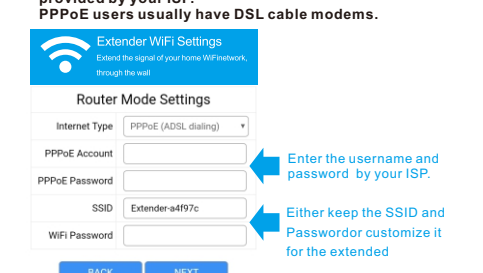

Click **NEXT** and follow the prompts on the page to complete the Router mode configuration

Enjoy! Connect to the Extended networks (default SSID and password) and enjoy internet, but may have different network name and password, if you have customized them during the configuration.

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- - Reorient or relocate the receiving antenna.
- - Increase the separation between the equipment and receiver.
- - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- - Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RF Exposure Statement

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance of 20cm the radiator your body. This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.