Product function

Power on: Long press the power button 3S until the indicator light is on Shutdown: Long press the power button, 3S, until the indicator light goes off LED Indications:

Slowing Red light:charged

Green light:fully charged

Flashing Green light:Bluetooth connection

Slowing Green light: automatic Feed paper

Low power: Flashing Red light

Out of paper or overheated:Red light

Questions:

Q: No connected mini A4 printer was found when the APP added the device?

A: Verify that the Bluetooth state is turned on;

Q: The printer cannot print anymore?

A: Confirm whether the Bluetooth of the phone is on and rule out the possibility of connecting to this printer;

B: Check if the thermal paper is used up;

C: Whether the print head is overheated, please wait for the print head to cool before trying to print;

D: Restart the printer, if still cannot solve, please press the reset key to reset;

Q: Why is the printed out of white paper without content?

A: This may be A problem caused by the printing paper is not installed correctly. Please try placing the opposite side of the printing paper;

Q: Is the power button a flash light?

A: The power is low, low power, please keep charging;

B: Check whether the thermal paper has been used up and replace the paper in time;

C: Check whether it is in the shell state;

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and

(2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarant ee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environm ent. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.