User Manual

Tips:	FCC statement:	A WARNING:
 Low Battery: A prompt sound will be heard. To Charge: 1. Insert the USB connector end of the included cable (see packing list) into the USB jack on the charger or USB port on the computer. 2. The indicator light will be red while charging. 3. When the headphone is fully charged, the indicator light will turn off from being red. Please unplug your charger from the power source. 4. Please use a qualified charger to recharge your headphone. If not, it may result in damage or even explosion. 5. Repeated charging and discharging of the headphone will lead to decreased battery life over time, which is normal for rechargeable batteries. 6. You must charge the Bluetooth Heaphone if it has not been used for more than 6 months. 	This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. NOTE This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the limits for such a such as the formations.	 Charge and operate only as indicated in this manual, as improper use may result in damage to the product or injury. To avoid risk of shock or injury, do not dismantle the device or insert any objects into the Heaphone. To avoid electronic interference and/or compatible conflicts, turn off the product in any facilities where posted notices instruct you to do so. Do not pull the Heaphone charging cable. Damage may result to the cable. Keep out of reach of children. This is not a toy. Avoid exposure to moisture, liquids, heat, flame and high voltage equipment. Retain these instructions as they contain important information. Do not drop, place heavy weight or allow heavy impact to the Heaphone. PCB of battery should not be Crushed and twisted. Battery body should not be Bended. Do not disassemble and Do not dispose of in fire.
	However, there is no guarantee that interference will not occur in a particular	• Do not use the product while driving or crossing the road.
USB Plug Micro USB Plug	installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the the following measures:	RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.
Technical Specifications:	Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.	FCC ID: 2A2H6-MU01036
• Model Number: MU01036 • Range: 33ft / 10 m • Battery Capacity: 200 mAh • Voltage: 3.7 V	 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. 	Distributed by 1616 Holdings, Inc. 701 Market Street, Suite 200 Philadelphia, PA 19106 Made in China CLASS 1 LED PRODUCT
Play Time: 4-5 hours Charge Time: 2-3 hours	WARNING: Changes or modifications to this unit not expressly	Keep All Relevant Information For Future Reference
 Charging Input:5V == 110 mA Frequency Response: 20Hz-20kHz Operating temperature range: 0-45 C 	approved by the party responsible for compliance could void the user's authority to operate the equipment.	
FAQ: 1) Why can't I start my Bluetooth headphone? Answer: Please ensure that the headphone is fully charged for your first use. 2) Why won't sound come out of the headphones? Answer: Check whether the playback device and the Bluetooth headphone are successfully established. If the audio device is not properly connected, please reconnect. Please also adjust your mobile phone or Bluetooth headphone volume to a suitable volume level. 3) Why can't I find this headphone in my bluetooth options? Answer: Make sure the Bluetooth is in "visible mode". If no pairing occurs, the Bluetooth function will automatically shut off. Please reopen Bluetooth to	m	WARNING: This product can expose you to chemicals including Bisphenol A(BPA),which is known to the State of California to cause birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.
	 Low Battery: A prompt sound will be heard. To Charge: 1. Insert the USB connector end of the included cable (see packing list) into the USB jack on the charger or USB port on the computer. 2. The indicator light will be red while charging. 3. When the headphone is fully charged, the indicator light will turn off from being red. Please unplug your charger from the power source. 4. Please use a qualified charger to recharge your headphone, If not, it may result in damage or even explosion. 5. Repeated charging and discharging of the headphone will lead to decreased battery life over time, which is normal for rechargeable batteries. 6. You must charge the Bluetooth Heaphone if it has not been used for more than 6 months. Technical Specifications: Model Number: MU01036 Range: 33ft / 10 m Battery Capacity: 200 mAh Voltage: 3. 7 V Play Time: 4-5 hours Charge Inne: 2-3 hours Charging Input:5V ==110 mA Frequency Response: 20Hz-20 kHz Operating temperature range: 0-45 C FAQ: 1) Why can't I start my Bluetooth headphone? Answer: Check whether the playback device and the Bluetooth headphone are successfully established. If the audio device is not properly connected, please encounct. Please also adjust your mobile phone or Bluetooth headphone evolume to a suitable volume level. 3) Why can't I find this headphone in my bluetooth options? Answer: Make sure the Bluetooth is in "visible mode". If no pairing occurs, the	 Low Battery: A prompt sound will be heard. Low Battery: A prompt sound will be heard. To Charge: 1. Insert the USB connector end of the included cable (see packing list) into the USB connector end of the included cable (see packing list) into the USB connector end of the included cable (see packing list) into the USB connector end of the included cable (see packing list) into the USB connector end of the included cable (see packing list) into the USB connector end of the included cable (see packing list) into the USB connector end of the included cable (see packing list) into the USB connector end of the included cable (see packing list) into the USB connector end of the included cable (see packing list) into the USB connector end content connection. The indicator light will be red while charging of the headphone will lead to decreased batteris. We must charge the Bluetooth Heaphone will lead to decreased batteris. You must charge the Bluetooth Heaphone will lead to decreased batteris. You must charge the Bluetooth Heaphone if it has not been used for more than 6 months. Technical Specifications: More USB Plag Technical Specifications: Charge Time: 4-5 hours Charge Time: 4-5 hours Charge Time: 2-3 hours Charge Time: 2-4 hours Charge Time: 2-4 hours Charge Time: 2