

MINISO

USER MANUAL
使用說明書

HARRY POTTER WIRELESS HEADSET
HARRY POTTER CASQUE AUDIO SANS FIL
سماعات لاسلكية هاري بوتر
HARRY POTTER AURICULARES DE
DIADEMA INALÁMBRICOS
哈利波特系列头戴蓝牙耳机

MODEL: P12

使用產品前請仔細閱讀本使用說明書，並請妥善保管。
PLEASE READ THIS MANUAL CAREFULLY BEFORE USING THE
PRODUCT AND KEEP IT PROPERLY

Product Parts

1. Next/Volume+

2. Play/Pause


3. Previous/Volume-
4. Mic

5. USB-C Charging Port

6. LED
7. 3.5mm Audio Port

8. TF Card Slot

9. Power Button

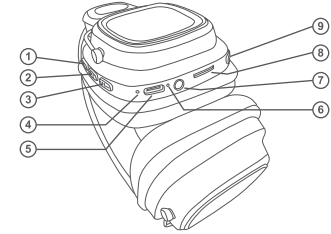

Accessories

Device*1 Charging Cable*1 User Manual*1

Product Parameters

Bluetooth	V5.4	Frequency Response	20Hz-20KHz
Pairing Name	MINISO-P12	Sensitivity	112±3dB

Function	Multimedia, phone calling	Charging Port	USB-C
Charging Input	5V $\Rightarrow$ 180mA	Transmission Distance	$\leq$ 10m
Battery Capacity	200mAh	Charging Time	1.5H
Music Playback Time	Around 5h (Volume 50%)	Calling Time	Around 10h
Impedance	32 Ω	Working ambient	0 ~ 40℃

Functions

Function	Instructions
Turn On	Press power button for around 3 seconds, blue light blinks for 2 seconds
Turn Off	Press power button for around 3 seconds, light turns off
Bluetooth	Turn on the earphones, search on the device you want to connect the earphones to for the pairing name of MINISO-P12 and choose to pair, blue light blinks
Low Battery Alarm	When the battery is lower than 3.3V, there will be a low battery alert every 60 seconds. When the battery is lower than 3.2V, the earphones turn off automatically, blue light blinks
Previous Track	Press volume- button for around 2 seconds to move to previous track, blue light blinks
Next Track	Press volume+ button for around 2 seconds to move to next track, blue light blinks
Volume-	Press volume- button to move to turn volume down, blue light blinks

Volume+	Press volume+ button to move to turn volume up, blue light blinks
Pause	Press play/pause button to pause, blue light blinks
Play	Press play/pause button to play, blue light blinks
Answer Call	Press play/pause button to answer the coming call, blue light blinks
End Call	Press play/pause button to end the call, blue light blinks
Reject Call	Press play/pause button for around 2 seconds to reject the call, blue light blinks
Call Back	Press play/pause button twice to call back the last number, blue light blinks
Automatic Turning Off	If the earphones are not being used for 5 minutes, it will automatically turn off, light turns off
Line In	Line In is supported when earphones powered off, plug 3.5mm audio jack to use
Mode Switch	Press power button to switch between TF card mode and Bluetooth mode
Charging	After plugging charging cable, the earphones turn off automatically, red light turns on when charging, blue light turns on when fully charged

Cautions

1. Reasonable control of the volume and time of usage is required to avoid hearing damage.
2. For your safety, do not use it in potentially hazardous condition.
3. Do not listen to music, call up or answer the phone while driving to avoid danger caused by distraction.
4. Keep it out of reach of children to avoid danger caused by improper use.

5. Do not throw to avoid damage caused by dropping.
6. Do not store or use it under -20℃ or above 45℃ to avoid shortening the lifespan of earphones and battery.
7. Do not modify, disassemble or repair the product.
8. Irreplaceable battery. It should be disposed of according to local rules & regulations or be recycled by professional institute. Do not throw away or toss into fire.
9. When not in use for a long time, charge the earphones once every 3 months to extend its lifespan.
10. Avoid contact with water and other liquids to prevent them from penetrating into the product.

Troubleshooting

1. Fail to pair the wireless earphones with your cellphone.
Solution: Check if the earphones are in pairing mode, and whether the phone BT function is on. Check the list on your phone, remove the earphones from the list, follow the instructions of user manual to pair the earphones with your phone again.
2. Cannot turn on the wireless earphones.
Solution: Check the battery to see if it is low.
3. Can the battery of the wireless earphones be replaced?
Answer: No. The lithium polymer battery in the earphones is irreplaceable.
4. The wireless earphones got disconnected with the phone within 10 meters.
Solution: BT is wireless so that it is very sensitive to objects between the earphones and the connected device. Check if there are any metal or other objects that may affect the connection within the effective distance.
5. Cannot hear audio playing when the earphones are connected to the computer or phone.
Solution: Check whether the computer's audio output is already connected to wireless device and whether the Bluetooth in the computer supports AZDP protocol. Make sure the volume is up on your phone or computer.
6. Can I operate the Apps of my phone through the earphones after connecting the wireless earphones to the phone?
Answer: Some apps may not support being operated through the earphones due to their settings.

FCC Warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.
Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

ISED Warning

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
(1) This device may not cause interference.
(2) This device must accept any interference, including interference that may cause undesired operation of the device.
This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.



MADE IN CHINA / FABRIQUE EN CHINE /
www.miniso.com صنع في الصين / HEGHO EN CHINA

