


# User Manual

## Flip TWS Earbuds

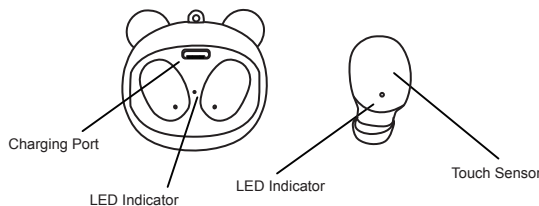

## Package Contents:

- 1(One) Pair of True Wireless Earbuds 1.07in. x 0.6in. x 0.81in. (2.73cm x 1.5cm x 2.05cm)
- 1(One) Charging Case 2.13in. x 2.09in. (5.4cm x 4.5cm x 5.3cm)
- 1(One) Typec Charging Cable 5.9in. (15cm)
- 1(One) Instruction Manual

## Key component:

- 1.Touch Sensor
- 2.LED Indicator
- 3.Charging Port

## How To Use:

- 1.Change the front design of the charging case by pressing down gently and swiping up/down to cycle through the different appearances.
- 2.The earbud(s) will automatically power on and pair to each other when you take off the earbuds from charging case.
- 3.The earbuds will power off if they don't connect to any device within 5 minutes. If the earbuds turn off. To turn the earbud(s) on again put the earbuds back into the charging case then take off from charging case or press touch sensor for 3s.
- 4.To pair your earbuds, turn on Bluetooth on your device and choose "FLIP TWS" on the list to connect. When the LED light turns off, they are paired successfully and you will hear a beep tone.
- 5.To answer a call, short press the earbud Touch sensor once.  
To reject a call, long press the the earbud Touch sensor for 3 seconds.
- 6.Short press the earbud Touch sensor to stop the music; press it again to resume playing.
- 7.Press L touch sensor twice to play the previous song.  
Press R touch sensor twice to play the next song.  
Press L touch sensor triple to decrease the volume.  
Press R touch sensor triple to increase the volume.
- 8.Long press the earbud Touch sensor for 5s until the red light flashes, then the Bluetooth device is turned off. The earbuds turn off automatically when the earbuds are away from the Bluetooth device for a duration of over 5 minutes.To turn on the earbuds, press the earbud Touch sensor for 5S until the blue light flashes.

## How to Charge

- 1.Charging your case:
  - Plug in the charging case using the USB Type-C cable included.
  - While the battery case is being charged, the case LED indicator will be flashing red.
  - When the case is fully charged, the light will change to solid red.
  - When the battery is low, there will be a beep tone.
- 2.Charging your earbuds:
  - Place the earbuds inside the charging case and the earbuds will automatically start charging.
  - A solid red light on the earbuds will indicate that the earbuds are charging. Once fully charged, a blue light will turn on for 1 minute and then turn off.
- 3.The earbuds and case can be charged simultaneously, but the earbuds will not charge if there is no power in the case. The case needs to have at least a minimum charge to charge the earbuds. You must charge the TWS if it has not been used for more than 3 months.



## Technical Specifications:

- Model Number: MU01046
- Range: 32ft / 10m
- Earbud Battery Capacity: 30mAh
- Battery capacity: 250mAh
- Play Time:2/3 Hours per Cycle/10-12 Hours Total (50% max volume)
- Charge Time:1-2 Hours
- Charging Input:5V = 200mA
- Frequency Response: 20Hz-20 kHz
- Operating Temperature range : 0-45 C

## FAQ:

- 1) Why can't I start my TWS earbuds?  
Answer: Please ensure that the earbuds is fully charged for your first use.
- 2) Why won't sound come out of the earbuds?  
Answer: Check whether the playback device and the TWS earbuds are successfully established. If the audio device is not properly connected, please reconnect. Please also adjust your mobile phone or volume to a suitable volume level.
- 3) Why can't I find this earbuds in my bluetooth options?  
Answer: Make sure the Bluetooth is in "visible mode". If no pairing occurs, the Bluetooth function will automatically shut off. Please reopen Bluetooth to "visible mode". If there is a program error, please reboot your phone, and if a program error is caused by your TWS earbuds, please restart the earbuds.

## FCC statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures :

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

**⚠ WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## ⚠ WARNING:

- Charge and operate only as indicated in this manual, as improper use may result in damage to the product or injury.
- To avoid risk of shock or injury, do not dismantle the device or insert any objects into the Heaphone.
- To avoid electronic interference and/or compatible conflicts, turn off the product in any facilities where posted notices instruct you to do so.
- Do not pull the Heaphone charging cable. Damage may result to the cable.
- Keep out of reach of children. This is not a toy.
- Avoid exposure to moisture, liquids, heat, flame and high voltage equipment.
- Retain these instructions as they contain important information.
- Do not short circuit the input terminals of the Heaphone.
- Do not drop, place heavy weight or allow heavy impact to the Heaphone.
- PCB of battery should not be crushed and twisted.
- Battery body should not be Bended.
- Do not disassemble and Do not dispose of in fire.
- Do not use the product while driving or crossing the road.

## RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

FCC ID:2A2H6MU01046

Distributed by 1616 Holdings, Inc.  
701 Market Street, Suite 200  
Philadelphia, PA 19106  
Made in China

Keep All Relevant Information For Future Reference



The Bluetooth® word mark and logos are owned by the Bluetooth® SIG.  
All other trademarks appearing herein are the property of their respective owners.  
\*Depends upon third party device compatibility.

**⚠ WARNING:** This product can expose you to chemicals including Bisphenol A (BPA), which is known to the State of California to cause birth defects or other reproductive harm.  
For more information, go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).