

MCMP1021 User Manual

*Sorry to the changes of our products parameters but without notice. 89-0000034

1. Getting started 1.1 Basic operations 1.1.1 Power on/ off and sleep


1. Connect the device to the TV with HD cable, connect device to the power adaptor, connect mouse, air mouse or other input devices with USB port
2. After the device and cables connected, power LED turns into blue
3. After disconnect the device from the power adaptor, Power LED turns off.
4. Under power on mode, press remote control's power button, device is entering into sleep mode, Power LED turns into red
5. Under sleep mode, device will be wake when you press remote control's power button, power LED turns from red to blue

1.1.2 Open applications

Use remote control's arrow keys to choose the wanted program, click OK button to open the selected program

*Accessories and appearance are subject to change without prior notice. 1

1.1.3 Boot into the wizard page Language selection

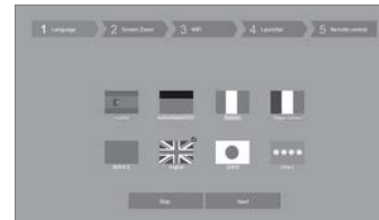

1. Language -- Screen Zoom -- WiFi -- Launcher -- Remote control
2. Complete the above steps to confirm junior into the interface

*This function only operated in the condition of Mouse mode 2

1.1.4 Switch in the applications Click "My Apps" to view recently used programs, click program icon to switch application arbitrarily




1.1.5 Close Applications

Click the right key of mouse to back up the last step procedure to close the application directly.

*This function only operated in the condition of Mouse mode 3

1.1.6 My Apps

Move to "My Apps", Press OK to enter in.
You can see icons referring to different function on the picture.

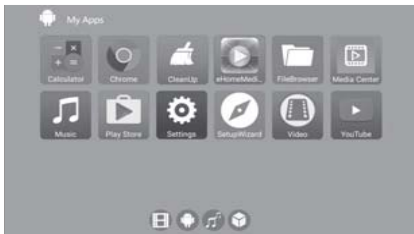


Warm reminder:

* Pls find the calculator program and input "r318", then it will shows the installation of KODI & other third-party applications and uninstall KODI application.

4

1.1.7 WIFI Function

1. Home Screen -- SETTINGS -- Network -- Select "Wi-Fi" to open WIFI function
2. Choose Hotspot -- Input Password -- Connect to the network

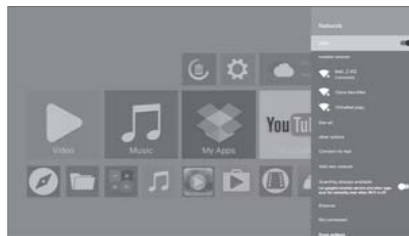

1.1.8 Ethernet Function

1. Home Screen -- SETTINGS -- Network -- Select "Ethernet" to open Ethernet function
2. Insert network cable, network will be connected automatically

5

1.1.9 File Browser

Move to "File browser", Press OK to enter into the device list.
When inserting with USB device or SD/SDHC/MMC cards, the sign "Device is mounting" will be shown on the screen.

Here you can cut, copy, paste and move the files and folder between the local disk and external storage card.



Read TF card

Insert TF card into the device in the status of power on, when icon appears in top left corner of the desktop, open "File Browser", the identified External Storage Card will appear under "Local Disk", TF card's operation is available now.

6

2.1 Troubles shooting Warning

Under no circumstances should you try to repair the TV BOX by yourself, as this will invalidate the warranty. Do not open the TV BOX as there is a risk of electric shock. If a fault occurs, firstly check with points listed below before taking the TV BOX for repair. If you are unable to remedy a problem by following hints, contact your dealer for help.

Problem	Solution
No power	• Check the power adaptor is properly connected to the power and the TV BOX. • Check the power on the remote control is turn on the power.
No picture	• Check the HDMI cable or AV cable. • Check the TV is switched on.
No sound or distorted sound	• Check the speaker. • Check the speakers are connected correctly.
No audio or digital output	• Check the optical connection. • Check your audio is set correctly.
The IR eye does not respond to the Remote Control	• Check the distance to the TV BOX. • Check the batteries in the remote control. • Operations may not be permitted after to the user manual.
Display does not respond to some operating commands (stop, blank)	• Check the system locked, reset with power adaptor to reset.
No sound during movies	• The audio codec may not be supported by the TV BOX. You can change to the supported audio on playing menu. • Check the volume.
The contents of the USB flash drive cannot be read	• The USB flash drive format is not compatible with the box. • If one of the USB can not be read, please turn off the TV BOX for 30 seconds and reset the TV BOX.
Slow operation of the USB	• Use the size of high speed USB flash drive (less than 1GB) to read and write on the TV BOX.
No sound with HDMI connection	• Check the connection between the TV and the HDMI jack of box. • Check the TV system menu. • Check the volume.
The TV doesn't blink and the power LED is shining	• Turn off power to TV BOX over 30 seconds when the power. • If under HDMI status, check if HDMI connection is correct or change another HDMI cable, set the output resolution of the TV BOX into 720p.

7

Android TV User Manual

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- o Reorient or relocate the receiving antenna.
- o Increase the separation between the equipment and receiver.
- o Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- o Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body. Warning: For 5.2G band indoor use only.

Android TV User Manual

ISED Statement

English: This device complies with Industry Canada license exempt RSS standard(s). Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device. The digital apparatus complies with Canadian CAN ICES/3(B)/NMB/3(B).

Radiation Exposure Statement

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

French: Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'empêcher le fonctionnement. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Déclaration d'exposition aux radiations

Cet équipement est conforme Canada limites d'exposition aux radiations dans un environnement non contrôlé. Cet équipement doit être installé et utilisé à distance minimum de 20cm entre le radiateur et votre corps.

Avvertimento : Pour une utilisation en intérieur sur la bande 5.2G uniquement.