

LATCH

WIRELESS 5000 mAh **POWER**

Good call on picking up the Outdoor Tech® Latch Wireless 5K Power Bank. Your experience of the universe will soon be enhanced powerfully. This manual exists to help make sure that you use them correctly, so you're definitely going to want to relax for a hot second and look through this.

Kisses,



WHAT'S INSIDE



ANATOMY





CHARGING UP THE POWER




The (white) Power Indicator Lights will flash consecutively when charging. They will stop flashing and all the white lights will turn solid white once fully charged. Please remove the USB-C charge cord after Power Bank is fully charged. (2-3 Hours for a full charge)

■ WIRELESS CHARGING Red Light Will Blink Power Button

- Press the Power Button, the Power Level Indicator Lights will turn on and the Red Light will be Solid.
- To start wireless charging simple place your smartphone on top of the Wireless Power Bank.
- place the case in the center of the charging circle on top of the Latch to start charging. The Red Light on the Latch will start blinking when charging is active.

■ USB-C CHARGE CABLE CHARGING

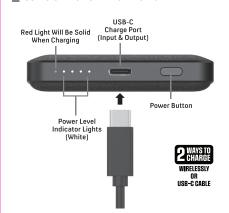

Hi

USING THE 5000 MAH POWER BANK TO CHARGE

• Press the Power Button, the Power Level Indicator Lights will turn on indicating how much of a charge is in the Latch. The Red Light will be solid



PASS THROUGH CHARGING



With pass through charging technology the Latch Wireless Power Bank has the ability to charge itself and charge devices at the same time. It's very helpful if you always want your power bank to be at full capacity. This way, when you do need to go mobile, your power bank and device are at full capacity.

Plug the Latch into a power source to charge it and now when you use the wireless charging pad it will also charge your device.

It is intended for desktop use.

■ CARE & MAINTENANCE



- For best performance, fully charge the Latch before charging other devices.
- Do not try to disassemble the Latch
- Do not scratch the surface with sharp things.
- It is normal for the battery to heat up during its charge. The temperature should be below 113 Fahrenheit & does not affect the Latch performance.
- All products have passed the strict quality inspection, Do not use the battery if it gives off an odor, generates heat, becomes deformed, abrasion, damaged or appears abnormal in any way.
- Do not access the input/output simultaneously. It may affect the product's performance and not charge properly.
- Keep the Latch away from direct sunlight or hot places. High temperatures will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Use a soft, dry cloth to wipe the surface. Do not use intensive chemical products or detergent to clean the product.
- Charge the product at least once every three months, to prevent the batteries from drying out.

SPECS



- Battery Capacity: 5000mAh/3.7V/18.5Wh
- USB-C Input: 5V/3A, 9V/2A
- USB-C Output: 5V/2.4A
- Wireless Charge Output: 5W/7.5W
- Dimensions: 4.4in x 2.6in x 0.4in
- Weight: 4.7 oz, 135g, 0.3 lbs
- Charge Time: 2-3 hours

DON'T BE SO ANTISOCIAL







Twitter & Instagram: @outdoortecl

Questions, comments, complaints, secret desires, or just to say what's up: email info@outdo

K bye.

FCC Compliance Statements

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- -- Reorient or relocate the receiving antenna
- -- Increase the separation between the equipment and receiver.
- -- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -- Consult the dealer or an experienced radio/TV technician Caution: Changes or modifications not expressly approved

by the party responsible for compliance could void the user's authority to operate the equipment This equipment complies with FCC radiation exposure limits

set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your



www.outdoortech.com

品名: 说明书 美国-Outdoor Tech-P180P V1.0

料号: 43A412201007

尺寸: 63.5x108mm

材质: 80g书纸 双面单黑印刷 风琴折