


## **ROBOEAR**

HIGH-SENSITIVITY,
REMOTE-LISTENING ROBOT

Item # 68403 Ages 6+
Requires: 2 replaceable LR44 (1.5V) button cell batteries (included) and 3 AAA (1.5V) batteries (not included)

Remove RoboEar's backpack by pulling gently on the handle on his back. It should pop off easily.

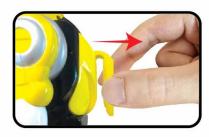

Have an adult open the battery door on the back of RoboEar with a Phillips head screwdriver (not included) and insert 3 "AAA" batteries (not included). Then replace the battery door and securely fasten with screw.




Power up the backpack by sliding the button on the back to the ON position.



Connect the included wired earbud to the backpack and place the earbud in your ear.



Then power up RoboEar by sliding the button on his back to the ON position. RoboEar will emit a power-up sound. Now set him in the area you want to monitor. You can get reception up to 100 feet away and in other rooms!

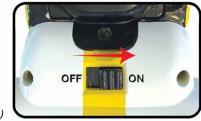

(Thick walls and certain obstacles can affect transmission distances.)

To reset RoboEar just turn him off and on again (see step 5).

To preserve battery life when RoboEar is off-duty, slide the button on RoboEar's back AND the button on his backpack both to the OFF position.

