 


# SPYBOTS™

## CYBERNETIC SECURITY ROBOTS

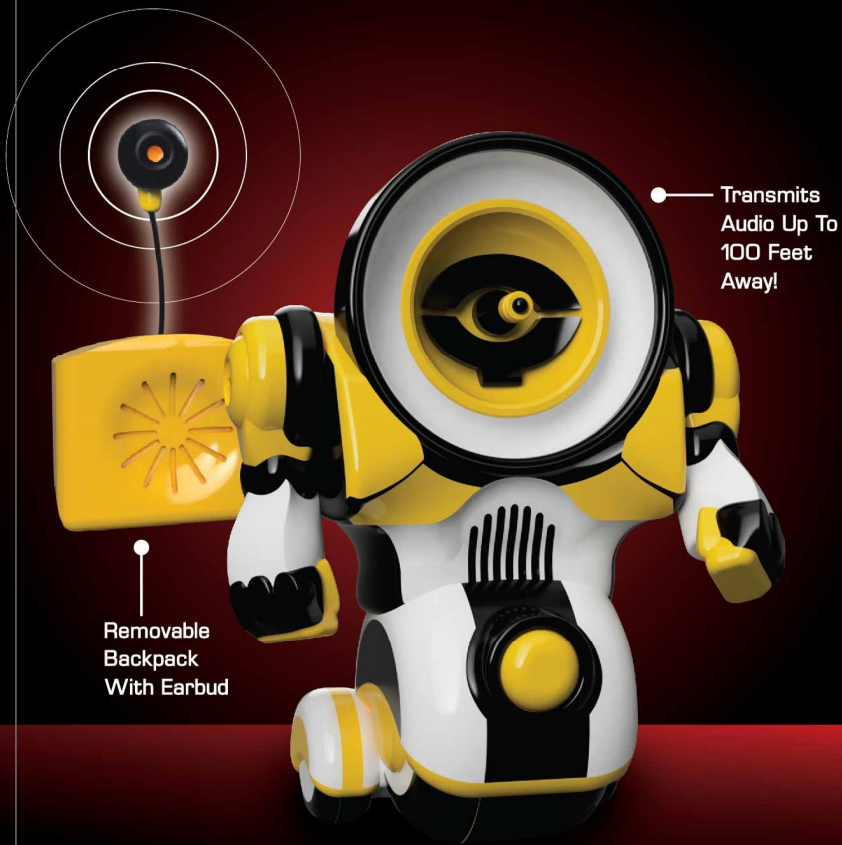

 
# ROBOEAR™

## HIGH-SENSITIVITY, REMOTE-LISTENING ROBOT

Item # 68403 Ages 6+

Requires: 2 replaceable LR44 (1.5V) button cell batteries (included)  
and 3 AAA (1.5V) batteries (not included)

**1** Remove RoboEar's backpack by pulling gently on the handle on his back. It should pop off easily.

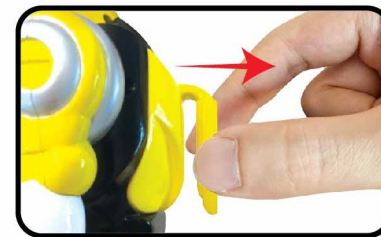

**2** Have an adult open the battery door on the back of RoboEar with a Phillips head screwdriver (not included) and insert 3 "AAA" batteries (not included). Then replace the battery door and securely fasten with screw.



**3** Power up the backpack by sliding the button on the back to the ON position.

 


**4** Connect the included wired earbud to the backpack and place the earbud in your ear.




**5** Then power up RoboEar by sliding the button on his back to the ON position. RoboEar will emit a power-up sound. Now set him in the area you want to monitor. You can get reception up to 100 feet away and in other rooms!

*(Thick walls and certain obstacles can affect transmission distances.)*

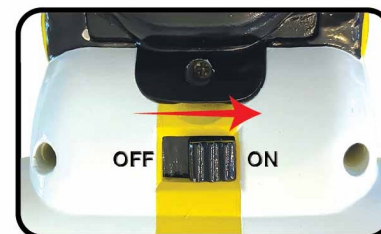


**6** To reset RoboEar just turn him off and on again (see step 5). To preserve battery life when RoboEar is off-duty, slide the button on RoboEar's back AND the button on his backpack both to the OFF position.

# BATTERY INFORMATION

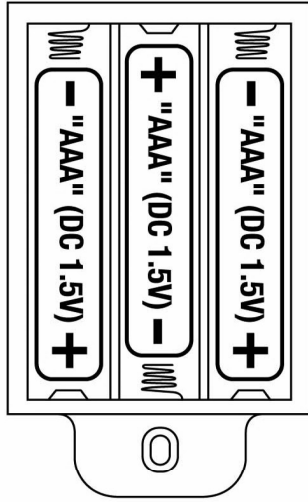 

 Install 3 AAA batteries into Spybot as shown

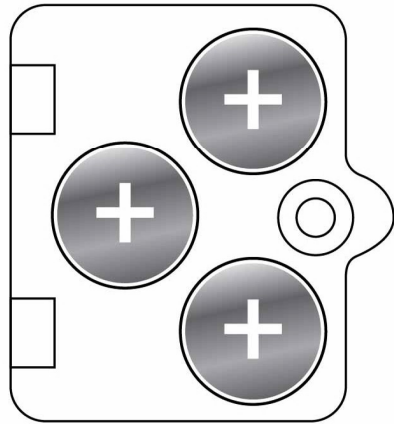

Install 3 button cell batteries into backpack as shown. Position them with the "+" facing up.

## BATTERY SAFETY

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the Spybot before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Different types of batteries or new and used batteries are not to be mixed.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (+ and -).
- Exhausted batteries are to be removed from the Spybot.
- The supply terminals are not to be short-circuited.
- Keep instruction sheet for reference since it contains important information.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.

**⚠ WARNING:** This product contains Button Batteries. A swallowed Button Cell Battery can cause internal chemical burns in as little as two hours and lead to death. Dispose of used batteries immediately. Keep new and used batteries away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

**⚠ CAUTION:** Long cord/strap. Strangulation hazard. Keep away from small children and animals.

## FCC

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. CAUTION: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or experienced radio/TV technician for help.

Dear Customer,  
NSI International, Inc. is the manufacturer of this product. We hope you enjoy your Spybots product. If you find that we have made an error or if something is missing or damaged, let us know so that we can correct the problem for you.

Please include the following:

- Name of item
- Purchase price (please include sales receipt)
- Place of purchase
- Date of purchase
- Model number
- Brief description of the problem

Send all correspondence to:  
email: [custserv@nsi-int.com](mailto:custserv@nsi-int.com)

NSI International Inc.,  
235 W 23rd Street, 4th Floor, New York, NY 10011  
Attn: Quality Control Department  
Telephone: 888-425-9113