

FRONT

MVMT

©2022 Argento SC®, All Rights Reserved. MVMT and MVMT logo are registered trademarks of Argento SC®, Apple®, the Apple logo, and iPhone are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google Inc. Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Argento SC is under license. Other trademarks and registered trademarks are the property of their respective owners.

WARNING: The artwork and design of this package are protected by United States Copyright law and may not be reproduced, distributed, displayed, published, or used for any purpose without prior written permission. You may not alter or remove any trademark or copyright notice from this package.

⚠WARNING: This product can expose you to chemicals including Di (2-ethylhexyl) phthalate, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

FCC ID: 2A20A-AGSKARA

FCC Caution:
Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment complies with FCC radiation exposure limits set forth for uncontrolled environment .
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

IMPORTANT NOTE:
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Distributed by
Argento SC,
New York, NY 10018

Designed in USA,
Made in China

www.argentosc.com
support@argentosc.com

✓
RoHS

FC

WIRELESS

MVMT

Karaoke

MICROPHONE & SPEAKER

WITH MINI USB DISCO BALL

Because of continuous improvements, the images and the specs on the packaging may differ slightly from the actual product.

BACK

CONTROL PANEL

PREV 3

SCAN 4

VOL + 5

NEXT 6

REC 7

VOL - 8

MIC VOL 1

REMIX 2

INPUTS

12 TF

DC5V 10

9 USB

11

13 ON/OFF

1 Mic volume
Increase/Decrease slider

2 Reverb volume
Increase/Decrease slider

3 Previous song
*Under selfie mode, press it to enable selfie function (only for ISO system mobile phone)

4 Play/Pause
Long press: Automatic search

5 Volume increase

6 Next song

7 *With use of TF Mode
Replay/Record

8 Volume decrease

9 USB Slot
*Attach mini disco ball

10 DC5V / AUX / ANT
DC5V: Power slot
AUX: Audio line in

11 Headset connection

12 TF Power slot

13 Power buton
Long press: ON/OFF

WIRELESS KARAOKE

1. Make sure the unit's battery is charged. Hold Power buton to start the product.

2. Wireless connection: Enable Bluetooth from your mobile device, locate the microphone's pairing name: MVMT_SP3583 and connect to the microphone. Prompt tone will notify you of a successful connection.

3. Play your song selection from your device. Adjust sound: Using the Mic Volume / Reverb Volume slider to adjust the volumes to suitable level.

4. Start singing Karaoke!

RECORDING WITH MOBILE PHONE

1. Connect the recording wire: Insert the MICRO USB plug of the recording wire into the MLCEI interface of the karaoke mic and 3.0mm interface into the earphone jack of the mobile phone.

2. Open the Karaoke software in the mobile phone (or other recording Apps), select your favorite song, record the song using the method mentioned above.

3. Test and save the song; Operate according to the instructions of Karaoke software.

SELFIE FUCTION

1. Press the M/POWER button to switch from wireless mode to selfie mode.

2. Enable wireless from your mobile device and search "Shutter", click connect.

3. Open the photograph interface of your mobile device, press M/V+ or M/V- button to take photos.

Note: 4.2.2 or higher version for Android system, 6.0 or higher version for iOS system, It does NOT support other versions temporarily. It doesn't support the mobile phone which has the independent and physical photograph button.

TECHNICAL PARAMETERS

OUTPUT POWER	3W
FREQUENCY RANGE	2402 - 2480MHz
SPEAKER SENSITIVITY	50 dB
REVERBERATION MODE	SOUND EFFECT REVERBERATION
POWER SUPPLY	BUILT-IN Li-Battery 858 800mAh
BATTERY CAPACITY	800 mAh
CHARGING TIME	2 HOURS

*Disco ball should turn on automatically when Microphone is ON and is connected to USB Slot