


## FOLDING AND TRANSPORTATION

Once folded hold the electric scooter by the bar to transport it as indicated in the figure:

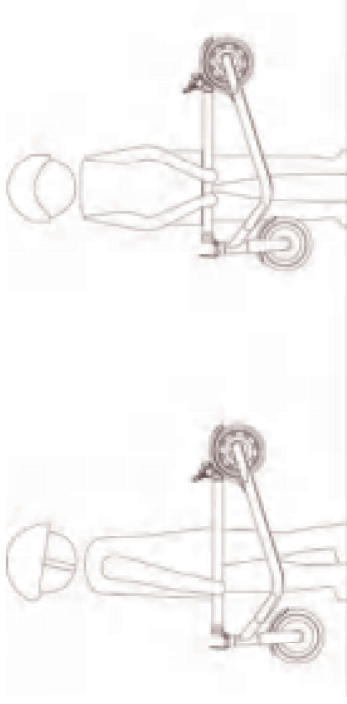

### Warnings: failure to follow these instructions could lead to serious injury.

- DO NOT ride the electric scooter in the rain.
- DO NOT get wet.  
Watch your head when passing through doorways.  
Keep your speed between 3.1–6.2 mph (5–10 km/h) when you ride through speed bumps, elevator door stills, bumpy roads or other uneven surfaces. Slightly bend your knee to better adjust mentioned surfaces.
- DO NOT keep your feet on the rear fender.
- DO NOT press the throttle when walking with the electric scooter.  
Avoid contacting obstacles with the tire/wheel.
- DO NOT carry heavy objects on the handlebar.
- DO NOT ride the electric scooter with only one foot.
- DO NOT ride on public roads, motorways, or highways.
- DO NOT rotate the handle violently while driving at high speed.
- DO NOT ride up and down stairs or jump over obstacles.
- DO NOT take your hands off the handlebar while riding. Do not ride with one hand only.

- Do NOT ride through puddles or any other (water) obstacles. In such a case please lower your speed and bypass the obstacle.
- DO NOT carry any passengers. The electric scooter is for one rider only
- Do not carry a child.
- Do not ride when pregnant.
- DO NOT use mobile phone or wear earphones when operating the electric scooter.
- DO NOT touch the hub motor after riding because it can get hot.
- Always keep both hands on the handlebar or you risk serious injury due to loss of balance and falls.
- Only for use in dry weather
- We do not recommend the use on public roads
- Never turn violently when driving fast
- Do not start or stop suddenly
- Make sure the speed of the electric scooter is safe for you and others and be ready to stop at any time while it is running
- When driving the electric scooter, please stay at a distance from others to avoid collisions
- When you turn you must use the center of gravity of your body; the violent change in the center of gravity can cause damage
- Routinely check the bearings for moisture and dirt. Dry and clean the bearings. If necessary, grease the bearings after cleaning. Only use suitable lubricants for this purpose. Also check the steering position to ensure this product is safe.
- No modifications other than to the manufacturer's instructions shall be made
- When self-locking nuts and other self-locking fixings can lose their effectiveness
- Avoid driving on steep slopes

## VIII. CLEANING AND MAINTENANCE

This electric scooter can be used as a means of transport and as such requires maintenance of all its components, which suffer wear and tear due to the use of the same and is not covered by the warranty.

### **CLEANING**

Make sure the electric scooter is powered OFF, the charge cable is unplugged, and the rubber cap on the charge port is tightly sealed before cleaning; otherwise you may damage the electronic components. Always disconnect the product from the charger first, cover the charging waterproof plug, turn off the power of the product, and avoid fluid contact with the battery, motor and other electronic parts during cleaning to avoid unforeseen hazard. Do not use a high pressure water jet to clean the product or soak it in water.

To clean the electric scooter, use a damp cloth. If you need to scrape dirt, use a soft brush and then a damp cloth.

Be sure to cover the charging port to avoid problems with the electronic components.

Do not use alcohol, gasoline, kerosene or other volatile or corrosive chemical components. This can damage both the appearance and the internal structure of the electric scooter. Also, do not use a pressure water gun or running water.

### **CONSERVATION**

Store the electric scooter in a cool, dry environment when not in use. Avoid leaving it outside, since it is not manufactured for use in wet areas, near corrosive agents such as seawater, ports, etc. It is also not recommended to expose it to high temperatures caused by direct sunlight for a long time.

## IX. BATTERY HANDLING AND PROHIBITED ACTIONS

Do not use other models or brands of batteries, use only original battery.

Do not place the battery in an environment with high temperatures higher than 50°C or lower than -20°C (for example, do not place the electric scooter inside a car trunk in summer), and do not put the battery in places near the fire. Otherwise, it may cause battery failure, overheating and even the risk of fire.

Avoid completely discharging the batteries, it is better to charge them while there is still power in them. This will prolong the life of the battery.

Also if you drive the electric scooter in very cold or warm areas, you can decrease the time of use of the batteries. It is not a failure of the batteries, but it is their normal behavior.

When not in use for more than 30 days, fully charge and store in a cool, dry place and fully charge the battery every 60 days. Failure to follow these steps could damage the battery, and this damage is not covered by the warranty.

It is forbidden to disassemble the battery compartment. Only its manipulation in Official Technical Services or adhered Workshops is allowed.

Use only the original charger to charge, otherwise there is a risk of damage or fire.

Inadequate disposal of used batteries can cause serious environmental contamination. Observe local regulations when disposing of this battery pack.

After each use, recharge the battery, this will lengthen the life of the battery.



Battery cell contains flammable and hazard substances. Mishandling can cause fire, smoke, explosion and severe personal injury or property loss. Always read and comply the following prohibited action, equip proper protective gear before perform any battery related operation.