

Keep the battery away from infant and children to avoid any accidents. If younger children use the battery, their guardians should explain the proper handling method and precaution before using, and always ensure the integrity of the battery.

Use only dedicated charger and charge the battery only in the dedicated way. Don't charge the battery by an electric outlet directly or an automobile cigarette lighter charger. Don't charge battery unattended.

- Don't charge the battery reversely.
- Don't leave the battery near the fire or a heated source and don't throw the battery into fire.
- Don't charge or use the battery in a car or similar place where inside of temperature may be over 50°C.
- Don't immerse, throw, and wet the battery in water / seawater etc.
- Don't short circuit or connect (+) positive and (-) negative terminals with metallic object. Don't store the battery in a pocket or a bag together with metallic objects such as keys, necklaces, hairpins, coins, or screws.
- Don't pierce the battery with a sharp object such as a needle, screw drivers.
- Don't heat partial area of the battery with heated objects such as soldering iron.
- Don't hit with heavy objects such as a hammer, weight. Don't step on the battery and throw or drop the battery to avoid mechanical shock. Don't use seriously deformed battery.
- Don't disassemble the battery or modify the battery design including electric circuit.
- Don't solder on the battery directly and don't use or assemble old and new batteries together.
- Don't put the battery into a microwave oven, dryer, or high-pressure container.
- Don't use or assemble the battery with other makers' batteries, different types and/or models of batteries such as dry batteries, nickel-metal hydrogen batteries, or nickel-cadmium batteries.

Keep away from fire immediately when leakage or foul odors are detected. If liquid leaks onto your skin or clothes, wash well with fresh water immediately. If liquid leaking from the battery gets into your eyes, don't rub your eyes and wash them with clean water and go to see a doctor immediately. If the terminals of the battery become dirty, wipe with a dry cloth before using the battery.

Cover terminals with proper insulating tape before disposal.

Before using /installing /removing the battery or using the charger, always read the user's manual and comply the precaution of the handling.

Replace the battery when using time of battery becomes much shorter than usual.

If the battery is needed to be stored for a long period, battery should be removed from the application and stored in a place where humidity and temperature are low.

While the battery is charged, used and stored, keep it away from object materials with static electric.

Cannot use non-rechargeable battery as replacement.

The battery must be removed from the appliance before it is scrapped.

The appliance must be disconnected from the supply mains when removing the battery.

The battery is to be disposed of safely.

Do not use the battery in the case of static electricity generation (more than 100V), the battery protection circuit will be damaged.

Do not remove the battery. Removing the battery is complicated and can alter the operation of the machine. You must contact the authorized service center only to operate the battery.

Do not store or charge the battery at temperatures outside the stated limits (see in this manual). Do not puncture the battery. Refer to your local laws and regulations regarding battery recycling and/or disposal.

A well maintained battery can perform well even after many miles of riding. Charge the battery after each ride and avoid draining the battery completely.



WARNING!

Keep away from fire immediately when leakage or foul odors are detected. If liquid leaks onto your skin or clothes, wash well with fresh water immediately. If liquid leaking from the battery gets into your eyes, don't rub your eyes and wash them with clean water and go to see a doctor immediately. If the terminals of the battery become dirty, wipe with a dry cloth before using the battery.

Cover terminals with proper insulating tape before disposal.

Before using /installing/ removing the battery or using the charger, always read the user's manual and comply the precaution of the handling.

Replace the battery when using time of battery becomes much shorter than usual.

If the battery is needed to be stored for a long period, battery should be removed from the application and stored in a place where humidity and temperature are low.

While the battery is charged, used and stored, keep it away from object materials with static electric.

Cannot use non-rechargeable battery as replacement.

The battery must be removed from the appliance before it is scrapped.

The appliance must be disconnected from the supply mains when removing the battery.

The battery is to be disposed of safely.

Do not attempt to disassemble the battery. Do not touch battery contacts.

Do not dismantle or puncture the casing.

Keep the battery contacts away from metal objects to prevent short circuit.

Risk of fire and electric shock. Do not charge or use your battery if it is damaged or see trace of water.

In case of accident or breakdown: please contact an authorized repairer in your country.

User must contact an authorized or a specialized customer service.

X. Charging/ Discharge and store the battery



Warning: always comply following message.

Use only original charger, improper use can cause personal injury and property lost. The warranty does not bear any liability caused by the use of non-original charger.

Do not charge when near any fluid /fire source, always avoid flammable substance. Do not leave the device unattended while charging.

Don't charge if the charge port or charge cable is wet.

Don't charge or use your battery if it is damaged or see trace of water.

The charging interface is provided with special slot. Do not force the connector to be inserted, which can cause damage to the device.

The charger indicator is red when the battery is charging. The indicator is green, when charging completed.

Remove the charger when charger indicator is green. Overcharge or over discharge will cause irreversible damage to the battery or property loss. If the charger indicator turned green immediately while charging after riding, please disconnect the charger and allows the battery to cool down before recharge. This is the normal phenomenon of intelligent protection due to the high internal temperature of the battery. Charging can begin after the battery cools down.

Stop charging and disconnect the charger, if the battery is not fully charged after the following recommended period of time. Contact customer service for further information.

The charging port must be covered by attached rubber cap after each charging.

Always take extra care while handling the battery.