

User Manual

MINI Projector



SAFETY INFORMATION

1. Read Instructions - All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the appliances and in the operating instructions should be adhered to.
4. Water and Moisture - Do not use the apparatus near water (e.g. bath tub, sink, swimming pool) or in wet places or tropical climates. Do not place objects filled with liquids, such as vases, on top of the apparatus. Do not expose the apparatus to dripping or splashing.
5. Setup - The apparatus should only be placed on a stable, flat surface. Do not let the apparatus fall down or expose it to shock.
6. Wall or Ceiling Mounting - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
7. Ventilation - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings. Ensure a minimum distance of 5 cm around the apparatus for sufficient ventilation. Ensure that the ventilation is not impeded by covering the ventilation openings with items such as newspapers, table-cloths, curtains, etc.
8. Heat - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
9. Power Sources - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
10. Cables and Plugs - The mains plug shall remain readily operable. All cables should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
11. Cleaning - The appliance should be cleaned only as recommended by the manufacturer. Clean by wiping with a dry and clean cloth. Do not use chemical cleaners or detergents. Always pull the mains plug before cleaning the unit.
12. Non-use Periods - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

13. Object and Liquid Entry - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.

14. Damage Requiring Service - The appliance should be serviced by qualified service personnel when:

- a) The power-supply cord or the plug has been damaged;
- b) Objects have fallen, or liquid has been spilled into the appliance;
- c) The appliance has been exposed to rain;
- d) The appliance does not appear to operate normally or exhibits a marked change in performance;
- e) The appliance has been dropped, or the enclosure damaged.

15. Servicing - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

16. Open Fire - Keep the apparatus away from open fires. Do not place naked flame sources, such as lighted candles on the apparatus.

 
17. Thunderstorms - During a thunderstorm the mains plug should be unplugged.

18. Safety Check - After servicing the technician should conduct a safety check in order to ensure that the apparatus is working properly and safely.

19. Batteries - Always place batteries in the correct polarization into electrical components. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. Do not mix old and new batteries. Take attention to the environmental aspects of battery disposal. Batteries shall not be exposed to excessive heat such as sunshine, fire or the like. Remove batteries before disposing of the product.

20. Volume Levels - To prevent possible hearing damage, do not listen at high volume levels for long periods.

21. Headphones (if applicable) - Excessive sound pressure from earphones and headphones can cause hearing loss

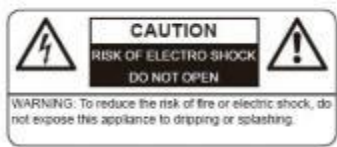

WARNING: To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.



The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product* s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



Disposal of Used Electrical & Elec tronic Equipment

The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling

of electrical & electronic equipments waste. By ensuring the correct disposal of this product, you will help prevent potential hazards to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product

NOTES ABOUT THIS INSTRUCTION MANUAL

1. This instruction manual is published by the manufacturer without any warranty. Corrections and changes of this instruction manual for the removal of typographic mistakes and editorial inaccuracies as well as due to (technical) improvements (changes) of the devices can be done by the manufacturer at any time without announcement. Changes of this kind are considered in future versions of this user manual. All rights reserved.
2. AU figures are only for illustration and do not always show the exact representation of the product. This unit is not intended for use by persons (including children) with reduced physical, sensory, or mental capacities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
3. Children should be supervised to ensure that they do not play with the unit.

FURTHER NOTES ON THE DEVICE

Setting a safe volume level

1. If you continually listen to loud music, your hearing gradually adapts to it and gives you the impression that the volume is lower.
2. What seems normal to you can be already for long time too loud and unhealthy
3. To protect yourself from this, set the volume to a low level.
4. Increase the volume slowly.
5. Damage to your hearing can be extensive and cannot be reversed.
6. If you notice a hearing problem, please consult a doctor.

Condensation

Condensation may occur when moving the device from a cold to a warm environment. If there is moisture inside the player, it may not operate properly. Don't turn on the device and wait about one hour for the moisture to evaporate.

Saving energy

If the unit is not used for a long period of time, it should be unplugged from the AC socket.

 
If there is no audio signal or no device connected while in AUX or Bluetooth® mode for approximately 15 minutes, the unit will automatically switch into standby mode.

Unpacking


Take out carefully the unit from the packing. Please keep the packing for further use. Carefully remove possible protection cardboards and slipcovers.

Location of Controls

Top View

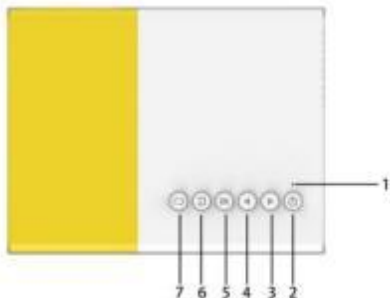

Rear View

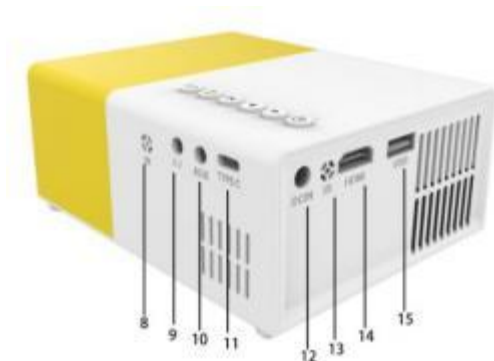 

1. Indicator light
2. Power ON/OFF
3. Right button
4. Left button
5. OK button
6. Input source
7. Return button

8. Infrared receiver head
9. AV (CVBS)
10. Earphone jack
11. Type-C
12. DC
13. Infrared receiver head
14. HDMI
15. USB

Remote Control



Power Supply

Power Adaptor



1. This product can be plugged into the power port on the back of the projector using a DC 20V/2.3A power adapter, and the other end into a wall socket. Make sure the power output of the wall outlet matches the power required by the adapter.

2. Type-c interface: supports PD, QC, AFC fast charging protocol chargers/charging treasures with output of 20V/3A or more, and powers the projector (Note: It is recommended that the power interface and the type-c interface do not supply power to the projector at the same time!)


3. The Type-c interface of this product supports mobile power supply 20V/3A and can be used outdoors. If the user does not have a DC 20V/2.3A adapter, as long as it is a mobile phone power adapter that supports the fast charging protocol supported in point 2 above, choose a matching one The Type-c data cable is connected to the Type-c interface of the projector, and it can be used normally. (Note: If you use A port to TYPE-C data cable or C port to TYPE-C data cable, you need the corresponding power interface.)


Note: If not using the unit for a longer period of time, unplug the adaptor from the wall outlet and from the unit.

Basic Functions

1. Power the unit as described above.
2. The unit is now in standby mode.
3. To switch the unit on, press the button  once. The LED light will turn to Green. The unit will switch on to the mode last selected.
4. To switch the unit off into standby mode, press button .


Volume Control

To increase the volume, press the Volume Up  button.

To decrease the volume, press the Volume Down  button.

 
Multi media connection



1. Press button to choose the different multi media by selecting different input source.
2. Connection AV products, use 3 in 1 AV cable to connect to the AV jack, then choose the signal source to Video to CVBS.
3. Connection to multi media via the USB, then choose the signal source Media Player.
4. You can use Type- C 20V/3A for mobile power supply.
5.  /SOURCE button to select different signal source inputs; Press the OK key to confirm the use of the selected signal source.


User Interface

After the projector is turned on, the following main interface will appear after the 15-20s startup screen flashes.

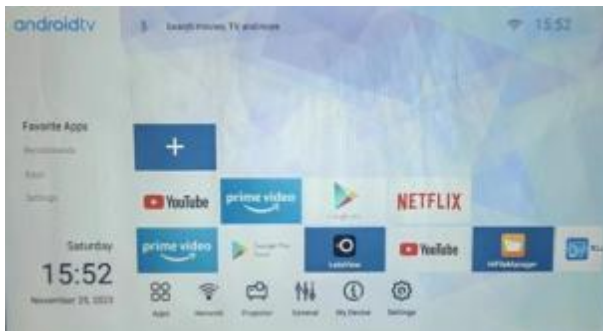

Android TV operating system

 Our Smart Projector comes with the Android TV operating system, which means you can easily access a wide range of apps and services including YouTube, Netflix, Disney+ and more. You can also download new apps and update existing ones directly from the Google Play Store.

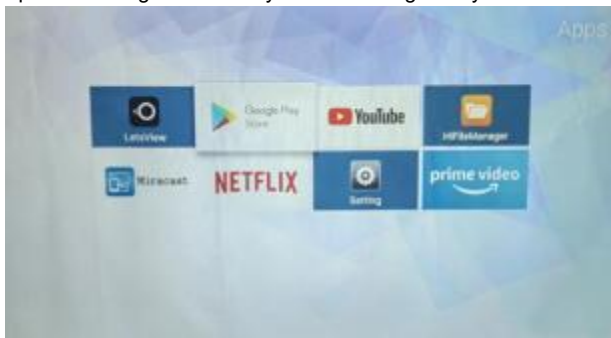

Focus adjustment

The focus circle adjusts the size and sharpness of the projected image while adjusting the distance, as shown in the following figure.



Network Settings

At the main page, select settings, network settings WIFI settings, press OK enter WIFI settings.

Select the WIFI you want to connect, press OK enter settings, the password entry box will pop up, enter password to connect, and press the return key can exit the WLAN interface.



Lets View



After connecting to the WiFi network, you can select Let View in the option settings to achieve phone screen mirroring, computer screen mirroring, video app screen mirroring, or scan QR code connection.

Miracast



Open the "Wireless Display" of the Android device and select the corresponding projector device name.(Note:Different Android devices have different "Wireless Display"function names and opening methods,please refer to the Android device's manual for details)Note:The last four digits of the device name are randomly changed.

IOS mobile phones need to be connected to the same WiFi router as the projector in the Let View app to achieve the same screen function.

System settings



When users operate settings, they can select network settings, projection settings, screen settings, sound settings, Bluetooth settings, general settings, upgrade management, and local information from the options.

Follow the on-screen instructions to set up the Android TV operating system. Download and install the required apps from the Google Play Store. Connect to the internet using Wi-Fi or Ethernet. Enjoy your favorite shows, movies, and more with crystal clear picture quality!

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.

Technical Features

Imaging Technology	TFT LCD
Contrast	1500:1
Native Resoulution	1280*720
Supported Resolution	1920*1080 pixels
Light	LED
LED Lifetime	30,000 hours
Focus Mode	Manual operation
Projection Distcance	0.8- 3.2M
Projection Size	30-120 inches
Projector Ratio	1.2:1
Aspect Ratio	16:9
Power Supply	Adapter: 20V-2.3A
Type-C interface	Support output 20V/3A or more PD, QC, AFC quick charging protocol charger/charging treasure.
Consumption	40-50W
System support	Android TV
Unit Size	140 *108 *60mm

(This parameter can be used for reference by users,
and our company reserves the right to adjust and update this value.)

Android TV