

If there is any problem
with our product while using



YOU DON'T NEED TO RETURN IT TO AMAZON
WE WILL PROVIDE YOU WITH A 100% SATISFIED SOLUTION

XMCOSY+ Customer Service
service.2@xmcosy.com



Lighting Expert, Brighten up Your Life



Low Voltage Landscape Lights User Manual



Download Free APP:



Can't connect? Need help?

Email: service.2@xmcosy.com

INTRODUCTION

Thanks for choosing XMCOSY+ Smart Low Voltage Landscape Lights. Please read the user manual carefully and keep it for future reference.

SAFETY INSTRUCTIONS

Read and follow all safety instructions before installing the low voltage landscape lights.

- Sockets used to power smart low voltage lights should comply with all national and local electrical codes. If you are unsure of compliance requirements, please consult your local electrician.
- Do not use in water. Please connect power cords in deep together and tighten the protective cover. Especially for the interface at the end, please be sure to put on the protective cover. Keep the plug and socket dry.
- Please keep children away from these lights.
- Keep lights away from flammables and fire sources.
- Avoid placing the lights near potentially dangerous sources.

CONTENT

Specifications	1
Package Contents	2
Assemble	3
Lampshade Angle Adjustment	5
Button Function Introduction	6
Service & Warranty	7
APP Download & Registration	8
Distribution Network & APP Connection	11
APP Functions	15
Alexa Pairing Instruction	19
Google Assistant Pairing Instruction.....	24
Troubleshooting	27
Contact	28

SPECIFICATIONS

Brand	XMCOSY+
Model	YJ-312-4-ST
Dimension	8.15"L x 2.15"W x 23"H
Total Length	48FT(14.6M)
Weight	4.5 KGS
Material	Aluminum + Acrylic + PC
Light Source	Integrated LED
Luminous Flux	400 Lumens/EA
Color Temperature	2700K Warm White + RGB
Input Voltage	100V -240V AC, 50/60Hz
Output Voltage	12V DC Max.3A
Wattage	8W/EA
Max.Of Connections	36 Wattage
Rotation Angle	340°
Controlled By	Button/APP Control
Dimmable	YES

1

PACKAGE CONTENTS



1. Landscape Light * 4
2. Aluminum Ground Stake * 4
3. 8.2FT Landscape Light Cable* 4
4. 36W Power Adapter * 1
5. 13.1FT Extension Power Cable * 1
6. User Manual * 1

Notes:


After unpacking, please check the product accessories. If there are any missing or damaged accessories, please contact us as soon as possible, and our customer service team will solve it in time.

service.2@xmcpsy.com

2

ASSEMBLE


Step - 1

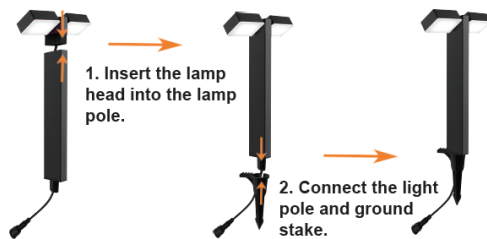

Step - 2

Connect the landscape light cables in turn.

1. Align the positioning point.

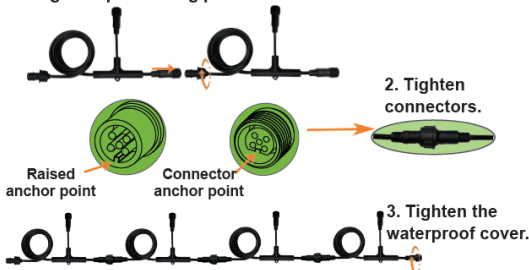

Notes: Without the waterproof cover, the landscape light cable may submerge in water, which will cause a short circuit. 3

ASSEMBLE

Step - 3

Connect the installed landscape lights and the landscape light cables in turn.



Step - 4

1. Connect the extension power cable to the landscape light cable & power adapter.

2. Plug the power adapter into the power outlet.




4

LAMPSHADE ANGLE ADJUSTMENT

340° Rotation Adjustable

Each landscape light has two lamp heads, which can be freely adjusted within 340°. You can adjust the lighting effects you want according to the needs of the scene.

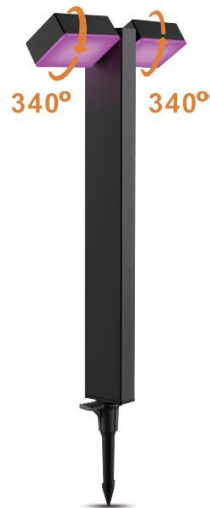

5

BUTTON FUNCTION INTRODUCTION

Button Function Introduction:



- 1. Long press - Enter the APP connection & network mode.**
Long press the button for 5S, the light flashes quickly, and the product enters the distribution network mode. (When the product is used for the first time, it will automatically enter the network distribution state after connecting to the power supply, without pressing any buttons.)
- 2. Short press - ON/OFF & Change scene modes**
8 modes(4 kinds of warm white and 4 kinds of color light)
Short pressing the button, the mode changes in turn as follows:
 - * ON(Gorgeous)
 - * Good night
 - * Reading
 - * Working
 - * Leisure
 - * Grassland
 - * Colorful
 - * Dazzling
 - * Gorgeous
 - * OFF

For more scene modes and functions of the product, please connect to the XMcosy APP.

6

SERVICE & WARRANTY

Thank you for your support of XMCOZY+!
XMCOZY+ provides a regular 1-Year Warranty.

 **Not Satisfied?**

If there is any problem with our product while using,
Please Contact

service.2@xmcosy.com

We will provide you with a 100% Satisfied Solution!

 **Satisfied?**

We are glad that you didn't encounter any problems
with our low voltage landscape lights.

XMCOZY+ is committed to providing better products and
service, so we provide an additional 1-year warranty.

Please Email to register a

2-YEAR-WARRANTY

warranty@xmcosy.com


or scan the QR code



7

APP DOWNLOAD & REGISTRATION

**Step 1: Download the XMcosy App from
App Store or Google Play.**

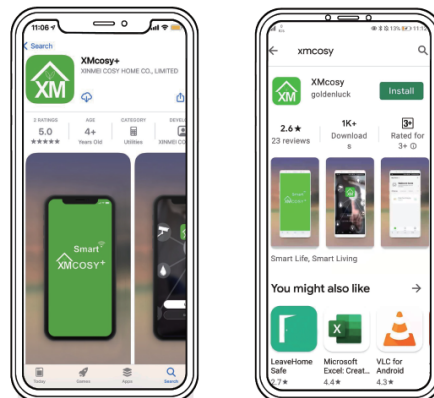

Scan the QR code to download




8

APP DOWNLOAD & REGISTRATION

Step 2: Register


1. Enter your mobile phone number or email address.
2. Enter the verification code.

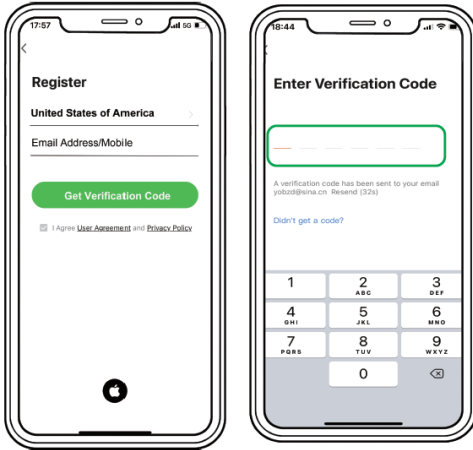

9

APP DOWNLOAD & REGISTRATION

3. Create a password and Log in the App.
4. Please enable the XMcosy App to get your Bluetooth while using the App.

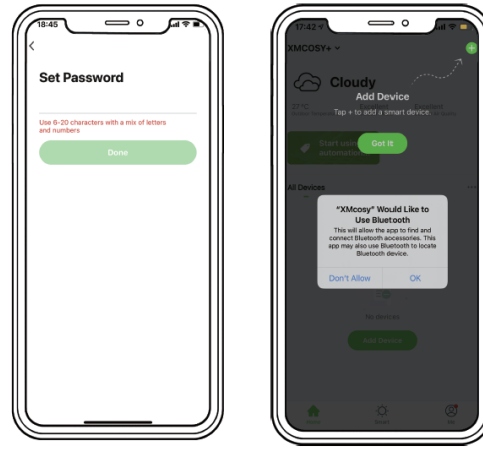


10

DISTRIBUTION NETWORK & APP CONNECTION


Step 1: Plug - In

Plug XMCOZY+ Smart landscape lights power adapter into any standard outlet.

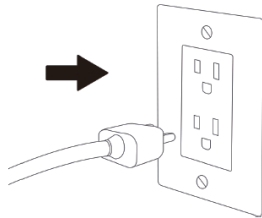

Notes:

1. After power on, the light will automatically enter the connecting state (fast blinking);
2. If there is no connection after 3 minutes, the indicator lights will remain on. If you want to add a device at this time, you need to press and hold the power button on the controller for about 5 to 7 seconds until the lights blink rapidly.

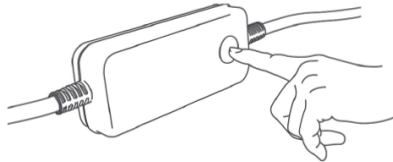


11

DISTRIBUTION NETWORK & APP CONNECTION

Step 2: Add Device


1. Select "Add Device" or click the "+" in the upper right corner. The devices in the connecting state will be displayed at the bottom of the page. Click "Go to add".
2. Click the device you want to add and please make sure that the network you connected is 2.4GHz.

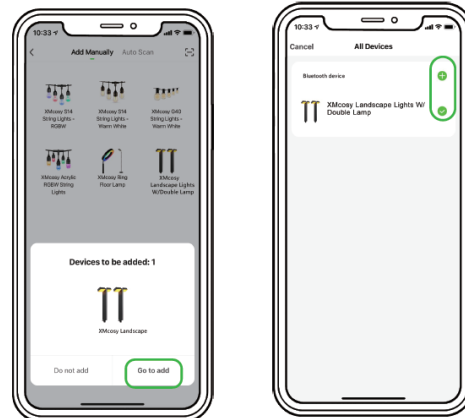


12

DISTRIBUTION NETWORK & APP CONNECTION

3. Fill in your 2.4GHz network name and password, then click "confirm".

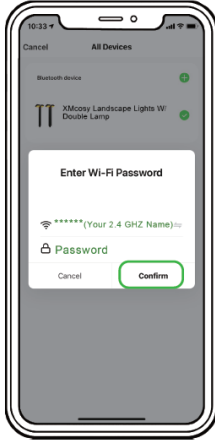

4. The product starts to connect until it displays 100% complete.

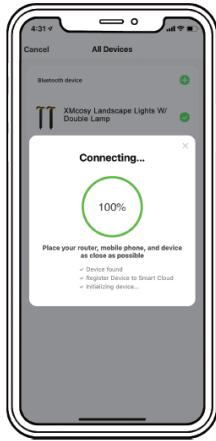


Please keep the router, mobile phone, and product as close as possible to ensure a good reception signal.

13

DISTRIBUTION NETWORK & APP CONNECTION

5. After you edit the product name and save it, click "DONE" at the top right.

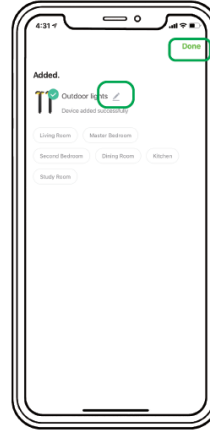

Congratulation!

Now you can use XMcosy App to control your landscape lights.



Tips:

1. The device name will be used again when paired to Amazon Alexa & Google Home for voice control.
2. The device name is suggested to consist of English words and Arabic numerals, please do not use special characters.

14

APP FUNCTIONS

WARM WHITE MODE& COLOR MODE

You can choose to turn on the low voltage landscape lights in color light or warm white light.

RGB Color Mode


* **Color Wheel** - Slide the color wheel up and down to adjust the color of the lights from a broad spectrum of colors. Drag the button on the wheel from right to left to adjust the color temperature.

* **Brightness** - Slide the brightness bar to adjust the brightness from 1% to 100%.

* **Default Color** - There are 7 default colors, you can click the round color icons to choose a default color.

Warm White Mode

* **Brightness** - Slide the "brightness" bar to adjust the brightness of low voltage landscape lights from 1% to 100%, you can freely brighten or dim the lights.

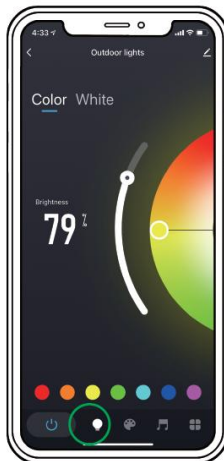


DIY Your Color

APP FUNCTIONS


SCENE MODE

XMcosy App has a scene selection function. Press the scene button to enter the scene selection interface. You can choose your favorite scenes from 32 default scenes.

You also can customize a new scene based on your favorite.

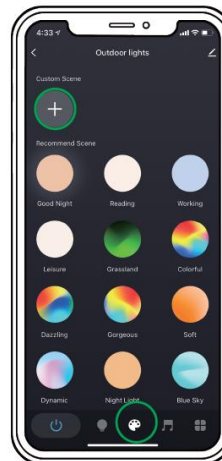

Default Scenes

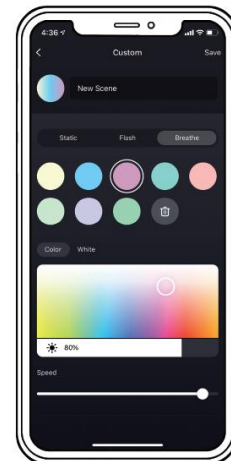


Customize A Scene

15

16

APP FUNCTIONS

- * **Music Sync Mode:** The low voltage landscape lights react in real-time when your app detects the songs.
- * **Plan:** You can set the time and customize favorite light mode when you fall asleep/wake up.

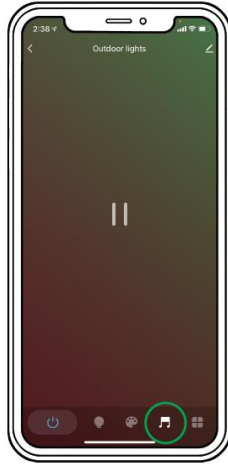


Detect Music




Set A Plan

OTHER FUNCTIONS

- * **Schedule:** Turn on/off automatically at preset times.
- * **Left Time:** The lights will turn on/off automatically after the countdown.
- * **Power-on Behavior:** Power Memory mode.

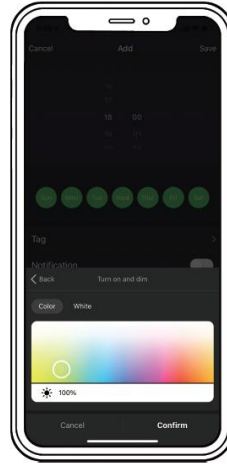


Schedule

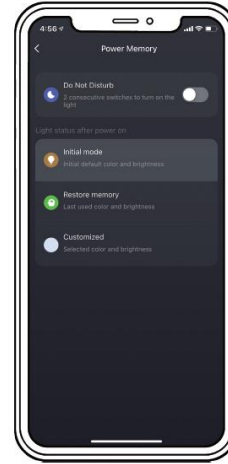

Power-on Behavior


ALEXA PAIRING INSTRUCTION

1. Download the Amazon Alexa APP
Search the keywords "Amazon Alexa" in the App Store for iOS device and in the Google Play for Android device.
2. Sign in or register a new account
3. Pair the Amazon Alexa APP to Amazon Echo Device (follow the Amazon Echo User Manual)
4. Log in your Amazon Alexa APP
Important tips: please make sure the "XMcosy" app, Amazon Alexa APP "Amazon Echo" are connected to the same Wi-Fi network.

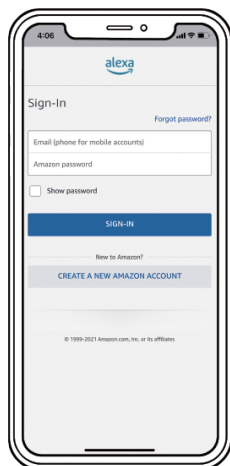


ALEXA PAIRING INSTRUCTION

5. Enable "XMcosy" skill in Alexa APP
a. Click "Skills & Games" in the MORE MENU on the Alexa APP's home page.

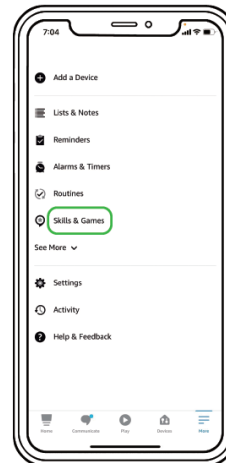

ALEXA PAIRING INSTRUCTION


b. In the popup page, input “xmcosy” in the search bar, click “XMcosy” in the search result and click “ ENABLE TO USE” in the popup page to enable the skills.

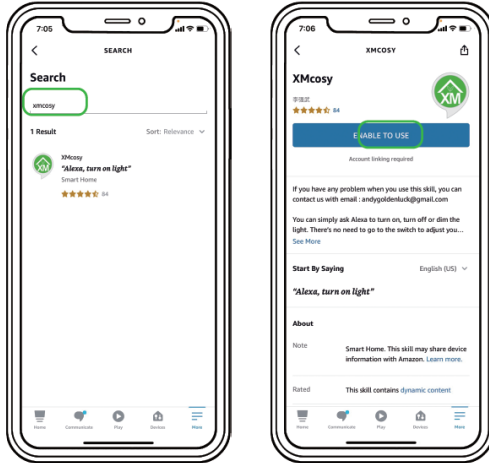

21

ALEXA PAIRING INSTRUCTION

c. Click “Agree and link”, then “Your XMcosy account has been successfully linked”.

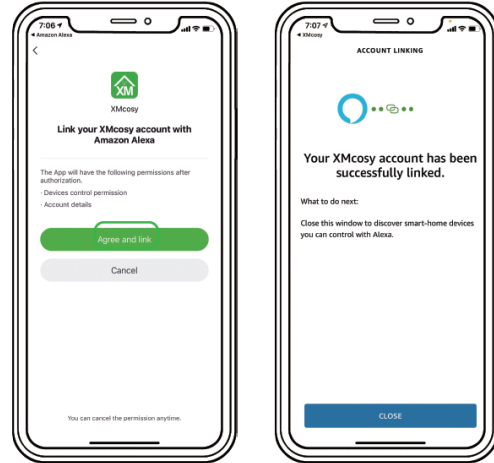

22

ALEXA PAIRING INSTRUCTION

6. Enjoy Amazon Alexa Control

Now with Amazon Alexa, you can take control the smart landscape lights by asking it to change colors, turn lights on and off by using simple commands.

For example, using these Alexa commands below:

- “Alexa, Turn on/off {Specific light}”
- “Alexa, Set the {Specific light} to green”
- “Alexa, Set the {Specific light} to red”
- “Alexa, {Specific light} lights fifty”
- “Alexa, {Specific light} out”

Tips:

{Specific light} is the device name you named on “XMcosy” APP.

23


GOOGLE ASSISTANT PAIRING INSTRUCTION

1. Download the APP
Search “Google Home” in the App Store for iOS device and in the Google Play for Android device to install.

2. Sign in or register a new account
3. Pair the Google Home APP to Google Home Device (follow the on-screen steps)

4. Link XMcosy account in set up devices

a. Click the “+” icon in the upper left corner of home page, then click “set up device”.

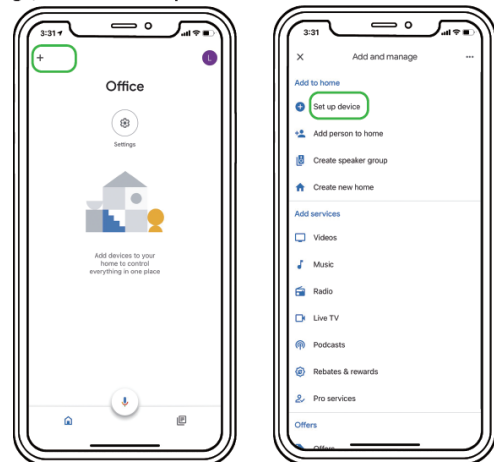


Important tips: please make sure the “XMcosy” app, Google Home APP and Google Home devices are connected to the same Wi-Fi network.

24

GOOGLE ASSISTANT PAIRING INSTRUCTION

- b. Click "Works with Google"
- c. Input "XMcosy" in the search bar.
- d. In the new window, select your XMcosy account's region, input your XMcosy account and password, then click "Next Step" and "Authorize".

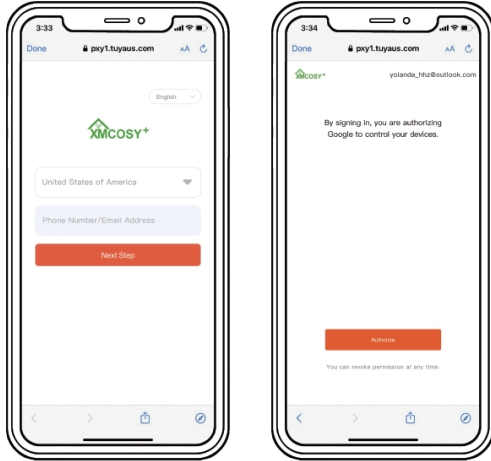

25

GOOGLE ASSISTANT PAIRING INSTRUCTION

5. Enjoy Google Home Control

Now you can take control the smart landscape lights through Google Home by asking it to change colors, turn lights on and off by using simple commands.

For example, using these voice commands below:
"Google, Turn on/off {Specific light}"
"Google, Set the {Specific light} to green"
"Google, Set the {Specific light} to red"
"Google, {Specific light} lights fifty"
"Google, {Specific light} out"

Tips:
{Specific light} is the device name you named on "XMcosy" APP.

26

TROUBLESHOOTING

Cannot connect to the XMcosy App.

1. Check if the light is powered on.
2. Check if the Bluetooth on the smartphone is enabled.
3. When pairing, please ensure the smartphone is near the power adapter.
4. If the connecting error still exists, please try to clean all apps that are running in the background then reopen the XMcosy App, or uninstall and reinstall the XMcosy App then repeat the setup.

Cannot connect to your Wi-Fi network/Disconnected.

1. Check if the light is powered on.
2. Please make sure your Wi-Fi router is under the 2.4 GHz setting, and the entered router password is correct. If the Wi-Fi signal is too weak, reset your Wi-Fi router and try again.
3. Please enable the XMcosy App to get your local location and Bluetooth.

Home network is 5GHz.

The wall penetration capability of 5.0GHz is weaker than 2.4GHz, which means that the outdoor signal of 5.0GHz is worse than 2.4GHz. Therefore, most smart devices support 2.4GHz networks or dual-frequency networks of 2.4GHz and 5.0GHz.

1. If you are using a dual-band router(2.4GHz and 5GHz frequency share a Wi-Fi account.), you can connect the device using the AP mode.
2. Or you can log in to the management page of your router and change the SSIDs of the 2.4 GHz and 5 GHz networks to differentiate them.

27

CONTACT

For questions, assistance, or support,
Please Contact:

service.2@xmcosy.com
or scan to email



* Required Information

1. Amazon Order ID
2. Product Model NO.

XMcosy+ Customer Service Team will reply within 24 hours.

For more info. or news about XMcosy+, pls follow XMcosy+ social website.



28

FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located for operating in conjunction with any other antenna or transmitter.