



# User Manual

Version: 1.0

## Contents

Notes of Importance .....	3
Product Features .....	3
Diagrams .....	4
Getting Started .....	5
Power On/Off .....	5
Access to The Application .....	6
Wireless Internet .....	6
Install APK .....	7
Uninstall APK .....	8
Date Transmission .....	9
Factory Reset .....	10

### Notes of Importance

- 1) Please keep the device away from excess temperature (40 °C above), too cold (-5 °C below) or wet place.
- 2) Do not grievous hit the device or place something heavy on it
- 3) Only use the accessories specified by the manufacturer.
- 4) Please keep the device away from benzene, diluents or other chemical.
- 5) Keep the device away from water.
- 6) The product should be serviced by the professional serviceman, do not try to service it by yourself
- 7) Please unplug the power plug of the product when not in use for a long time or during the rainstorm.
- 8) In order to avoid damaging the touch panel, never place the heavy or sharp objects on the touch panel when use or transport it.
- 9) Arrange all cables and cords so that people and pets are not likely to trip over or accidentally pull on them move around or walkthrough the area. Do not allow children to play with cables and cords.

### Product Features

high performance processor  
1GB DRAM  
CPU frequency up to 1.5GHz  
High resolution display  
Wi-Fi, 802.11 b/g/n  
Google browser; support Chrome label style, Google search etc.  
Support gravity sensor; auto-rotate screen  
Support 3G USB dongle (external)  
Support peripheral with USB port of mouse, keyboard, Ethernet and etc.  
Full format video play .RMVB,MPEG1,MPEG2,MPEG4,VC1,MKV; H.264 ect  
Picture browse, support JPEG, BMR, GIF, PNG formats.  
Internet chat tool, support QQ, MSN, SKYPE etc.  
Online video, YouTube, Facebook  
This transmitter is restricted to indoor use in the 5150MHz to 5250MHz frequency range.

### Diagrams

#### Side view



#### Front view



### Power On/ Off

- 1) Power on: turn on the device by holding the power button for 3 seconds when the product power off.
- 2) Power off: holding the power button for 3 seconds and click ok to power off the product at working status.
- 3) Short press power button for sleep or awake the product when the product standby.



### Getting Started

- 1) Insert the power lead into the DC socket, and then insert the other end into the power socket.
- 2) Turn on the product by holding the power button for 3 seconds.
- 3) Screen will show the starting logo.
- 4) Wait for about 30 seconds and enter into main interface.

## Access to The Application



- 1) In the main menu , click icon to go to APPS menu screen.
- 2) Slide the screen leftward/rightward fast, switch to the other menu screen.
- 3) Click the apps icon to enter into apps
- 4) Click the "RETURN" icon, return to previous page , click the "HOME" icon return to the main menu.



## Wireless Internet


- 1) Enter into the settings and turn on the Wi-Fi, connect to the available networks.
- 2) Enter into the APPS and click the 'Browser' , then you will get into the Google homepage.
- 3) You can input the website on the top that you like, or you can search the interesting news and videos by the Google search.

## Install APK

- 1) Copy the file of APK format to your device or SD card
- 2) Click the that in APPS, as the following picture:



3) Click the APK which you want to install, as the following pictures:

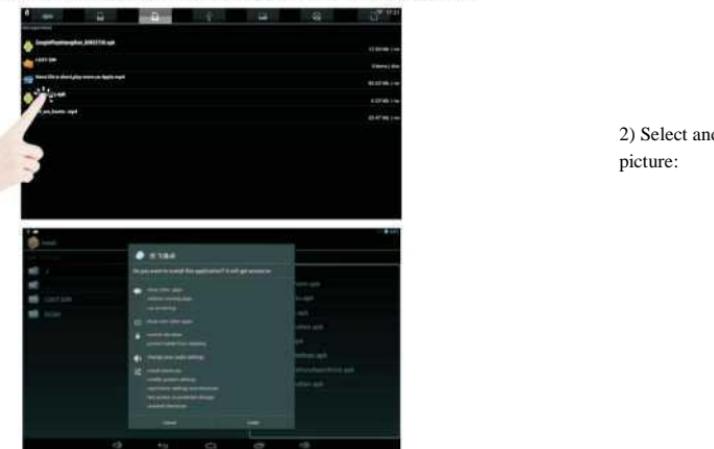

After installing the APK, you can click the APK icon in the apps to enjoy the application.

## Uninstall APK

- 1) Click the 'Settings' in the APPS, enter into 'Settings' -> Apps' -> DOWNLOADED', Select which application would you want to uninstall, as the following picture:



- 2) Select and click the Uninstall button to uninstall this application, as the following picture:



## Date Transmission

Connecting PC and device by using USB cable, USB icon will be appeared on the upper left side of status bar, it refers to USB has been connected. As follows:



When the operation menu appeared, click "USB connected":

Click "Turn on USB storage" on prompted window :



At this time, you can find device storage card and SD card (if the card has been plugged in) in my computer list.

After data transmission, click "Turn off USB storage" , and then it will quit the data transmission state.

## Factory Reset

If your device has been contracted the virus, or worked unexpectedly by installing third-party applications, then you can erase all data from your device via reset tablet. Operation: click 'Settings' -> 'Backup & reset' -> 'Factory data reset', then click 'Reset tablet\* and Erase everything' , as the following picture:



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed of at the end of its life separately from your household waste. There are separate collection systems for recycling in your country. For more information, please contact the local authority or your retailer where you purchased the product.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.