Xlite user manual

Basic function



Indicator light



Working mode switching

Toggle switch,

- 1. wired mode when moved to the left "X"; <-
- 2. RF mode when moved to the right "O";



DPI Setting





Gather Step 1: Press the "DPI" switch to light the OLED, and the OLED will display the current set values;


Gather Step 2: Press the switch again, set the DPI value, at this time OLED will only display the DPI value, other Settings will be hidden;

Gather Step 3: After the setting is complete, wait 3 second, OLED will display the current overall setting values;

Gather Step 4: Wait another 3 second and the OLED will turn off;

DPI sets the step level 400-800-1600-3200-6400-12800 Back and forth cycle

Polling Rate Setting

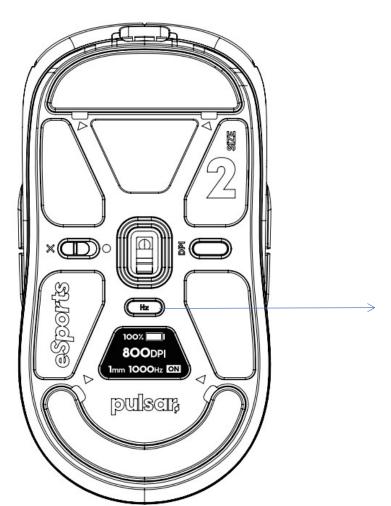



Gather Step 1: Press the "HZ" switch to light the OLED, and the OLED will display the current set values;

Gather Step 2: Press the switch again, set the polling rate value, at this time OLED will only display the polling rate value, other Settings will be hidden;


Gather Step 3: After the setting is complete, wait 3 second, OLED will display the current overall setting values;

Gather Step 4: Wait another 3 second and the OLED will turn off;

Wire mode polling rate sets the step level 500Hz-1000Hz-2000Hz-4000HZ-8000Hz Back and forth cycle

Wireless mode polling rate sets the step level 500Hz-1000Hz-2000Hz-4000HZ Back and forth cycle

Motion Sync Setting

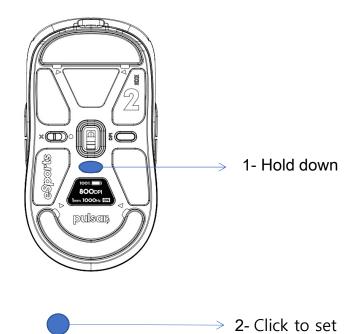



Gather Step 1: Press the "HZ" switch to light the OLED, and the OLED will display the current set values;

Gather Step 2: Hold down the "HZ" switch and press the right mouse button to enable or disable the "Motion Sync" function. At this point, the OLED will only display the current set value, and other set values will be hidden;

Gather Step 3: After the setting is complete, wait 3 second, OLED will display the current overall setting values;

Gather Step 4: Wait another 3 second and the OLED will turn off;

Motion Sync sets the step level ON---OFF Back and forth cycle