



CQA1019 TronixPad USER GUIDE

Please read this instruction thoroughly before using this product and keep it for future reference.

Google, Android, Google Play and other marks are trademarks of Google LLC.



FUNCTION OVERVIEW



- 1.Type-C port
- 2.Micro SD card slot
- 3.Stereo Earphone Socket
- 4.Volume +
- 5.Volume -
- 6.Power On/Off
- 7.Reset
- 8.Front mount camera
- 9.Rear camera

1*TronixPad, 1*USB/DATA cable, 1*User Guide

GETTING STARTED

Power On/Off

Press and hold the power button for 2-3s to turn on your tablet. Select your language and set up your tablet following the start guide.

Press and hold the power button for 2s, then release it. It will show Power Off and Clock). Then slide and add it to a Home screen.

Remove it by sliding to X.

Tap HOME SETTINGS to enable/disable Add icon to Home screen. This is applicable to the new apps installed on Google Play.

Battery

A rechargeable Li-ion battery is installed in the tablet.

We suggest you drain the battery completely once a month if only use your tablet occasionally.

DO NOT dispose of tablet in a fire.


Sleep Mode

Simply press the power button once to switch the tablet to the Sleep Mode when the tablet is ON; press again to wake it up.

Tip:
Go to Settings > Display > Sleep to set the time of entering the Sleep Mode.

HOME SCREEN

Icons on the Bottom Menu

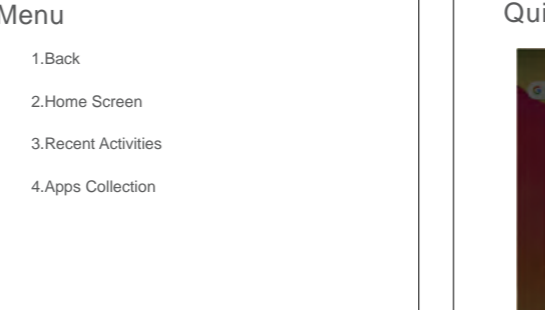

1.Back

2.Home Screen

3.Recent Activities

4.Apps Collection

Wallpapers, Widgets and Home Settings

Tap and hold the empty section of a Home screen. WALLPAPERS, WIDGETS and HOME SETTINGS will be displayed.


Tap WIDGETS, touch and hold any widget(e.g. Clock). Then slide and add it to a Home screen.

Remove it by sliding to X.

Tap HOME SETTINGS to enable/disable Add icon to Home screen. This is applicable to the new apps installed on Google Play.

SETTING BASICS

Quick Settings

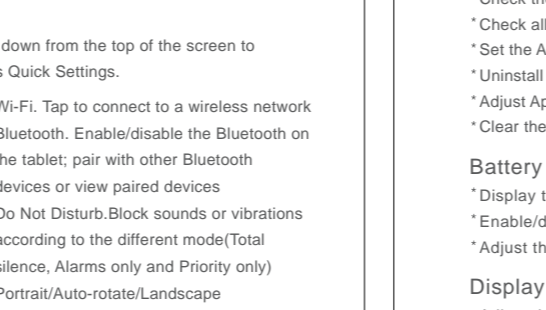

Swipe down from the top of the screen to access Quick Settings.

Wi-Fi: Tap to connect to a wireless network

Bluetooth: Enable/disable the Bluetooth on the tablet; pair with other Bluetooth devices or view paired devices

Do Not Disturb: Block sounds or vibrations according to the different mode(Total silence, Alarms only and Priority only)

Portrait/Auto-rotate/Landscape

Airplane Mode: Turn on/off all the network connectivity

Tap the icon to change the options in the Quick Settings.

More Settings

Swipe down from the top of the screen, then tap the icon to enter the detailed Setting interface. Or, tap the Settings icon on the Home screen to enter.

Network & Internet

Connect to any working Wi-Fi

Enable/disable the Airplane Mode

Monitor the data usage

Connected devices

Turn on/off Bluetooth

Pair with Bluetooth devices and check the paired devices

Cast device and check the cast device

Add and check printers

Apps & notifications

View and manage your storage space

Security & location

Set screen lock pattern, e.g.password, PIN, Swipe etc.

Enable/disable all the notifications while the screen is locked

Turn on/off the location services for specific Apps

Set to show/hide the password when input a password

Users & accounts

Add and manage the user accounts on your tablet

Accessibility

For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

System

Set Language

Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the icon to the top to change the language.

Restore factory setting

Tap Reset options > Erase all date(factory reset) to restore the factory setting.

Set the date and time

Turn on/off the Backup

Check the detailed information about the tablet

Storage

View and manage your storage space

Security & location

Set screen lock pattern, e.g.password, PIN, Swipe etc.

Enable/disable all the notifications while the screen is locked

Turn on/off the location services for specific Apps

Set to show/hide the password when input a password

Users & accounts

Add and manage the user accounts on your tablet

Accessibility

For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

System

Set Language

Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the icon to the top to change the language.

Restore factory setting

Tap Reset options > Erase all date(factory reset) to restore the factory setting.

Set the date and time

Turn on/off the Backup

Check the detailed information about the tablet

Storage

View and manage your storage space

Security & location

Set screen lock pattern, e.g.password, PIN, Swipe etc.

Enable/disable all the notifications while the screen is locked

Turn on/off the location services for specific Apps

Set to show/hide the password when input a password

Users & accounts

Add and manage the user accounts on your tablet

Accessibility

For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

System

Set Language

Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the icon to the top to change the language.

Restore factory setting

Tap Reset options > Erase all date(factory reset) to restore the factory setting.

Set the date and time

Turn on/off the Backup

Check the detailed information about the tablet

Storage

View and manage your storage space

Security & location

Set screen lock pattern, e.g.password, PIN, Swipe etc.

Enable/disable all the notifications while the screen is locked

Turn on/off the location services for specific Apps

Set to show/hide the password when input a password

Users & accounts

Add and manage the user accounts on your tablet

Accessibility

For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

System

Set Language

Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the icon to the top to change the language.

Restore factory setting

Tap Reset options > Erase all date(factory reset) to restore the factory setting.

Set the date and time

Turn on/off the Backup

Check the detailed information about the tablet

Storage

View and manage your storage space

Security & location

Set screen lock pattern, e.g.password, PIN, Swipe etc.

Enable/disable all the notifications while the screen is locked

Turn on/off the location services for specific Apps

Set to show/hide the password when input a password

Users & accounts

Add and manage the user accounts on your tablet

Accessibility

For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

System

Set Language

Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the icon to the top to change the language.

Restore factory setting

Tap Reset options > Erase all date(factory reset) to restore the factory setting.

Set the date and time

Turn on/off the Backup

Check the detailed information about the tablet

Storage

View and manage your storage space

Security & location

Set screen lock pattern, e.g.password, PIN, Swipe etc.

Enable/disable all the notifications while the screen is locked

Turn on/off the location services for specific Apps

Set to show/hide the password when input a password

Users & accounts

Add and manage the user accounts on your tablet

Accessibility

For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

System

Set Language

Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the icon to the top to change the language.

Restore factory setting

Tap Reset options > Erase all date(factory reset) to restore the factory setting.

Set the date and time

Turn on/off the Backup

Check the detailed information about the tablet

Storage

View and manage your storage space

Security & location

Set screen lock pattern, e.g.password, PIN, Swipe etc.

Enable/disable all the notifications while the screen is locked

Turn on/off the location services for specific Apps

Set to show/hide the password when input a password

Users & accounts

Add and manage the user accounts on your tablet

Accessibility

For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

System

Set Language

Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the icon to the top to change the language.

Restore factory setting

Tap Reset options > Erase all date(factory reset) to restore the factory setting.

Set the date and time

Turn on/off the Backup

Check the detailed information about the tablet

Storage

View and manage your storage space

Security & location

Set screen lock pattern, e.g.password, PIN, Swipe etc.

Enable/disable all the notifications while the screen is locked

Turn on/off the location services for specific Apps

Set to show/hide the password when input a password

Users & accounts

Add and manage the user accounts on your tablet

Accessibility

For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

System

Set Language

Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the icon to the top to change the language.

Restore factory setting

Tap Reset options > Erase all date(factory reset) to restore the factory setting.

Set the date and time

Turn on/off the Backup

Check the detailed information about the tablet

Storage

View and manage your storage space

Security & location

Set screen lock pattern, e.g.password, PIN, Swipe etc.

Enable/disable all the notifications while the screen is locked

Turn on/off the location services for specific Apps

Set to show/hide the password when input a password

Users & accounts

Add and manage the user accounts on your tablet

Accessibility

For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

System

Set Language

Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the icon to the top to change the language.

Restore factory setting

Tap Reset options > Erase all date(factory reset) to restore the factory setting.

Set the date and time

Turn on/off the Backup

Check the detailed information about the tablet

Storage

View and manage your storage space

Security & location

Set screen lock pattern, e.g.password, PIN, Swipe etc.

Enable/disable all the notifications while the screen is locked

Turn on/off the location services for specific Apps

Set to show/hide the password when input a password

Users & accounts

Add and manage the user accounts on your tablet

Accessibility

For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

System

Set Language

Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the icon to the top to change the language.

Restore factory setting

Tap Reset options > Erase all date(factory reset) to restore the factory setting.

Set the date and time

Turn on/off the Backup

Check the detailed information about the tablet

Storage

View and manage your storage space

Security & location

Set screen lock pattern, e.g.password, PIN, Swipe etc.

Enable/disable all the notifications while the screen is locked

Turn on/off the location services for specific Apps

Set to show/hide the password when input a password

Users & accounts

Add and manage the user accounts on your tablet

Accessibility

For vision and hearing impaired users, manage settings for Screen readers, Subtitle, and more

System

Set Language

Tap Languages & input > Languages > +add a language to add your language. After adding, hold and slide the icon to the top to change the language.

Restore factory setting

Tap Reset options > Erase all date(factory reset) to restore the factory setting.

Set the date and time

Turn on/off the Backup

Check the detailed information about the tablet

Storage

View and manage your storage space

Security & location

Set screen lock pattern, e.g.password, PIN, Swipe etc.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.