

BYTENC

AZ51

USER MANUAL



Windows



Single Band WiFi



Intel Processor



Expandable Storage

Welcome


Thank you for purchasing BYTENUC AZ51. Below are the package contents and if any of the below is damaged or missed, Please contact the retailer.

Package contents

 
- 1 x BYTENUC AZ51
- 1 x AC Adapter
- 1 x HDMI Cable
- 1 x Base
- 1 x Bracket



EASY TO SET UP

 **Note:** Please plug the HDMI cable into the device first before connecting the power supply.

CONNECT TO A DISPLAY

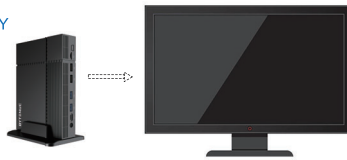

CONNECT TO KEYBOARD



CONNECT TO POWER

 


SET&READY TO GO



YOUR BYTENUC Mini PC TOUR

Front View

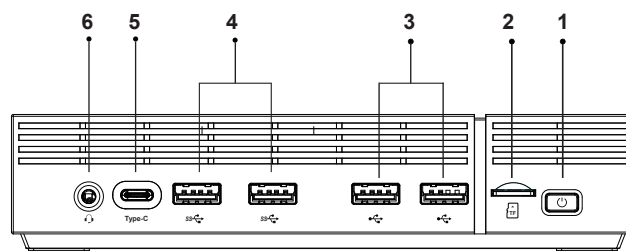

1. Power switch

The power switch allows powering ON and OFF the system.

2. Memory card slot

The built-in memory card reader reads and writes Micro SD cards. Add Micro SD Card - up to 2TB

3. USB 2.0 ports X 2

The USB (Universal Serial Bus) 2.0 ports are compatible with USB 2.0 devices such as keyboards, mice, cameras and hard disk drives.

4. USB 3.0 port X 2

The USB 3.0 port supports the SuperSpeed USB 3.0 devices and is backwards compatible.

 
5. Type-C port

The type-C port supports the SuperSpeed USB 3.1 devices. In addition to the usual USB function, it also supports audio and video transmission, charging and other functions.

6. Headphone/Audio Out jack.

The stereo headphone jack (3.5mm) is used to connect the system's audio out signal to amplified speakers or headphones.

Rear View

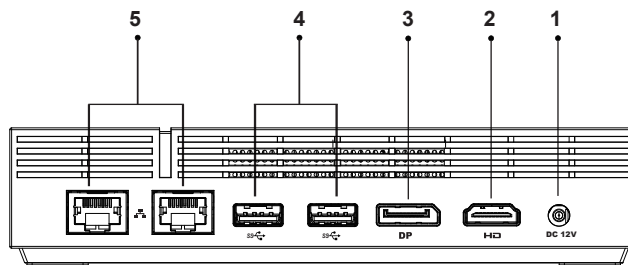

1. Power input (DC12V3A)

The supplied power adapter converts AC power to DC power for use with this jack.

2. HDMI output

The HDMI (High Definition Multimedia Interface) output supports displays such as an HDTV or monitor.

3. DP output

The latest digital interface between a computer and monitor

 
4. USB 3.0 port X 2

The USB 3.0 port supports the SuperSpeed USB 3.0 devices and is backwards compatible.

5. Ethernet port X 2

The eight-pin RJ-45 LAN port supports standard Ethernet cable for connection to a local area network (LAN) with speeds of 2.5GE.

Side View

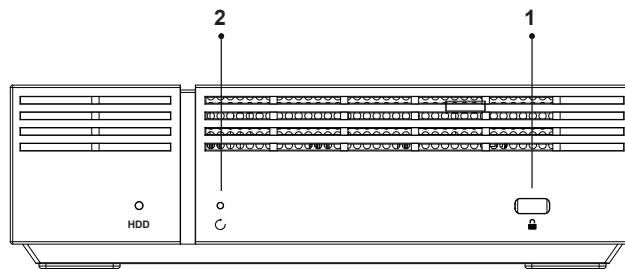

1. Security Lock

A security slot for Mini PC is a small hole in a laptop with the primary purpose of protecting your device.

2. Restart

Restart your PC

Product Specification

Product dimensions	170mm x 128mm x 37.5mm
CPU	Intel® Celeron® Processor N5105
OS	Windows 11 Pro 64bit
RAM	8GB DDR4
SSD	256GB/512GB
Network	Wi-Fi 802.11 b/g/n Bluetooth 2.5Gb Ethernet LAN port
M.2 Slot	Support M.2 NVME mode(Occupied by NVME SSD); 22×80mm
SATA Slot	SATA Slot × 1pc Support 7mm HDD/SSD 2.5inch
POWER	12V/3A

Notice

 
1. AZ51 uses Intel 11th generation CPU, which supports up to 4K@60Hz Display output

Regarding streaming video playback, we recommend that you use Google or Edge browsers. In our test, Firefox occupies the most memory and CPU resources, and the playback effect is the worst.

2. If the speaker or microphone connected for the first time has no sound, check that you have the appropriate one selected. Here's how:

a. [Settings > System > sound](#)

b. Check that your audio is playing to the audio device you prefer, such as a speaker or headphones.

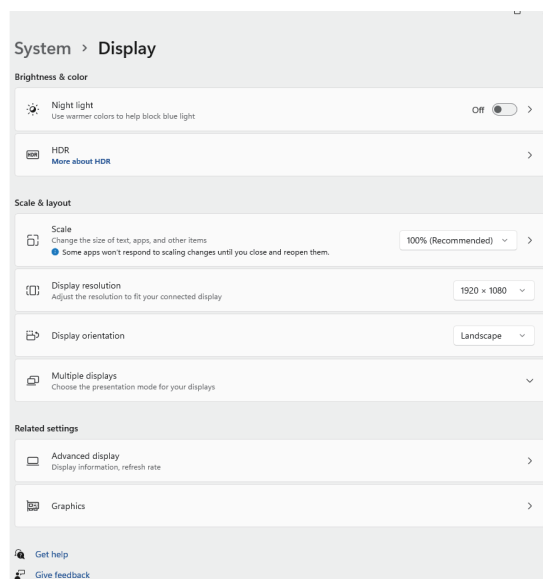

3. If windows is not activated automatically, please find the KEY in the following way and activate it manually. This is caused by the network delay, KEY failed to activate automatically


a. Press **Windows** key + **X**

b. Click Command Prompt (Admin)

c. At the command prompt, type the command:

```
wmic path SoftwareLicensingService get OA3xOriginalProductKey
```

d. This will reveal the product key.

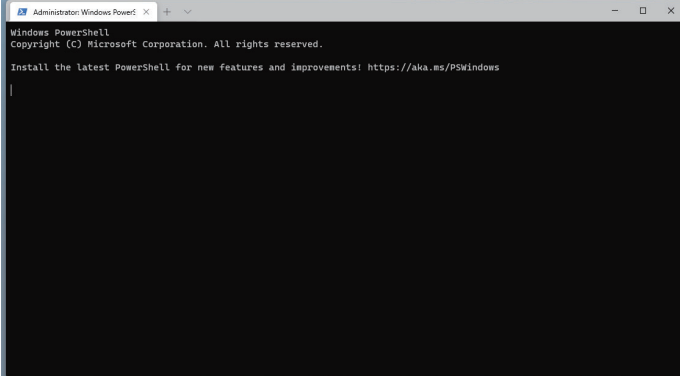

```
Administrator: Windows PowerShell
Windows PowerShell
Copyright (C) Microsoft Corporation. All rights reserved.

Install the latest PowerShell for new features and improvements! https://aka.ms/PSWindows

C:\> wmic path SoftwareLicensingService get OA3xOriginalProductKey
```

Q&A

1. How to get into the bios?

Press the **DEL** key when power on the mini pc (when BYTENUC LOGO shows).

2. Can RAM be expanded from 8-16Gb?

Ram is 8GB inserted, expandable.

3. Can we connect x4 tvs display with this pc?

AZ51 has one HDMI, one DP and one Type-C that supports video transmission, so it can support up to 3 monitors at the same time.

 
4. How to fix Overscan when using your TV as a PC monitor

a. Generally speaking, you'll find it by pressing the "Menu" button on your remote, then navigating to Picture Size, Aspect Ratio or something similar, where you'll get to pick between settings like 16:9, 4:3, Zoom, Super Zoom and so on.

One of these options will be called "Just Scan" (LG TVs), "Screen Fit" (Samsung), 1:1 or something similar. Select it, and your desktop should fit perfectly within the four corners of the screen.

b. You can also try to enter the display settings through the following way to adjust the resolution to fit the screen size.

[Settings > Display](#)

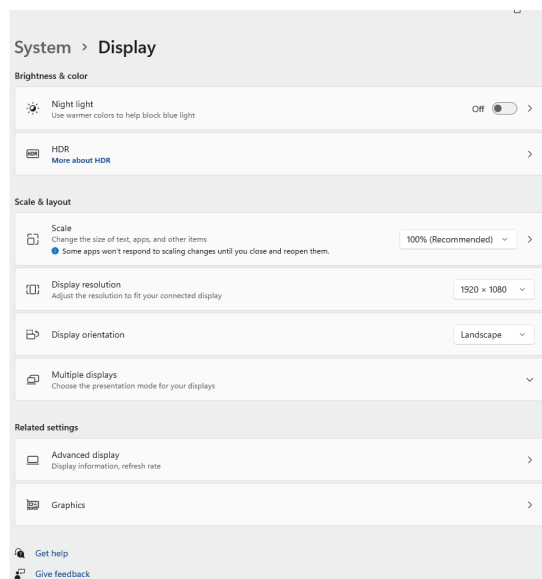

Installing a 2.5 inch HDD/SSD

※ Support Installing a 2.5 inch HDD/SSD. If possible, please purchase the Brand SSD brands and models that we have tested

1. From the back of the mini pc, open the hard drive compartment



2. Insert the hard drive into position







3. Close the back cover



Restoring your computer

If you are having Blue screen often appearing, and the frequently asked questions do not help, you can recover your computer.

Select the **Start**  button, then select **Settings**  > **Update & Security**  > **Recovery** 

Under Reset this PC, select Get started and then choose from the options and/or settings in the table below.

Keep my files

Reinstalls Windows and keeps your personal files.

Removes apps and drivers you installed.

Removes changes you made to settings.

Restores any apps your PC installed from Factory .

Remove everything

Reinstalls Windows and removes your personal files.

Removes apps and drivers you installed.

 
Removes changes you made to settings.

Restores any apps your PC installed from Factory .

Reset your PC

If your computer has a blue screen or can't enter Setting, you can reset your PC by pressing **F11** from PC Boot.

PC will enter Choose an Option screen, select **Troubleshoot** > **Reset this PC**.

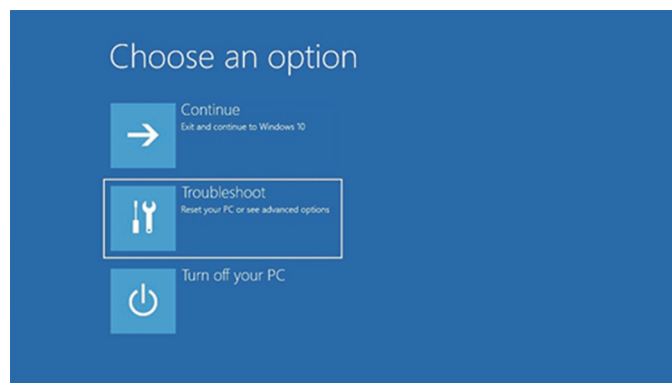

Installing an OS

When do I need to reinstall the system?

1. The system crashes, most of the time due to improper operation or abnormal shutdown.
2. If you encounter a major version of Windows update (such as V.1904-V.2004), Mini PC may not be able to automatically upgrade, you can find BYTENUC to get the latest system to complete the update.
3. Forgetting the Pin or Password

Please get the system files from bytenuc.com/warranty or contact support@bytenuc.com we will reply you within 24 hours

1. Format the USB flash disk, format: NTFS , name: WINPE .

Format PE(D:) X

Capacity:
13.9GB

File system
NTFS

Allocation unit size
8192 bytes

Restore device defaults

Volume label
WINPE


Format options
 QUICK Format

Start Close

2. After unzipping, copy all files to a USB flash disk

Name	Date modified	Type	Size
Boot	2020-07-09 17:14	File folder	
EFI	2020-07-09 17:14	File folder	
images	2020-07-09 17:15	File folder	
scripts	2020-07-09 17:15	File folder	
sources	2020-07-09 17:15	File folder	
bootmgr	2019-03-18 15:29	File	401 KB
bootmgr.efi	2019-03-18 15:47	EFI File	1,475 KB

 3. Insert the USB Flash Disk into the PC, and power on it, then press **F7** to enter boot menu, select boot from USB flash disk.

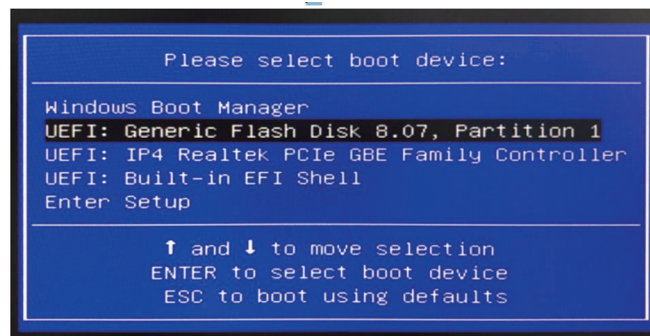

4. After finished, unplug the USB disk, and press **“Enter”** and the system will reboot and enter Windows OS (if do not reboot or power off, type **“exit”** and press **“Enter”**).

5. If the system enter factory mode, Please click the **“CleanupTestTool.cmd”** on the desktop or select **“OOBE”->“ Reboot”**, click **“OK”**. The the device will shutdown/reboot and enter the normal mode.

EC	REP	Name: SC ENIF PEGASUS SRL Add: Bucuresti sector 2. Strada RADOVANU Nr. 7 Bloc 42. scara 1. Etaj 5 Ap29 Zip Code: 02283 Contact Person: Pmeria Tel/Fax: 0040768511765 E-mail: dragutagss@gmail.com
UK	REP	Name: ERMENEGILDO SMART LIMITED Add: 6 PROSPECT WAY ROYAL OAK INDUSTRIAL ESTATE DAVENTRY NORTHAMPTONSHIRE UNITED KINGDOM NN11 8PL Contact Person: Mihai Lambert Tel/Fax: 00442037697376 E-mail: 1948mihai@gmail.com

Company: Shenzhen Wuhao Electronic Intelligent Technology Co., Ltd.
Address: Room 308, Phase III, Block C, No. 663 Bulong Road, Dafapo
Community, Bantian Street, Longgang District, Shenzhen, China
Register your product and activate your warranty: <https://bytenuc.com/warranty>
7X24 Hours Customer Service: support@bytenuc.com
TEL: +1-(978)-605-4333 (9:00AM-17:00PM EST)



MADE IN CHINA

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.