

User Manual

一、了解你的 LAVA ME 3

Understanding Your LAVA ME 3

二、激活你的 LAVA ME 3

Activating Your LAVA ME 3

三、快速掌握 LAVA ME 3

Mastering Your LAVA ME 3

四、了解 LAVA ME 3 状态图标含义

Understand the meaning of LAVA ME 3 status icons

五、给你的 LAVA ME 3 电池充电

Charge your LAVA ME 3 battery

六、给你的 LAVA ME 3 换弦和微调

Change strings and fine-tune your LAVA ME 3

七、重要安全性信息

Important Safety Information

八、配置与参数

Configuration and Parameters

九、服务与支持

Services and Support

Hi,

欢迎使用 LAVA ME 3 !

Welcome to LAVA ME 3!

一 . 了解你的 LAVA ME 3

Understanding Your LAVA ME 3

LAVA ME 3 概览

Overview of LAVA ME 3



上弦枕：黑色

Nut: black

音孔圈：银色

Sound hole ring: silver

琴身：颜色（见封样版）

Body: color (see the sealed sample)

尾钉：银色

Tail pin: silver

琴头logo烫金效果

Peg head logo stamping effect

（烫金效果见工艺文件）

弦准：银色

Tuner: silver

(See the process document for the stamping effect)

桥：同琴身

Bridge: same as body

下弦枕：黑色

Bone: black

火标：银色

Fire logo: silver



Size: 36 inches 936*321.5*116.5mm

重量: 36 寸 2080g 琴包 1980g 一共 4060g

Weight: 36 inches 2080g Gig bag 1980g Total 4060g

尺寸: 38 寸 965.9*357.2*122.7mm

 
Size: 38 inches 965.9*357.2*122.7mm

重量: 38 寸 2250g 琴包 1980g 一共 4230g

Weight: 38 inches 2250g Gig bag 1980g Total 4230g

琴头, 弦准, 琴颈, 琴体, 音孔, 琴桥, 肩带固定钉

Peg head, tuner, neck, body, sound hole, bridge, shoulder strap fastening nail

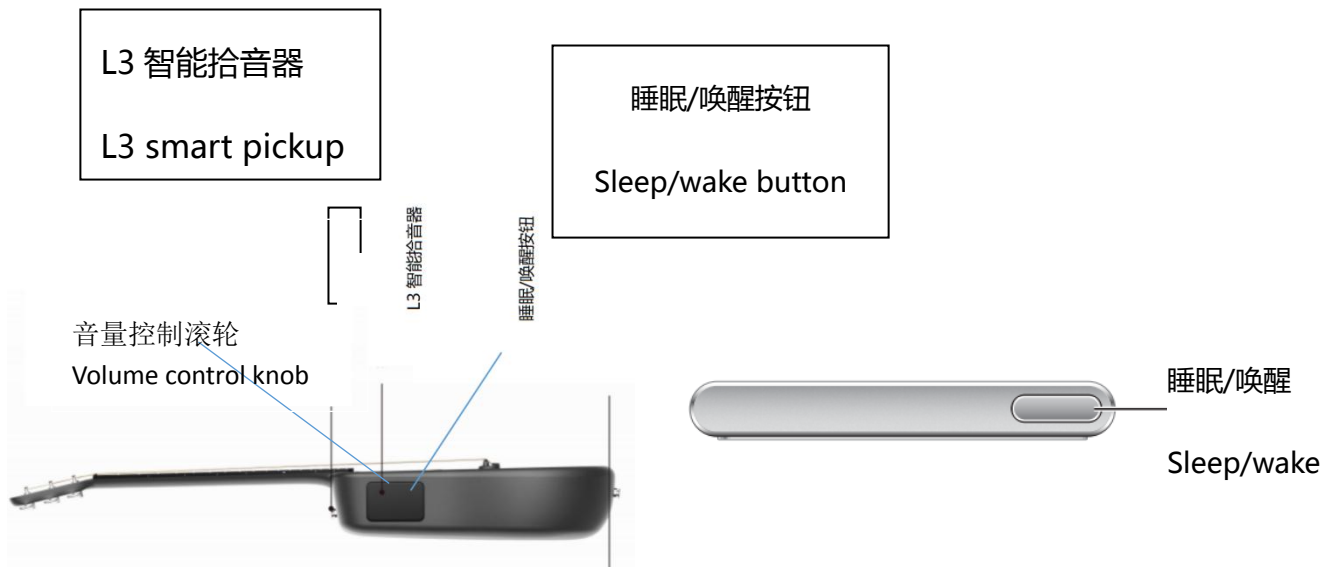

HILAVA 系统

HILAVA system

状态栏、多点触控屏、菜单和应用程序图标

Status bar, multi-touch screen, menu and application icons

二. 激活你的 LAVA ME 3

II. Activating Your LAVA ME 3

设置

Setting

WiFi 为使激活程序顺利进行，请通过无线局域网接入互联网（需要网络名称和密码）

WiFi To make the activation program go smoothly, please connect to the Internet via wireless LAN (network name and password are required)

激活&注册

Activation & registration

- 开始使用 HILAVA 系统前，请先在手机端安装官方 App “拿火+”。

Before using the HILAVA system, please install the official App "LAVA+" on the mobile phone.

- 手机端注册 “LAVA ID” 或者使用现有账户。

Register your LAVA ID on your mobile phone or use an existing account.

- 使用手机端官方 App “拿火+” 扫描二维码，激活吉他端的 HILAVA 系统，开始使用你神奇的 LAVA ME 3 吧。

Scan the QR code by using the official mobile app "LAVA+", activate the HILAVA system on the guitar side, and start using your magical LAVA ME 3.

三. 快速掌握 LAVA ME 3

III. Quickly Mastering Your LAVA ME 3

了解 LAVA ME 3 的硬件操作

Understanding the hardware of your LAVA ME 3

若要 To	请这样操作 Please do this
开机 Boot up	请按住睡眠/唤醒按钮几秒钟，直至 LAVA 的标志出现。 Please press and hold the Sleep/Wake button for a few seconds until the LAVA logo appears.
关机 / 重启 Shutdown/restart	请按住睡眠/唤醒按钮几秒钟，当出现关机和重启选项后，通过左右滑动来选择。 Please press and hold the Sleep/Wake button for a few seconds. When the shutdown and restart tabs appear, slide left and right for selection.
唤醒 / 关闭屏幕 Wake/close screen	LAVA ME 3 会在您闲置时关闭显示屏以节省电量，当您需要使用时，您可以通过轻点屏幕来唤醒 HILAVA 系统，也可以通过按压唤醒按钮快速唤醒和使用，您也可以在“设置”（ 设置 icon ）“显示与亮度”中设置自动锁定时长或者关闭此功能。 LAVA ME 3 will turn off the display screen when you are idle to save power. When needing to use it, you can wake up the HILAVA system by tapping the screen, or you can quickly wake up and use it by pressing the Wake button. You can also set the auto lock duration in "Setting" (Setting icon) "Display and Brightness" or turn off this function.
截屏 creenshot	连续快速按压两次唤醒按钮，直到屏幕上的截屏图片呈现。 Press the Wake button twice in rapid succession until the screenshot on the screen appears.
调整音量 Volume adjustment	通过拨动音量滚轮，快速调整音量大小，以适应您的演奏需求。 You can quickly adjust the volume to accommodate your performance needs by turning the volume knob.
强制关机 Forced shutdown	按压唤醒按钮 7 秒可强制关机，等待 5 秒后，再进行开机操作即可。 Press the Wake button for 7 seconds to force a shutdown, wait 5 seconds, and then power it on.








了解与 LAVA ME 3 交互的基本手势

Understanding the basic gestures for interacting with the LAVA ME 3

您可以参照以下手势更快更准确的与 LAVA ME 3 交互

You can interact with LAVA ME 3 faster and more accurately by reference to the

following gestures

手势 Gesture	描述 Description
	<p>轻点。 Tap. 用单指轻触屏幕。 Tap the screen with one finger.</p>
	<p>轻扫。 Swipe 单指快速移过屏幕。 Move one finger across the screen quickly.</p>
	<p>滚动。 Scroll. 单指移过屏幕而不抬起。 Move one finger across the screen without lifting it. 例如，在“LOOP”中，您可以上下拖移列表来查看更多内容。 For example, in "LOOP", you can drag the list up and down to view more content. 轻扫即可快速滚动；触碰屏幕即可停止滚动。 Swipe to scroll quickly; touch the screen to stop scrolling.</p>
	<p>缩放。 Zoom. 双指靠近放在屏幕上。 Place two fingers close together on the screen. 分开双指即可放大；合拢双指即可缩小。 Move two fingers apart to zoom in; move two fingers together to zoom out. 您也可以轻点两下照片以将其放大，再次轻点两下以缩小。 You can also double-tap the photo to zoom in, and double-tap again to zoom out.</p>
	<p>前往主屏幕。 Go to the home screen. 无论何时，从屏幕底部边缘向上轻扫即可返回主屏幕。 At any time, swipe up from the bottom edge of the screen to return to the home screen.</p>
	<p>快速访问控制。 Fast access controls. 从屏幕上方向下轻扫以打开控制中心。 Swipe down from the top of the screen to open the control center.</p>
	<p>打开 App 切换器。 Open the App switcher. 从底部边缘向上轻扫并在屏幕中间停顿一下，然后从屏幕上抬起手指。</p>



	<p>Swipe up from the bottom edge and pause in the middle of the screen, then lift your finger from the screen.</p> <p>若要浏览打开的 App，请向右轻扫，然后轻点要使用的 App。</p> <p>To browse open App, swipe right, then tap the App you want to use.</p>
--	---




四. 了解 LAVA ME 3 状态图标含义

IV.Understand the meaning of LAVA ME 3 status icons

通过了解顶部状态图标来更好的了解你的 LAVA ME 3 工作状态

Gain a better understanding of the working statuses of your LAVA ME 3 by understanding the status icons at the top

状态图标 Status icon	含义 Meaning
	<p>无线局域网 LAVA ME 3 已通过无线局域网接入互联网。</p> <p>Wireless LAN LAVA ME 3 has been connected to the Internet through wireless LAN.</p>
	<p>蓝牙 LAVA ME 3 已打开了蓝牙连接。</p> <p>Bluetooth LAVA ME 3 has opened the Bluetooth connection.</p>
	<p>接线模式 LAVA ME 3 声音通过连接音频线输出到外接设备。</p> <p>Wiring mode The sound of LAVA ME 3 is output to the external device by connecting the audio cable.</p>
	<p>录制指示器 显示屏的左上角红色气泡，表示 LAVA ME 3 正在录屏，点击可跳转相关内容。</p> <p>Recording indicator The red bubble in the upper left corner of the display screen indicates that LAVA ME 3 is recording the screen. Click to jump to related content.</p>
	<p>效果指示器 显示屏的左上角图标，表示效果在 LAVA ME 3 运行中，点击可跳转相关内容。</p> <p>Effect indicator The icon in the upper left corner of the display screen</p>

	<p>indicates that the effect is running in LAVA ME 3. Click to jump to related content.</p>
	<p>节拍指示器 显示屏的左上角图标，表示节拍器在 LAVA ME 3 运行中，点击可跳转相关内容。</p> <p>Beat indicator The icon in the upper left corner of the display screen indicates that the metronome is running in LAVA ME 3. Click to jump to related content.</p>
	<p>电池 显示 LAVA ME 3 的电池电量。</p> <p>Battery Displays the battery capacity of LAVA ME 3.</p>
	<p>电池正在充电 显示 LAVA ME 3 电池正在充电。</p> <p>Battery is charging Shows that the LAVA ME 3 battery is charging.</p>

五. 给你的 LAVA ME 3 电池充电

 
V.Charge your LAVA ME 3 battery

电池充电

Battery charging

请使用 USB -C 充电线（随附）和 LAVA 15W USB-C 电源适配器（随附）将 LAVA ME 3 连接到电源插座。

Please connect the LAVA ME 3 to the power outlet using the USB-C charging cable (included) and the LAVA 15W USB-C power adapter (included).

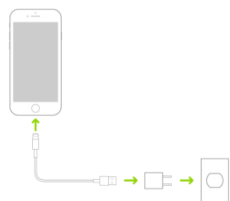

【注】您还可以使用符合适用的国家/地区法规及国际和地区安全性标准的第三方电源适配器和 CCC 认证的充电器。
[Note] You can also use third-party power adapters and CCC-certified chargers that comply with applicable national/regional regulations and international and regional safety standards.

充电显示

Charge display

屏幕右上角中的电池图标显示电池电量或充电状态。


The battery icon in the upper right corner of the screen displays the battery capacity or charging state. 若您在充电过程中使用 LAVA ME 3，可能需要较长时间才能充满电。

If you use LAVA ME 3 while charging, it may take longer to become fully charged.



如果 LAVA ME 3 电量极低，充电时会显示如下图标。

 If the battery capacity of LAVA ME 3 is extremely low, the following icon will be displayed when charging.

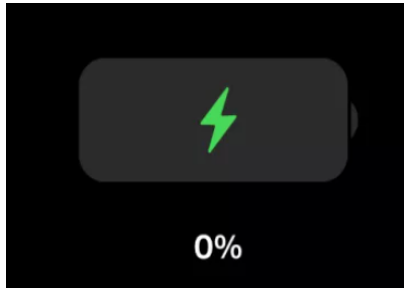

【注】随着时间的推移，所有可充电电池（如 LAVA ME 3 中的电池）的容量和性能都会下降，为了电池健康，请尽量减少在充电过程中使用 LAVA ME 3。

[Note] As time goes by, the capacity and performance of all rechargeable batteries (such as those in LAVA ME 3) will decrease. For the purpose of battery health, please minimize the use of LAVA ME 3 during charging.

六. 给你的 LAVA ME 3 换弦和微调

VI.Change strings and fine-tune your LAVA ME 3

如何换弦

How to change strings

如何换弦

How to change strings

当琴弦使用过久，我们可能需要更换新的琴弦。


When the strings are used for too long, we may need to replace them with new ones.



1

扭动弦准，将琴弦扭松，将琴弦的头部（只有金属线的一端）从弦准上取下：


Twist the tuner, loosen the string, and remove the head of the string (only one end of the metal wire) from the tuner;

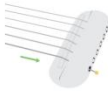

2

握紧琴弦，往琴身尾端轻推，琴弦尾部的小球从琴桥后方穿孔露出：

Hold the strings tightly and push them towards the end of the body. The small ball at the end of the string is exposed from the threading hole at the back of the bridge;

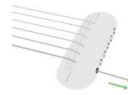

3

手抓琴弦尾部的小球，往后拉出琴弦：
Grasp the small ball at the end of the string and pull the string back;



4

将琴弦的头部，从后往琴头方向，穿过琴桥的穿孔：
Pass the head of the string through the threading hole of the bridge from the back to the head;



5

再穿进弦准的小孔内，并扭动弦准，让琴弦绷紧。
Then thread into the small hole of the tuner and twist the tuner to make the string tighten.

微调节方式

Fine-tuning

微调节方式

Fine-tuning method

琴颈整体无须调整，但可根据你的喜好，微调节琴弦与指板间的高度。

There is no need to adjust the whole neck, but you can fine-tune the height between the strings and the fingerboard according to your preferences.



1

扭动弦准，松开 6 条琴弦，至琴桥上的下弦枕能轻松取出：

Twist the string, and loosen 6 strings until the bone on the bridge can be easily taken out;



2

准备一张 800 目的砂纸，抓紧下弦枕顶部，将下弦枕底部在砂纸上轻轻打磨：

Prepare a piece of 800-mesh sandpaper, grasp the top of the bone, and lightly polish the bottom of the bone on the sandpaper;

3

根据你需要调整的弦距，调整下弦枕的高度。

According to the brace height you need to adjust, adjust the

★当下弦枕调低，弦枕将会相应降低。

★After the bone is lowered, the nut will be reduced accordingly.

在调整过程，请缓缓打磨，然后放回回琴桥上，尝试触感。


During the adjustment process, please polish slowly, and then put it back on the bridge to try the sense of touch.


切勿一次调整过度，下弦枕过矮，将无法感受最佳弹奏体验。

Never over-adjust at a time. If the bone is too short, you will not be able to feel the best playing experience.

七.

VII. 重要安全性信息 Important safety information

【警告】  为了避免您的 LAVA ME 3 受伤或损坏，在使用之前，请先阅读下面的安全性信息。

[Warning]  To avoid injury or damage to your LAVA ME 3, please read the following safety information before using.

维修 请勿擅自拆卸 L3 智能拾音器与琴体，以免操作不当导致损坏。

Maintenance Never disassemble the L3 smart pickup or body without authorization to avoid damage caused by improper handling.

如果 L3 智能拾音器或者琴体发生故障或已损坏，请联系 LAVA MUSIC 或授权经销商。

If the L3 smart pickup or the body malfunctions or is damaged, please contact LAVA MUSIC or an authorized dealer.

由除 LAVA MUSIC 或授权经销商以外的服务提供商进行修理时，可能不会兼顾琴体和 L3 智能拾音器，由此可能影响设备的安全性和功能。

When repaired by a service provider other than LAVA MUSIC or authorized dealers, the body and the L3 smart pickup may not be taken into consideration, which may affect the safety and functionality of the device. 您可以在 [LAVA MUSIC 官网](#) 上找到有关维修和服务的更多信息。

You can find more information about repairs and services on the [official website for LAVA MUSIC](#).

电池与电子元件

Battery and electronic components

请勿尝试自行更换 L3 智能拾音器内的锂离子电池。

Never try to replace the lithium-ion battery in the L3 smart pickup on your own.

智能拾音器内的锂离子电池应由 LAVA MUSIC 或授权经销商更换。

The lithium-ion battery in the L3 smart pickup shall be replaced by LAVA MUSIC or an authorized dealer.

更换或维修不当可能会损坏电池，导致过热而引发损坏。

Improper replacements or maintenance may damage the battery, resulting in overheating and damage.

由于 L3 智能拾音器内含高灵敏度电子元件，请于 -20°C- 45°C 范围下收藏，于 0°C- 40°C 范围下运作。

Since the L3 smart pickup contains highly sensitive electronic components, please store it in a range of -20°C-45°C, and operate it in a range of 0°C-40°C.

为避免损坏，请勿摔落、焚烧、踏压或接触高浓度工业化学品等。

To avoid damage, never drop, burn, step on, or have it come into contact with highly concentrated industrial chemicals.

无线充电 当您使用太空充电座给 LAVA ME 3 充电时，请正确放置于充电座的定位槽中；使用充电线与电源适配器充电时，请使用官方适配或使用符合适用的国家/地区法规及国际/地区安全性标准的适配器。

Wireless charging When charging the LAVA ME 3 with a space charging base, please place it in the slot on the charging base; when charging with the charging cable and

power adapter, please use the official adapter or use an adapter that complies with the applicable national/regional laws and regulations and international/regional safety standards.

八 . 配置与参数

Configuration and Parameters

L3 智能拾音器配置与充电配置

L3 smart pickup configuration and charging configuration

配置参数 Configuration parameters	LAVA ME 3 (38")	LAVA ME GO (36")
拾音器 Pickup	L3 智能拾音器 L3 smart pickup FreeBoost™ 2.0 原声增强技术 FreeBoost™ 2.0 original sound enhancement technology	L3 智能拾音器 L3 smart pickup FreeBoost™ 2.0 原声增强技术 FreeBoost™ 2.0 original sound enhancement technology
系统 System	HILAVA 系统 HILAVA system	HILAVA 系统 HILAVA system
内存 Memory	64GB	32GB
电池容量 Battery capacity	8300Ah/31.54Wh	8300Ah/31.54Wh
电源适配器 Power adapter	Type-C 接口太空适配器 5V / 3A Type-C space adapter 5V / 3A	Type-C 接口太空适配器 5V / 3A Type-C space adapter 5V / 3A
连接线 Connecting line	Type-C 直角连接线 2M / 3A Type-C right angle connecting line 2M / 3A	Type-C 直角连接线 2M / 3A Type-C right angle connecting line 2M / 3A
充电接口 Charging port	Type-C / 触点充电(需搭配太空充电座) Type-C / contact charging (required for use with a space charging base)	Type-C / 触点充电(需搭配太空充电座) Type-C / contact charging (required for use with a space charging base)

琴体设计

Body design

设计参数 Design parameters	LAVA ME 3 / LAVA ME GO
面板材料 Top materials	Super AirSonic 碳纤维复合材料 Super AirSonic carbon fiber reinforced plastic
琴体材料 Body materials	AirSonic 碳纤维复合材料 AirSonic carbon fiber reinforced plastic
琴桥材料 Bridge materials	高性能纤维复合材料 High performance fibrous composite
琴弦 String	Elixir Nanoweb 012 超薄镀膜 012
弦准 Tuner	18:1 超轻铝合金弦准 LAVA MUSIC 设计 18:1 ultra-light aluminum alloy tuner LAVA MUSIC design

九.

IX. 服务与支持

Service and Support

产品保修

Product Warranty

自您收到产品之日开始起，对保修期内及服务范围内的产品，LAVA MUSIC 将按照服务政策进行维修、更换或退货，免费为您恢复产品的正常使用功能；对保修期及服务范围之外的产品，LAVA MUSIC 将按照服务政策提供有偿维修服务。LAVA MUSIC 产品免费质保为一年。

From the date you receive the product, LAVA MUSIC will repair, replace, or return

the product within the warranty period and within the scope of service in accordance with the service policy, and restore the product to normal use for you free of charge; for products beyond the warranty period and service scope, LAVA MUSIC will provide paid maintenance services in accordance with the service policy. LAVA MUSIC products come with a one-year limited warranty.

无理由退换

No-questions-asked returns

自您收到产品之日起 7 日内，经拿火公司售后服务中心确认产品完好，且没有由于人为原因造成产品性能或外观损坏，您可以选择无理由退换，退货时请保持外包、附件、发票或收据、说明书、保修卡无缺失。无理由退换货物运费由客户承担。

If, within 7 days from the date of receipt, the after-sales service center of LAVA confirms that the product is in good condition, and there is no damage to product performance or appearance from user interference, you can choose to return for any reason. The product shall be provided with the outer packaging, accessories, invoices or receipts, manual, and warranty card when returned. The freight fee for goods returned and exchanged without reason shall be borne by the customer.

损毁维修

Repairs

产品如涉及人为损坏导致需要更换材料，拿火公司将对您进行有偿的材料更换或维修服务。

If the product has suffered users damage and requires material replacement, LAVA will provide you with paid material replacement or maintenance services.

如有其它特殊保修需求，请联系拿火天猫官方旗舰店客服，或拨打售后电话获得支持。

For other special warranty requirements, please contact customer service at the

LAVA official flagship store on Tmall, or call the after-sales number for support.

如需保修服务，需提供：

For warranty services, please provide:

需保修的产品照片，及说明原因

photos of the product to be guaranteed, and explain the reasons

购买发票或收据证明

purchase invoices or proof of receipt

或扫描二维码获取我们的帮助

or scan the QR code for our help

FCC Warning

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.