

# INSTRUCTIONS


1. Open the battery cover under the car, install 5 “AA” batteries properly according to the polarity diagram.
2. Open the battery cover on the back of the controller and install 4 “AA” batteries.
3. Turn the switch to the “ON” position located at the bottom of the car
4. Push the Start Button on front of the steering remote controller.

**27Mhz  
Frequency**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Trim Adjuster

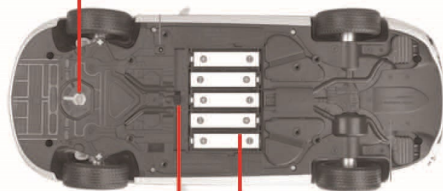

ON/OFF  
Power Switch

Battery Slot  
Use 5 "AA" Batteries  
(not included)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Mute / Sound Off  
Button


Stop / Break  
Button



Horn Button

Car Gear  
D = Forward  
N = Stop  
R = Reverse

Start Button

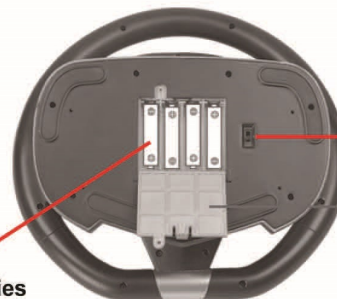

Battery Slot  
Use 4 "AA" Batteries  
(not included)

Controller Mode

Mode 1: Use remote control when is placed on a table or lap.

Mode 2: Use remote control freely with motion sensor only.