


2420—01 Product use instructions

Picture and operating instruction

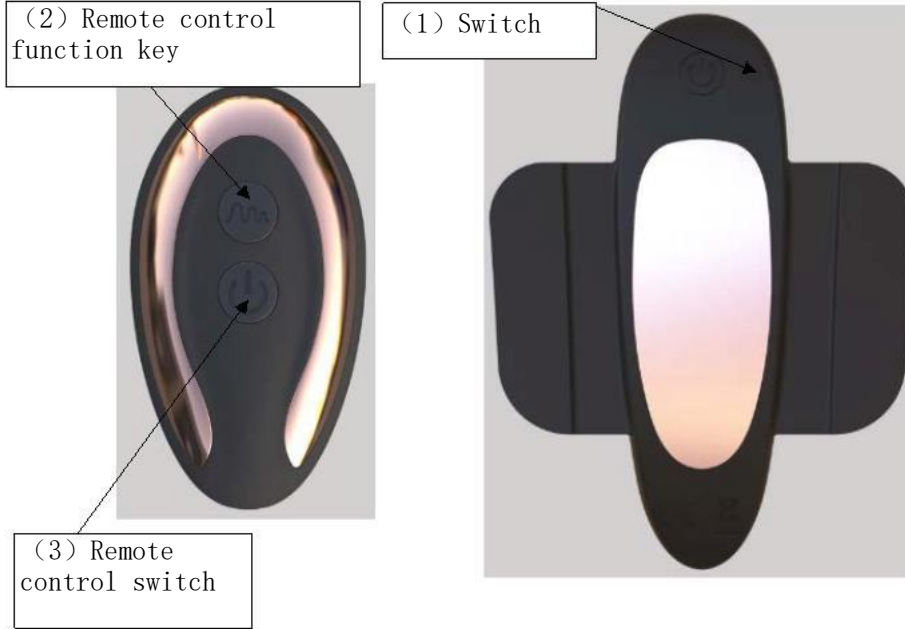

Function description

1. The trouser clip host can operate independently or remotely through the remote controller;
2. Operation of trouser clip host machine:
 - (1) . power on: long press the switch function key 1.5s to power on, the motor does not work at this time, the white light is on, if there is no operation in 30 minutes, it will automatically shut down;
 - (2) After the power on state, gently press the switch function key, the motor starts to work, and the first gear is turned on. Every time you press the frequency conversion button, the vibration mode is 10 frequency cycle;
 - (3) . power off: long press the switch function key 1.5s to power off, and the white light goes out;
 - (4) This product is a DC charging product. It can be fully charged in 150 minutes. The white light will flash when charging, and it will be on for a long time after charging.
3. Remote control function operation:
 - (1) Use 3V CR2032 button battery, remote control distance is not less than 10m.
 - (2) . when the host is on:
 - a. Long press the remote control on key for 2 seconds, and the LED light will be on for a long time, indicating that the remote control is on. If there is no operation in 30 minutes, the machine will be shut down automatically. Lightly press the remote control function key, and the motor of the main engine will start to work, and the first gear will be turned on. Every time you press the frequency conversion, the vibration mode is 10 frequency cycle
 - b. Press the remote control on key again, the LED light starts to flash twice, indicating that the remote control is off, and the main motor stops working. At this time, press any remote control key lightly, and the main motor stops working
 - (3) When the main engine is in standby mode, it receives the signal to start the first gear for the first time; when the main engine is in shutdown mode, press any remote control key, and the main engine motor will not work.

IP level

IP7 for main engine/No requirement for remote control

Noise

≤45db within 0.9 m

| | | | |
|---------------------|--|-----------------|----------------------|
| Nominal voltage | Launch: 3 V receive: 3.7 V power | Nominal | 0.5 W |
| Battery information | Launch:2030 button cell; Receive: Li-ion 200mAh | Charging time | 150 min |
| Power consumption | Top gear: 130 min, Lowest gear: 150 Minutes | USB | φ 2.5mm USB charging |
| Material | Silica gel+ABS | Color | BLK |
| | | | |
| Processing technic | Assembly process of silicone sheath | Remote distance | 10 M |

Warm advice:

1. the appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction;

2. children being supervised not to play with the appliance

For a part of class III construction supplied from a detachable power supply unit, the instructions state that the appliance is only to be used with the unit provided.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.