


User's Manual for 553190

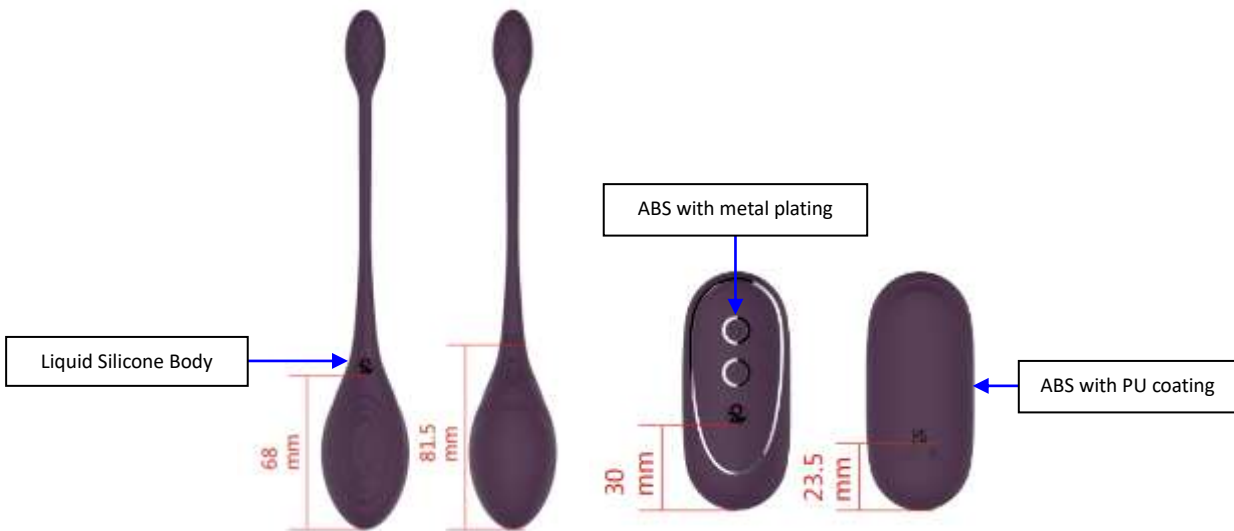

** GENERAL PRODUCT INFORMATION **

- Egg Material: Liquid Silicone
- Remote Material: ABS with metal plating + ABS with PU coating
- Vibration Function: 10 modes (3 speeds + 7 patterns)
- DC (pin) Rechargeable (both egg and remote)

** IMPORTANT NOTICE FOR INITIAL USE **

- Make sure the product is 100% dry before charging.
- Before first use, the vibrator needs to be charged between 4-6 hours using the designated DC charging cable (included).
- Normal Charging Time after the first use: 2 ~3 hours
- Indicator light on power button blinks: indicates that device is charging
- Indicator light steadily on: indicates that device is fully charged
- The Vibrator will run for 60 minutes on highest speed

OPERATING INSTRUCTIONS

a. Operating the EGG through its own buttons

- **To turn on toy & start the Vibration Function:**
 - **Enter StandBy Mode:** Press and hold button at the end of the egg's string for 2 seconds, vibration function does not start working automatically, indicator light is on. You're now on StandBy mode.
 - Short press the same button to start vibration function at speed 1, keep pressing to cycle between 3 speeds + 7 patterns.
 - Press and hold the same button for 2 seconds to turn device off, LED light is also off.


b. Operating the EGG through PAIR MODE (egg and remote work as a pair)

- **To turn on toy & enter pair mode:**


First, press and hold button at the end of the egg's string for 2 seconds, indicator light on the egg is on. You're now on StandBy mode.

Then press and hold the power button on the remote for 1.5 seconds, PAIR MODE is activated, but vibration function does not automatically start.

- **To start & operate the Vibration Function:**

While the toy & remote are both on Standby mode, short press  button on the remote to start vibration function and continue pressing the same button to cycle between 3 speeds + 7 patterns.

- **To pause/resume Vibration Function:**

At any point during use of the remote, vibration function can be paused by press & hold of  button for 1.5 seconds. And playback can be resumed by short pressing the same button on the remote again.

- **To turn off device:**

At any time, press and hold the button on the egg for 2 seconds to turn off device. **Please note that the remote cannot turn off the device.**

- **To turn off remote:**

At any time, press and hold the power button on the remote for 2 seconds to turn off remote. **Please note that the remote cannot turn off the device.**

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with FCC PART15 Rules. Operation is subject to the following two conditions:(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.