


User's Manual for 557064

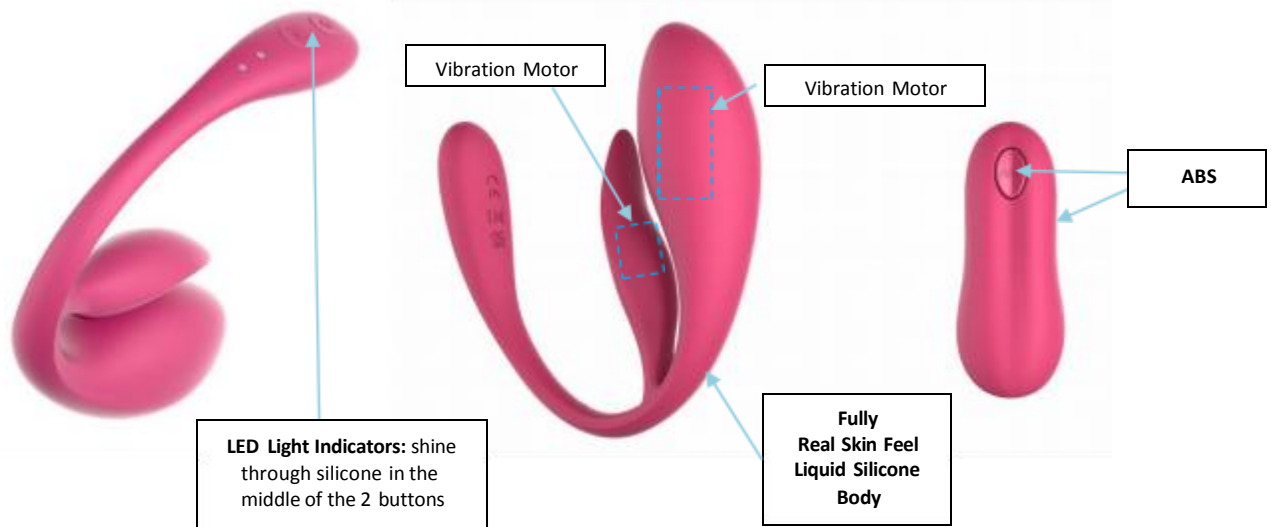

** GENERAL PRODUCT INFORMATION **

- Materials: RSF Liquid Silicone + ABS
- Magnetic Rechargeable (toy) + 1pc 23A 12V battery (non-rechargeable remote)
- Vibration Function: 10 modes (3 speeds + 7 patterns)


** IMPORTANT NOTICE FOR INITIAL USE **


- Make sure the product is 100% dry before charging.
- Before first use, the toy needs to be charged between 4-6 hours using the designated magnetic charging cable (included).
- Normal Charging Time after the first use: 2 ~3 hours
- Indicator light blinks: indicates that device is charging
- Indicator light steadily on: indicates that device is fully charged
- The toy will run for 60 minutes on highest speed


OPERATING INSTRUCTIONS

a. Operating the Toy through its own buttons

● To turn on toy & start the Vibration Function:

Enter StandBy Mode: Press and hold  button for 2 seconds, a 1 second haptic feedback is felt, but egg does not start working, pink LED light under the silicone in the middle of the 2 buttons is on. You're now on StandBy mode.


Short press  button to start vibration function at speed 1, keep pressing to cycle between 3 speeds + 7 patterns, pink LED light is constantly on while vibration function is working.


Short press  button to decrease the speed or go down to previous patterns, keep pressing to cycle between 3 speeds + 7 patterns, pink LED light is constantly on while vibration function is working.


- Press and hold  button for 2 seconds to turn toy off, LED light is also off.


b. Operating the Toy through PAIR MODE (toy and remote work as a pair)

● To start & operate the Vibration Function:


First, press and hold  button on toy for 2 seconds, pink LED light in the middle of the 2 buttons on the toy is on, a 1 second haptic feedback is felt. You're now on StandBy mode.

Short press  button on the remote to start vibration function at speed 1, keep pressing to cycle between 3 speeds + 7 patterns.

- Press and hold  button for 2 seconds to stop vibration, LED light on the egg is still on, the egg is now on StandBy mode.

NOTE: At any point during use of the remote, vibration function can be paused by press & hold of the  button on the egg for 2 seconds.

- **To turn off toy & remote:**

At any time, press and hold  button on the egg for 2 seconds to turn off both the toy & remote.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.