

# USER MANUAL

## SPECIFICATION

Color: Black  
Material: Silicon+ABS  
Weight: 109g  
Function: 10 Vibration Patterns  
Charge method: Magnetic Charging  
Charging time: 2H  
Working time: 1 H  
Waterproof: IPX-7  
Package Contents: Vibrator\*1  
USB Charging Cable\*1  
Instruction\*1


 
 
## GETTING IT CHARGED


Since the device may have discharged fully due to the environmental influences, we'd suggest you to fully charge it before your first use.

The charging process usually takes 120 minutes.

- Connect the charging pin to the device via the charging connector.
- When connected, the button LED will start flashing, and this means the charging has started.
- When it's fully charged, the button LED will off.
- One full charge can last for 60 minutes of joy.

## How to use

 1. Make sure your vibrator is fully charged before the first use. It will NOT work while charging!
2. Press the ON/OFF button  on the vibrator for 3 seconds to start the main motor.
3. Short press the Rabbit Motor Button  on the vibrator to start the rabbit vibrators at the same time.
4. Press the ON/OFF Power button  on the vibrator for 3 seconds to turn it off.

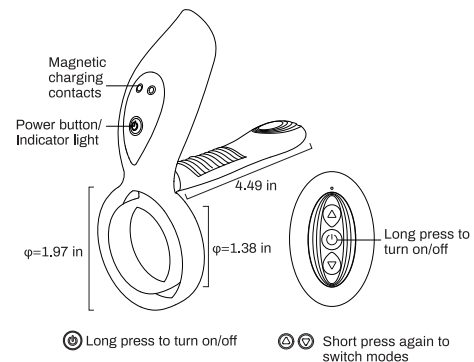

Note: The penis ring vibrator can be used alone or with remote control together, but whichever, need to turn on the product body firstly.

## Remote Control Operation

1. Press the ON/OFF Button on the vibrator for 3 seconds and the product is on standby.
2. Start the remote control by click the On/Off Key on the remote control.
3. Short click the Main Motor Button to start the main motor. Long press for 3 seconds to turn off the product.
4. Short click the Rabbit Motor Button to start the rabbit vibrators at the same time. Long press for 3 seconds to turn off the rabbit vibrators, The main motor is still working.
5. Press the ON/OFF Power button for 3 seconds to turn it off.

## HOW TO CLEAN & CARE FOR YOUR VIBRATOR

After you've had your fun, it's time for clean-up and after care. For both you, and your vibrator. You know what to do for yourself, so we'll only recommend the steps for your vibrator:

1. Clean the device with warm water and soap. And then run it through some hot water to wash any traces of soap.
2. Pat it dry with a clean lint-free cloth or microfiber towel so there is no fluff left on it
3. Store it within reach, so it's ready to grab whenever you're in the mood for some fun. Your nightstand is perfect. Make sure it doesn't touch other objects, or within reach for children.

## RECOMMENDATIONS

- This is an exclusively adults' product only. It does not serve as a form of contraception.
- This is for individual use only, even when used in couples' play.
- It must be kept away from children
- Avoid using excessive force to prevent injury.
- If some discomfort occurs, stop using the device immediately
- Check your device before & after usage to spot any damage. If damage occurs, do not use the device.
- Any questions or queries can be solved through our friendly and professional customer service via.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that

interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The device has been evaluated to meet general RF exposure requirements, the device can be used in portable exposure conditions without restriction