 



Thank you for purchasing the Vivitar Karaoke Microphone with Built-in Speaker, item ST64-KM-TA. Please read this manual before using your Karaoke Microphone.

A Closer Look

1. Power Button
2. Previous Track Button
3. Next Track Button
4. Pause/Play
5. Voice Change
6. Volume Up
7. Volume Down
8. Mic Volume Adjustment
9. Remix Adjustment
10. USB Port
11. Earphone Port
12. microSD Card Slot
13. Charging Port

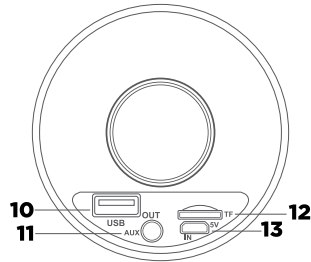

 
Control Panel

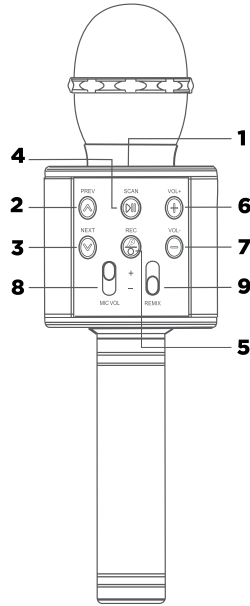

Charging the Microphone

Insert one end of the included USB charging cable into the charging port on your microphone.

 
Insert the other end into a suitable USB charging adapter. Make sure to charge the product fully before using it for the first time.

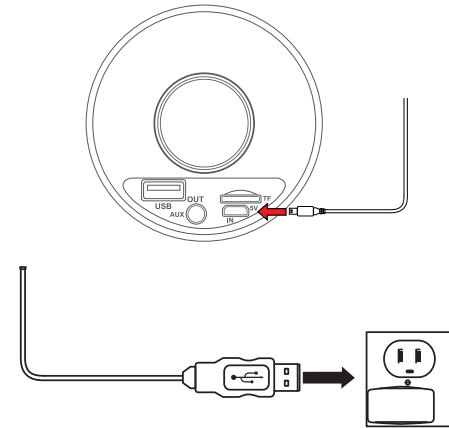

Bluetooth Pairing

1. Press and hold the power button to power the microphone ON/OFF.
2. Go to the Bluetooth settings menu on your phone. Make sure that Bluetooth is turned on. Connect to the device listed as "ST64-KM-TA"
3. Your microphone's True Wireless Pairing function allows you to pair two microphones together.

 To pair two microphones together, first power them both on. Double-press the power button on both microphones. After a few moments, they will automatically pair together. Once paired together, you will hear an audible noise prompt. You can then proceed to pair your microphones with your Bluetooth audio device.

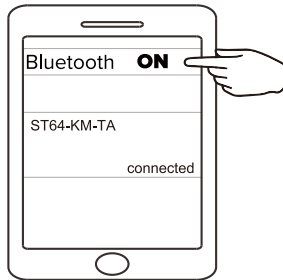

Turn off your microphones to disconnect your microphones from True Wireless Pairing mode.

Using the Microphone

Powering ON/OFF:

Press and hold the power button to turn ON/OFF.

Play/Pause:

Press the Play/Pause button to pause the currently playing music.

Adjusting Volume:

Press and hold the Volume Up button to increase the volume. Press and hold the Volume Down button to decrease the volume.

Adjusting Mic Volume and Reverb:

Push the Remix switch up to increase reverb and push it down to decrease it. Push the Mic Volume switch up to increase volume and push it down to decrease.

Voice Changer:

Press and hold the Voice change button to change between different voice modes.

Light:

Press the Voice change button to turn ON/OFF the microphone light.

Changing Modes:

Your microphone has a USB Port and a Micro SD Memory Card Slot. When a USB thumb drive or jump drive is inserted into the USB Port, your microphone will play any .MP3 music file stored on the drive. When a Micro SD memory card is inserted into the microSD Card Slot, your microphone will play any .MP3 music file stored on the card.



ITEM ST64-KM-TA
USER'S MANUAL

Karaoke Microphone

with Built-in Speaker

VIVITAR®

Contents

- Karaoke microphone with built-in speaker
- USB Charging Cable
- User's Manual

Specifications

- Battery Capacity:** 1200 mAh
- Speaker Power Output:** 3W (max)
- Speaker Frequency Range:** 100 Hz - 10 kHz

Features

- True wireless pairing, Pair 2 together!
- Includes rechargeable lithium battery
- Voice changer function built-in
- Echo function built-in
- 70% Volume for 2 hours

Safety Precautions

When using your Karaoke Microphone, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS BEFORE USING YOUR MICROPHONE.
2. Do not submerge microphone in water. Do not place microphone on wet surfaces.
3. Only clean using a clean, soft cloth.
4. Do not allow children to play with this product. This product contains small pieces that can be a choking hazard. Parental supervision is advised.
5. Do not expose product to excessive heat or fire.
6. Do not expose product to extreme cold or hot temperatures to avoid battery damage.
7. Do not attempt to repair this product yourself. Contact a qualified service center if the product is in need of service.
8. Do not throw, drop, crush, or expose your device to extreme physical trauma.
9. Do not use outdoors.
10. Unplug charging cable when not in use or during thunderstorms.
11. Keep out of reach from children and the infirm. Parental supervision is advised.
12. Please recycle or dispose of your device properly based on the laws and rules of your municipality. Contact local recycling facilities and/or the manufacturer of your device for further information.[]

FCC Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warranty

This warranty covers the original consumer purchaser only and is not transferable.

This warranty covers products that fail to function properly UNDER NORMAL USAGE, due to defects in material or workmanship. Your product will be repaired or replaced at no charge for parts or labor for a period of one year.

What Is Not Covered By Warranty

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

To Obtain Warranty Service and Troubleshooting Information:

Call 1-800-592-9541 or visit our website at www.vivitar.com.

To receive Warranty service along with the name and address of an authorized product service center, the original consumer purchaser must contact us for problem determination and service procedures. Proof of purchase in the form of a bill of sale or receipted invoice, evidencing that the product is within the applicable Warranty period(s), MUST be presented in order to obtain the requested service. It is your responsibility to properly package and send any defective products along with a dated copy of proof of purchase, a written explanation of the problem, and a valid return address of the authorized service center at your expense. Do not include any other items or accessories with the defective product. Any products received by the authorized service center that are not covered by warranty will be returned unrepaid.

VIVITAR®
© 2024 Sakar International
195 Carter Drive,
Edison, NJ 08817
Support: 800 592 9541
www.vivitar.com