

Contents

Safety Instructions	1-4
Product Diagram	5
Operating Instruction	ons 6-7
Cleaning & Mainten	nance 7
Specifications	7
Battery Disposal	8
Troubleshooting	9

IMPORTANT SAFETY INSTRUCTION

3) Do not use while bathing or in a shower.

When using this device, all instructions and basic precautions outlined in this document should be followed. Read all instructions before using (this appliance).

DANGER - To reduce the risk of electric shock: 1) Always unplug this device from the electrical outlet immediately after use and before

2) Do not reach for an appliance that has fallen into water. Unplug immediately.

4) Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid. 5) Do not use massager in close proximity to loose clothing or jewelry. 6) Keep long hair away from massager while in use.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to

1) Unplug from outlet when not in use, and before putting on or taking off parts.

2) The massager should never be left unattended when plugged in. Unplug from outlet when it is not in use. 3) Do not operate under blanket or pillow. Excessive heating can occur that might lead to fire, electric shock, or injury.

4) Avoid operating the massager with the air openings blocked. Keep the air openings free of lint, hair, and other fine particles.

5) Avoid inserting objects into any opening. 6) Avoid using outdoors.

wise, it may cause electric shock, short circuit or fire.

7) Avoid handling the electrical cord when your hands are wet. 8) Avoid carrying this device by its electrical cord or using the cord as a handle.

9) Keep the cord away from heated surfaces. If a fault is found, stop using the massager immediately, disconnect it from the power supply and contact the seller or manufactur-10) Remove the power plug from the socket immediately after power failure. Other-

11) Do not operate this device if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or submerged in water. Contact the seller or manufacturer for examination.

12) Use this massager only for its intended use as.described in this manual.Do not use attachments not recommended by the manufacturer. 13) The massager must only be supplied by a safe ow voltage corresponding to the

marking on the product. 14) The massager is only to be used with the power supply unit provided. 15) Close supervision is necessary when this appliance is used by, on, or near children,

invalids, or disabled persons.

16) As the surface of this product may get hot, those who are sensitive to heat should pay extra attention while using it to avoid minor burns. 17) This massager contains batteries that are non-replaceable.

18) For the purpose of recharging the battery, only use the detachable supply unit provided with this massager.

* If you fall under any of the following categories, it is recommended that you consult a physician prior to use: 1. If you are susceptible to electromagnetic malfunctions such as cardiac pacemakers

and implantable medical electronic devices. 2. If you have an inhibited sense of temperature.

3. If you have malignant tumor(s).

4. If you have heart disease. 5. If you are diabetic.

3

1

6. If you have scarring or tissue damage or have recently had surgery.

7. Do not operate where aerosol (spray) products are being used or where oxygen is being administered. 8. To disconnect, turn all controls to the off position, then remove plug from outlet.

9. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to battery pack, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents. 10. Recharge only with the charger specified by the manufacturer. A charger that is

suitable for one type of battery pack may create a risk of fire when used with another 11. Under abusive conditions, liquid may be ejected from the battery; avoid contact. If

contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the battery may cause irritation or burns.

appliances may exhibit unpredictable behavior resulting in fire, explosion or risk of 13. Do not expose a battery pack or appliance to fire or excessive temperature. Exposure to fire or temperature above 130°C may cause explosion.

12. Do not use an appliance that is damaged or modified. Damaged or modified

14. Follow all charging instructions and do not charge the battery pack or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the battery and increase $% \left\{ 1\right\} =\left\{ 1\right\}$ the risk of fire. 15. Have servicing performed by a qualified repair person using only identical replace-

 
ment parts. This will ensure that the safety of the product is maintained. 16. Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care. 17. Do not charge the massager in an environment where temperature is below 0

°C/32°F or above40°C/104°F, Charging improperly or at temperatures outside of the specified range may damage the battery and increase the risk of fire. 18. Do not use the massager in an environment where the temperature is higher than 50°C/122°F

SAVE THESE INSTRUCTIONS Certificate chargers list

Xiamen Innov Electronics Tech Co.,Ltd IVP1300-1800

Xiamen Eahunt Electronics Co., Ltd E27-1300-1800PU Guangdong Shanmusen Technology Co.,Ltd SMS-01130180-S20



es. If you have health concerns, consult your doctor before using this product. Do not use the massager in damp rooms (e.g. when bathing or showing)



• Do not put in the washing machine. • Do not dry clean!

4

6

2

USER MANUAL INSERTS FOR PART 15

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a

Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installa-

tion. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and

Consult the dealer or an experienced radio/TV technician for help.

Connect the equipment into an outlet on a circuit different from that to which the

(2) this device must accept any interference received, including interference that may cause undesired operation.

receiver is connected.

USER MANUAL FOR IC This device contains licence-exempt transmitter(s)/receiver(s) that comply

with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions: 1. This device may not cause interference. 2. This device must accept any interference, including interference that may

cause undesired operation of the device. L'émetteur/récepteur exempt de licence contenu dans le présent appareil est


conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: 1. L'appareil ne doit pas produire de brouillage;

 
brouillage est susceptible d'en compromettre le fonctionnement.

2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le

PRODUCT DIAGRAM

5

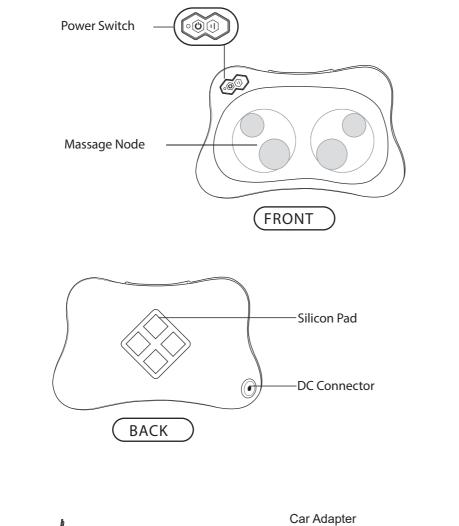







OPERATING INSTRUCTIONS

Ensure the device is charged and ready for use. Power Switch Button: (也)

Press it once, the product will start its kneading massage and heat therapy for 20 minutes. Press it again, the product will stop its heat therapy while the kneading

massage continues. Press for 3 seconds to stop massage session and all functions. Speed Button: (I)

When the product is turned on, the speed will be on the highest level. Press once to adjust to a lower speed and continue pressing until the desired speed is reached.

blinking for 10 seconds.

Bluetooth®: The GLOW massage pillow has a Bluetooth function that can connect to the Addaday

Using Bluetooth connectivity, the Addaday App enables you to: 1. Turn the heating function ON/OFF. 2. Select the Low/High/Auto massage options.

3. Check your massage device usage history.

Charging: Only use the approved charger that came with your device. The battery light will glow red while charging and green once the battery is fully charged. When the product is not use, it should be unplugged.

8

MASSAGE POSITION



Before cleaning, be sure that the power switch is in the off position and the device is unplugged from its power source. Use a dry cloth to clean the product.

2. Maintenance Keep the product clean and away from damp or wet environments.

product or it may fade. PRODUCT SPECIFICATIONS

Item Code:

Product Name

Attention

L		
	Rated Input:	13V 1.8A
	Power Consumption	23.4W
	Default Time	20 mins
	Battery Specifications	11.1V 1800mAh
9		

Please do not use benzene or thinner and other aggressive detergents to clean the

BIO68095

GLOW

Remove the built - in battery when disposing of the massager. • Please make sure that the battery is disposed of at a qualified disposal location. The instructions and graphic below are intended only for guidance on massager


disposal; it is not intended to be used for repairs.

1

Dismantling the appliance yourself is not recommended as it may cause damage or malfunctions and will void the warranty. Unplug the AC adapter from the appliance before disassembling it. •Turn on the power and then keep the power on until the battery is completely discharged.

REMOVING THE BUILT-IN RECHARGEABLE BATTERY

Perform steps ① to ② and lift the battery, and then remove it.

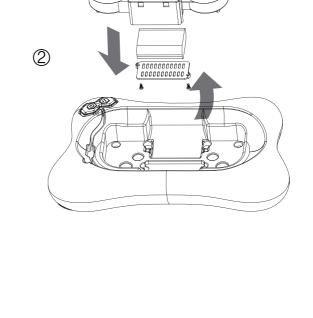

10

device.

9				
	TROUBLES	HOOTING		
	TROUBLES!	HOOTING Cause	Solution	7

Recharge with The battery has run down. appliance stops This does not The appliance

Unplug the

device from power source.

The device is

charging.

plugged in and

during use. automatically indicate a stops after problem. approximately 20 minutes. The main The appliance Use under the unit does may not work recommendedbeyond the not heat temperature of 59 °F - 95 °F recommended up.

If you still have problems after trying the solutions above, please contact addaday@addaday.com

temperature.

11