 


E100

TRUE WIRELESS STEREO EARPHONES
USER MANUAL


OVERVIEW

Choose Ear TIPS

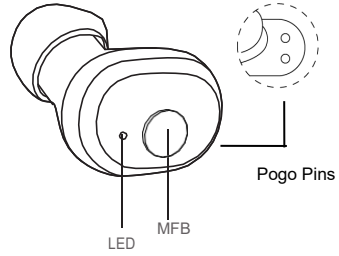

It is recommended you try middle EarTips first, it fits most people

(For first time pairing)

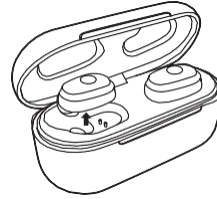


Take out both two Earphones, then re-insert them into the case to activate the earphones

Notes: If Earphones fail to be charged, please charge the case via USB cable (for details, please follow the below steps)

How to Pair

Put both Earphones into charging case to activate them, then take out both Earphones will auto power on and pair with each other. After the LED for left Earphone turns blue and red, right Earphone turns blue. Search E100 on mobile phone and connect it.

(Notes: If fail to connect, please try the following steps by hands.)

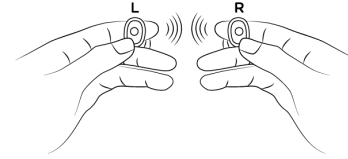

- Put the earphone back to the charging case to charging mode, LED solid red
- Press and hold on both earphones for 8s, until the LED blue blink 4 times then back to LED red
- Take them out, two earphones will auto pair with each other


Two Earphones will auto pair with each other. When LED on right Earphone turns blue and red, left Earphone turns blue, it means both sides connected successfully.

Search for E100 on mobile phone and connect it

FUNCTIONS


Power-on

Method 1: take earphones out from the charging case and they will auto power on (LED solid blue) (Make sure there has power in charging case)
Method 2: Power off earphones and hold MFB for 2s to power on (LED glows solid blue)

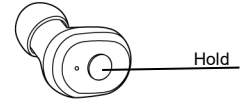


Power-off

- Put earphones back into the charging case, it will auto power off (red LED will turn on for 1s)
- Hold MFB for 3s (red LED will turn on for 1s)

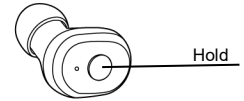


Reject Call

Press and Hold MFB for 2s to reject the incoming call

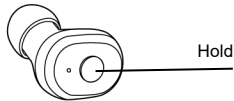


Answer Call

Press MFB to answer the incoming call and press again to end it

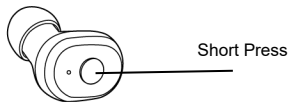


Switch Audio Output

During calling, press and hold MFB for 2s to switch audio output between mobile phone and earphones

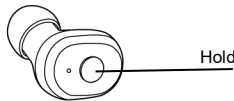


Mute-on/off

During calling, double press MFB to switch mute on/off

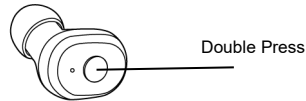


Play/ Pause

When listening to music, press MFB once to play / pause

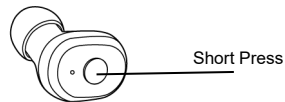


Skip Track Forward /backward

During playing, double press MFB on right Earphone to next song, double press MFB on left Earphone to last song

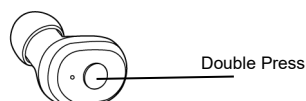

Voice Assistant

When standby, press and hold MFB for 2s to activate voice assistant (like Siri)

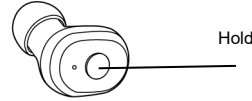

Charge the Earphones

Insert the earphones into the charging case. LED will be solid red when charging, after full charged, turn to blue for 1 min, then turn off

Charge the case

Please charge the case via USB cable, White LED flashes when charging, turn to solid White when full charged, When low battery, blue LED flashes

PRODUCT PARAMETER

Model: E100
Operation Range: 10m (with no obstacle)
Bluetooth version: V5.0
Charging time: approx 2hr
Music time: approx 4 hr
Battery type: Li-ion
Bluetooth Profiles: HFP/HSP/A2DP/AVRCP
Battery capacity (earphones): 3.7V/ 40mAh
Battery capacity (charging case): 3.7V/ 600 mAh
(All technical data shall be subject to practical performance.)

Notes: Please arrange using time properly as your hearing may be damaged by using the device for a long time

TIPS

- Before using the Earphones, please read the manual carefully and keep it for future references
- The Earphones need to be fully charged prior to first-time use
- If the Earphones are left unused for over two weeks, please recharge it periodically

- Please use the chargers made by qualified manufacturer
- If the Earphones cannot be found by your phone, please check whether it is in pairing mode; if left unconnected for a long while, the Earphones will exit pairing mode, please re-enter the mode, if a procedure error of your phone occurs, reboot it, if a procedure error of the Earphones occurs, reboot or reset it

WARNING

- Never disassemble or modify your Earphones for any reasons to avoid any damages and danger
- Do not store the Earphones in extreme temperatures (under 0 to 45)
- Avoid using the indicator close to the eyes of children or animals
- Do not use this Earphones during a thunder storm to avoid irregular function and increased risk of electric shock
- Do not use harsh chemicals or strong detergents to clean the Earphones
- Keep the Earphones dry

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.