


RSL wireless remote control

Model: RSW888T

Operating elements

Upper button- **ON**
Down button- **OFF**

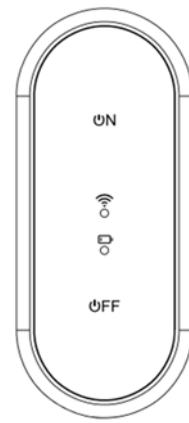

Inserting/replacing battery

1. Remove the battery compartment lid from the back of the remote control.
2. Insert one round cell battery, type CR2032, into the battery recess. The positive pole should face upward (see the "+" imprint on the battery). Push the battery all the way into the battery recess.
3. Close the battery compartment. The battery must be replaced when the remote control's range decreases noticeably or when the indicator lamp no longer lights when a button is pushed.

Key functions

- Two control key: upper = **ON**/ down = **OFF**.
- Use the upper key to turn ON receiver.
- Use the down key to turn OFF receiver.

The signal indicator lamp lights up each time a key is pressed.

The battery indicator lamp will flash when the battery runs low.

The remote control can control an unlimited number of compatible plugs.

Technical data

Battery typeCR2032
Number of channels1 channel
Transmission frequency.....433.92 MHz
Transmission rangemax. 150ft (in open area)
IP code.....IP55
Dimensions (W x H x D)78 x 32x 15 mm

Notice

Do not ingest battery, Chemical Burn Hazard

This product contains a coin / button cell battery. If the coin / button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

FCC statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment