

材质:128g铜版纸(双铜)  
规格:70\*90mm 正反印刷/风琴折页

70mm

90mm

**INSTRUCTION MANUAL**

**I. Product Introduction**

**1. Packing List**  
Type-C Cable\*1+AUX Cable\*1+Manual\*1

**2. Product Buttons Overview**

**II. Use Instruction**

**1. Buttons Instruction**

**Before use, please slide the switch to ON to turn on the Product.**  
**After use, please slide the switch to OFF to turn off the Product to save energy.**

**Switch:**  
ON: Powered on OFF: Powered off

**Lighting Adjustment & Clock Display Button:**

① First short press of this button to turn on the warm white light, the clock display will light up at the same time, second short press to turn on the automatic switching mode of colorful lights, third short press to turn off the lights and clock.

② When the warm white light is on, long press of this button to adjust the light brightness. The light has memory function which returns to the same lighting mode of last use.

③ When the light is turned off, long press of this button to turn on/off the clock display separately (Note: The clock has a memory function which returns to the same mode of last use.)

**M Bluetooth Button:**

① Short press this button to turn on the Bluetooth function (there is a message tone of "Bluetooth Mode"), long press to turn off the Bluetooth function (there is a message tone of "Bluetooth OFF").

**Note:**  
**(a) The Bluetooth function will be automatically turned off if the bluetooth hasn't been connected to the Product after 10 minutes of turning on the Product.**  
**(b) Disconnect bluetooth in the middle of use (there is a message tone of "Disconnected")**

② After turning on the Bluetooth function, you can connect and play music through the following devices:  
(a) Mobile Phone  
Please turn on the bluetooth of your mobile phone, search for the device WH-J08 and connect to it(there is a message tone of "Connected" when successfully connected).

(b) Computer/Laptop  
**(Note: The computer/laptop needs to have Bluetooth function.)**  
Please search for "Devices" of your computer/laptop, select "Add Bluetooth and other devices", then search for the device WH-J08 and connect to it(there is a message tone of "Connected" when successfully connected).

**(Note: If the Product still can not play music, please check whether the computer has been switched to the Bluetooth mode and whether the bluetooth of the computer has been successfully connected to the Product.)**

**Volume Adjustment & Music Selection Button:**

- Short press to turn up the volume, long press to switch to the next song
- Short press to turn down the volume, long press to switch to the previous song

**Clock Setting Button:**  
**When the clock display is on, you can set the clock with this button.**  
Long press / for about 1S, the hour/minutes numbers of the clock will move automatically, then short press to fix the hour/minute of the clock.

**AUX Mode:**  
**The AUX mode can only be used after the Bluetooth function is turned on.**  
Please plug one end of the AUX audio cable into the AUX Cable input(next to Charging Indicator) and plug the other end into your computer/laptop, mobile phone, tablet, MP3, etc. After being connected successfully, the Product can play music of your computer/laptop, mobile phone, etc.

**Note:**  
**(a) Under AUX mode, the music volume can only be adjusted through your computer/laptop, mobile phones, tablets, MP3, etc. You cannot adjust the volume through the Product.**

**(b) When the AUX audio cable is unplugged from the Product, the Product will automatically switch to the Bluetooth connection mode (with a message tone "Bluetooth Mode").**

**2. Bluetooth Connection Note**

① If the Product has been connected via bluetooth to your computer/laptop, mobile phone, tablet, MP3, etc, it will automatically connect to the last connected device after powering on.

② When the Product is being connected via bluetooth to a device, the Product cannot be connected to another device.

**3. Charging Instruction**

① Please fully charge the Product before first use.

② Please DO NOT dismantle, crash, squeeze the Product, or throw the Product into fire. If there is severe swelling and heat, please do not continue to use it, Please do not place it in a high temperature environment.

③ Please connect the Product to a suitable adapter(5V/1A), power bank, or laptop for power supply.

④ The charging time depends on the power supply device.

⑤ Charging Indicator: The power indicator lights up in red when charging and lights up in green when fully charged.

**III. Parameter Information**

Product Name	Creative Portable Bluetooth Speaker
Product Model	WH-J08
Product Size	75*140*160mm
Product Color	graphite color
Product Specification	bluetooth clock
Battery Capacity	1800mAh
Input Parameter	5V=1A
Rated Power	5W MAX

**IV. Warning**

1. The Product has a built-in lithium battery. Please DO NOT disassemble the Product by yourself.

2. Please DO NOT use the Product in humid and high-temperature environments.

3. The light source of the Product cannot be replaced. When the light source expires, please replace the whole Product.

4. Please cut off the power when you have not used the Product for a long time. We recommended charging the Product every 30 days to prevent shortening of the life of the lithium battery.

5. When the Product is in regular use, please DO NOT place it on an inclined surface with the slope greater than 6°.

6. Please use an adapter with compliance certification.

7. The Product is not advised for children under 14 to use.

8. Please DO NOT dispose, discard or dump unsorted municipal waste. Please use separate collection facilities for collecting the Product and other electrical appliances. Please contact your local government for information about the collection system and other necessary collection information. Please DO NOT discard or dump the Product and other electrical appliances in landfills or at will, the hazardous substances will seep into groundwater, enter the food chain, and damage people's health and well-being.

**FCC Warning:**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The Product complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) the Product may not cause harmful interference, and  
(2) the Product must accept any interference received, including interference that may cause undesired operation.

Note: The Product has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. The Product generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the Product does cause harmful interference to radio or television reception, which can be determined by turning the Product off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the Product and receiver.
- Connect the Product into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

**The device has been evaluated to meet general RF exposure requirement. The device can be used in the portable exposure condition without restriction.**