

hotpepper Arbol

USER GUIDE

Thank you for choosing Arbol, your device comes with a 8.0 inch IPS screen, Quad-core CPU, makes it easy on third-party applications 13.0 development. The main features including 4G networks, 3G networks, Wifi, BT, GPS, FM, voice calls, etc. With wireless communication and Internet access, you can surf the internet anytime, anywhere. Embedded high-precision GPS modules can be used for navigation by installing map software. Sensors provide you a new operation and entertainment experience. Dual HD camera leading electronic consumer era into a new stage of Pocket Internet entertainment. This manual systematically introduces the functions, operating tips and precautions, please read this manual carefully before operating.

1. Using your MID safely

On The Road

Using a MID while driving is illegal in many countries. Please follow local laws and drive safely at all times.

Near Sensitive Electronics

Don't use your MID near sensitive electronic equipment – particularly medical devices such as pacemakers – as it could cause them to malfunction. It can also interfere with the operation of fire detectors and other automatic-control equipment.

For more information about how your MID affects pacemakers or other electronic equipment, please contact the manufacturer or your local distributor.

Your MID may cause interference when used near TVs, radios or automated office equipment.

While Flying

Your MID can cause interference with aircraft equipment. So it's essential you follow airline regulations. And if airline personnel ask you to switch off your MID, or disable its wireless functions, please do as they say.

In Hospital

our MID may interfere with the normal operation of medical equipment. Follow all hospital regulations and turn it off when you're asked to by posted warnings or medical staff.

2

At a Petrol Station

Don't use your MID at petrol stations. In fact, it's always best to switch off whenever you're near fuels, chemicals or explosives.

Around Water

Keep your MID away from water (or any other liquid). It's not a waterproof model.

Making Repairs

Never take your MID apart. Please leave that to the professionals. Unauthorised repairs could break the terms of your warranty.

Broken Antenna

Don't use your MID if the antenna is damaged, as it could cause injury.

Around Children

Keep your mobile out of children's reach. It should never be used as a toy and it might not be good for their health.

Original Accessories

Only use the original accessories supplied with your MID or those approved by the manufacturer. Using unapproved accessories may affect performance, make the warranty void, break national regulations on the use of mobile MIDs, or even cause injury.

Near Explosives

Turn off your MID in or near areas where explosive materials are used. Always obey local laws and turn off your MID when requested.

Emergency Calls

To make an emergency call your MID must be turned on and in an area where there's network coverage. Dial the national emergency number and press 'send'. Explain exactly where you are and don't hang up until help has arrived.

3

Working Temperature

The working temperature for the MID is between 0 Degree and 40 Degree Celsius. Please don't use the MID outside the range. Using the MID under too high or too low temperature might cause problems.















At very high volume, prolonged listening to a mobile MID can damage your hearing.

2. Your MID



3. Description Icons

Icons	Descriptions	Icons	Descriptions
	Shows the MID's network signal strength.		Show the MID's battery capacity.
	Speaker has been activated.		You have unread SMS.
	Call on hold		Flight Mode
	The ringing type is set on Vibration.		Data network in use.
	Wi-fi is ON		A clock alarm is active.
	You have missed calls.		Bluetooth ON

4

4. Charging the battery

The rechargeable Li-ion battery that comes with your MID is ready to be used, but is not charged. It is easy to do & can be done in 3 simple steps below:

1. Connect the charger to your MID, and plug it into a socket.
2. The battery indicator in the corner of the screen will scroll to show you it's charging.
3. When fully charged, the battery indicator will stop scrolling.
4. Disconnect the charger from your mobile, and unplug.

5. Power ON/OFF

Press the power key to power-ON/OFF the MID. When you turn your MID on, it'll automatically check the SIM and show the following information on screen:

Input SIM PIN: If you've set a PIN for your SIM.

Note:

The PIN is supplied with your SIM. Please replace it with your own PIN code as soon as possible. Enter the wrong PIN three times, and your SIM will be locked. Then you'll need to contact your network service provider to ask for a PUK code to unlock it.

6. Enter Main Menu

In Idle mode, press the Menu key to enter the main menu on the desktop and click the Home key to return.

7. Enter Sub Menu

Once at the main menu, click the icon to select the submenu, press Back Key to return to the previous menu, and press the Home Screen to return to the home screen.

8. Use Notification Panel

As a new notification appears in the notification area, slide down in the area to view the contents of the notification.

9. Expand Main Interface

The main interface may extend and exceed the screen width to provide more space for newly added shortcuts and tools. Slide your finger horizontally on the main interface to extend to right area of the main interface.

5

10. Add icons on the main interface

You can long press the icon on the main menu until it's enlarged and the tablet MID vibrates, and copies the icons in the main menu to the main interface.

11. Move icons on the main interface

1. Long press the icon on the main interface until it's enlarged and the tablet MID vibrates.
2. Drag the icon to the desired position and then release it.

12. Delete icons on the main interface

1. Long press the icon on the main interface until it's enlarged and the tablet MID vibrates.
2. Drag the icon to "Remove" to delete it.

13. Change wallpapers

1. press menu to open the menu.
2. Click WALLPAPERS to select the wallpaper and press "Set wallpaper" to complete.

14. Install APK through File Manager

APK is a supported file format for the Android tablet operating system.

- a) Please copy the downloaded APK file into the SD card, and then insert the SD card into the MID.
- b) In Idle mode, click Main Menu to enter the main menu.
- c) Click "File Manager" to enter the directory of SD card.
- d) Click the APK file you wish to install, and follow the installation wizard.

15. Wi-Fi

Your tablet MID supports Wi-Fi which allows you to connect with a Wireless connection. This is useful for surfing internet on MID

- a. Enter "Settings" interface & search WIRELESS & NETWORKS. Select the network you want to connect.

6

16. Taking Care of your Device

Your device is a product of superior design and craftsmanship and should be handled with care: The following suggestions will help you protect your MID:

1. Always keep the small parts of the MID away from children.
2. Keep the device dry. Precipitation, humidity, and all types of liquids or moisture can contain minerals that will rust electronic circuits. If your device does get wet, remove the battery, and allow the device to dry completely before replacing it.
3. Do not use or store the device in dusty, dirty areas. Its moving parts and electronic components can be damaged.
4. Do not store the device in high or cold temperature. High temperatures can shorten the life of electronic devices and damage batteries.
5. Do not attempt to open the device other than as instructed in this guide.
6. Do not drop, knock, or shake the device. Rough handling can break internal circuit boards and fine mechanics.
7. Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the device. Only use a soft, clean, dry cloth to clean the surface of the device.
8. Do not paint the device. Paint can clog the moving parts and prevent proper operation.
9. Use indoor chargers.
10. If you are not accustomed to use Fingerprint key as Back key or not accustomed to use the MID with a single key, you can make the "Show the navigation bar" option checked in Settings->Display.

Android is a trademark of Google LLC.

7

总 度 280x120mm, 双 四折 折后 70x120mm
材 128g 版纸

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This Tablet meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies.

The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: Tablet has also been tested against this SAR limit. This device was tested for typical body-worn operations with the back of the phone kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the phone. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.