



Printer User Manual

Model: P1



Please read the manual carefully before using the product

Buttons/Interface Description

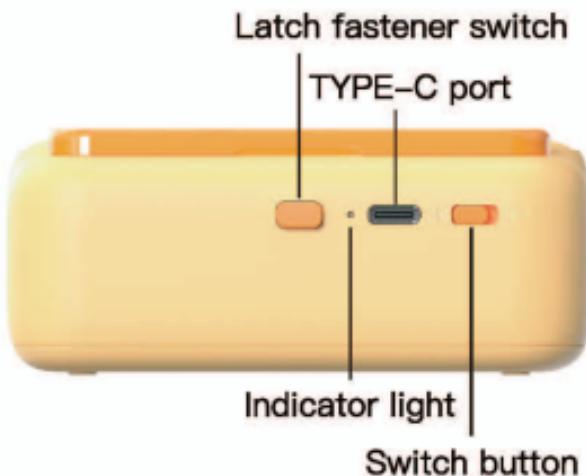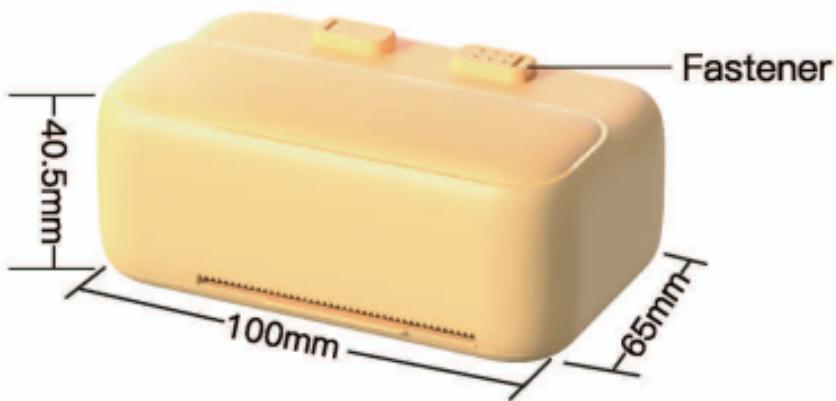

Accessory

- Printer * 1
- Thermal Printing Paper*3
- Color Pen * 6
- User Manual * 1
- TYPE-C Data Charging Cable * 1

Printer

How to connect a printer

1. Toggle the printer power **【switch】**, there is green light means that the printer is on.

2. Double-click the power button of the printer after startup, and the QR code will be printed automatically.

3. You can download and install **【WALKPRINT】** APP by scanning the QR code.



iOS/Android

After the APP startup, you can obtain relevant permissions and register a login account.

4. Turn on Bluetooth of mobile phone, search for device name in APP and connect.

 


How to print Photos

1. Open **【WALKPRINT】** APP and select **【Photo】**

2. Go to the print page and click **【Take a photo】** **【Photo】** to select the photo to be printed;

3. Click **【Completed】** to confirm that the photo is in **【Image Processing】**



4. Click **【Insert】** to print panel and click **【Print】** to Print Preview.

5. Finally, click **【Print】** to enter the Bluetooth list page and select the one for the device connection.

FCC Caution:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

Warm reminder

This printer can also be matched with our P14 / P14 Pro/P14 PLUS three models of cameras, to form a instant camera, you can print photos directly after taking photos.



How to print photos with the printer:

- 1: After the printer is connected with the camera, taking photos with the camera prints the photos directly by default; Select Print icon (), press [Confirm] to close, press it again can open.
- 2: Enter [My Album] , press [left] to enter the settings mode, then select the print icon(), press [Confirm] to print.

Connect and remove the printer from the camera:

Assembly: The connecting clamping slot of the camera body is aligned with the latch position on the printer, press it Inside from top to bottom, hear the sound, that is, the camera body is successfully connected to the printer.

Disassembly: Press the lock switch button of printer with your finger while removing the camera body from the printer.

Print Concentration Adjustment

1. Connect the printer to select the concentration, the higher the concentration, the heavier the printing color, otherwise, the lighter the color;
2. Disconnect the printer and select to cancel. To connect the printer again, need to select the printing concentration again.

Printer

Connectivity	TYPE-C Charging & Data Transfer Cable (Included)
Battery	1200mAh
Input Charging Current	400mA
Voltage	DC-5V/1A

TROUBLESHOOTING

Please check the troubleshooting steps outlined below, and if you still have any issues, contact supplier for support.

Matters	Issue	Solution
Printing Issue	No Paper Out	<ol style="list-style-type: none">1.Approximately 1CM of the printer paper should be reserved outside the cover;2.Check whether the cover of the printing paper is tightly closed;3.Check whether the camera print switch is turned on or the print switch is abnormal.
	Blurry Printing	<ol style="list-style-type: none">1.Thermal paper needs to be preheated, print 2-5 sheets normally;2.Remove the protective film of the camera before use, which will affect the sharpness of shooting;3.Adjust the printing density(the setting interface → find the printing density → high, medium, low selection →0K)4.Printer paper is not original (need to be replaced with original printer paper).
	Paper Stuck	<ol style="list-style-type: none">1.The printer paper needs to be rolled tightly before it is put in;2.Restart the camera or press the small hole to reset the key.
	Missing edges	Check that the paper is straight.

Matters	Issue	Solution
Printing Issue	Striped	Re-put the paper pack and print two more to see if there are still stripes.
	No picture	Check whether the orientation of the printer paper is placed correctly.
Memory Card Issue	A memory card error is displayed	1.Format the memory card; 2.Camera freezes or restarts repeatedly, and the memory card needs to be replaced; 3.Memory card is not compatible with the camera (requires original memory card).
	Card holder can not eject	Check to see if there is a other object in the memory card holder and whether the SD is normal
Charging Issue	The display repeats the charging screen	Voltage is not enough, it needs to replace a 5V, 2A charging charger
	The charging icon is displayed at power on and cannot be used	Plug in the USB and unplug it to see if it works, or press the reset key
	Unable to turn on, unusable	Press the reset key(small holes in the memory card)
	Unable to turn on, charging red light flashing	Check whether the USB port is abnormal

Matters	Issue	Solution
Charging Issue	Unable to turn on or charge	Check whether the USB port is abnormal
	Charging light is on without displaying and turning on	Press the reset key(small holes in the memory card)
	Charging has a display, but it cannot be displayed when booting	Press the reset key(small holes in the memory card)
Screen Issue	The screen changes color and prints abnormally	1.Press the up and down button to see if the color changes again, and check if it is caused by the filter; 2.In the settings function, perform a factory reset.
	The camera does not display fonts	In the settings function, perform a factory reset
Sound Issue	Low sound	Check the speaker if with other objects obstructed

名称：P1说明书

尺寸：6x8.5cm

页数：8页

折叠方式：风琴折

说明：开口向左，第1页为封面，

第4页是封底，已按顺序排版

1-4为正面，5-8为背面