




USER GUIDE

Excursion PRO Portable Speaker

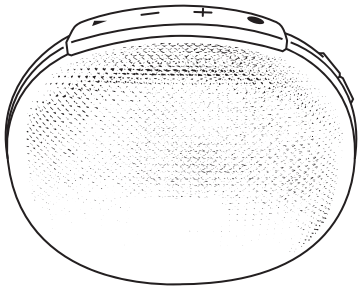

What's Included

- Excursion PRO Speaker
- Micro USB Charging Cable
- User Manual
- 1 Year limited warranty against defects

Charging

- Before using your SoundBound Excursion PRO Speaker, please charge using the included micro USB cable. Please note: Most USB chargers are compatible with SoundBound Excursion PRO Speaker. For optimal AC charging, please use a 1.0A USB Charger.

On/Off

- Excursion PRO Speaker can be powered On or Off by a long press on the "Power On/Off" round multifunction button of the Excursion PRO Speaker.

Please note: (In case the battery voltage is too low, the red light will flicker & the speaker will automatically shut down. If insufficient power is available, the speaker will need to be re-charged prior to powering back on)

Pairing

- After switching the "Power On/Off" button, the Excursion PRO Speaker will Power On & automatically enter "Wireless Mode" for pairing. A light will rapidly blink on the Excursion PRO Speaker.
- On your Mobile Device, search for the "Wireless Menu". A list of available devices will show available for pairing. Select "Excursion PRO Speaker" & the speaker will automatically pair with your device for use.
- Once paired to your mobile device the Excursion PRO Speaker will automatically re-pair if shut down or powered off and back on.

Please note: (In case the battery voltage is too low, the red light will flicker & the speaker will automatically shut down. If insufficient power is available, the speaker will need to be re-charged prior to powering back on)

Volume/ Audio Track Functions

- Raise Volume by long press multifunction button "Raise Volume/ Switch Tracks" on your Excursion PRO
- Lower Volume by long press multifunction button "Lower Volume/ Switch Tracks" on your Excursion PRO
- To switch to the next audio track, short press "+ or -" multifunction button.

Switching between FM Mode & Wireless mode, Aux mode (For TF/SD/ USB Slot)

- Single short press "Power On/Off" round multifunction button to switch between various mode setting on the Excursion PRO Speaker. Once desired mode is set, to switch to other modes, tap again.

FM Mode Use

- When in FM Mode, single short press "Play/Pause" function button & wait about 1-2 minutes. The Excursion PRO Speaker will scan, search, & store, available FM Radio Stations. Once completed, the first station discovered will transmit FM Radio.
- To switch to the next stored station, short press "+ or -" multifunction button.

Please Note: While in FM mode, plug in charging cable in order to tune clearer FM radio stations if there is distortion in the audio playback

Wireless Mode Use

- After Pairing mobile device, begin playing audio from mobile device to stream audio. Short single press "Play/Pause" function button to play or pause streaming audio.
- To switch to the next audio track, short press "+ or -" multifunction button.

True Wireless Pairing

To enable True Wireless Pairing (streaming audio from your mobile device to two speakers), follow the steps below. Prior to connecting the speaker with any Mobile device, ensure both speakers are turned on. Next, double tap the power on/ off button on either speaker to connect to the other one (does not matter which speaker is pressed). You will hear a sound alert announce to confirm the 2 speakers have paired successfully. Next, you can proceed with pairing to your mobile device as described under "Pairing" & search for "Excursion PRO speaker" to connect. You will hear a sound alert announce once your device has paired to the speaker successfully. (Please note- Excursion PRO Speaker will be displayed in the mobile device's Wireless menu as one device listed after pairing in True Wireless Mode.) Once paired with your mobile device, streaming audio will play from both speakers.

Answer/ End Call

To answer a call, press the play/ pause button once.

To end a call, press the play/ pause button once.

Style#: Excursion Pro Speaker
Wireless Version: 5.0
Wireless Range: 10M
Battery Capacity: 500mAh
Power Input: DC5V Micro USB Cable
Supported Modes: SD Card Slot, TF Card Slot, USB Input, FM Radio, Wireless and True Wireless Mode
Output Power: 3W/ 4Ω
Input Power Supply: DC5V-500mAh

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Radiation Exposure Statement

This device complies with RF radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

© 2019 Lifeware Group, SoundBound NY, NY 10018


The Bluetooth® word mark & logos are owned by Bluetooth® SIG, Inc. All other trademarks & trade names are those of their respective owners. The illustrated products may slightly differ from those supplied.

Made in China

Lower/ Raise Volume or
Switch tracks & Rewind
Function Buttons

Play/Pause
Answer/End Calls
Function Button

Power On/Off
Switch Wireless &
FM Radio Mode
Function Button

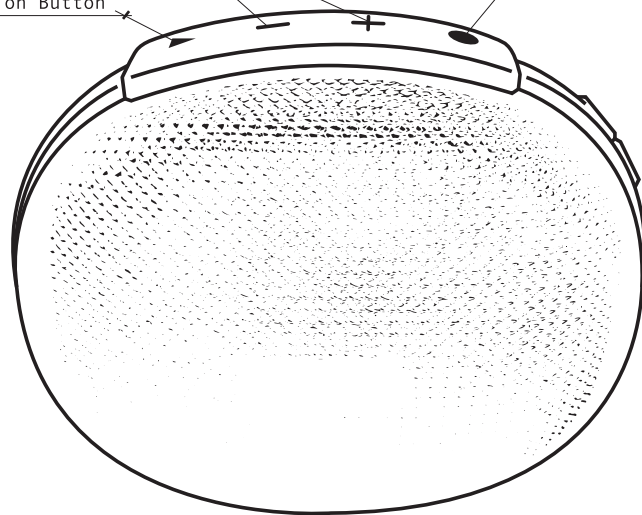

TF Port

USB Port

Micro USB

AUX

