

# Handheld videoscope

Model: DA  
FCC ID: 2A3A7-DA

# Safety Recommendations

 
 
## DANGER

- This device must not be used for medical or veterinary purposes.
- Do not use this item in explosive atmospheres.
- Do not look into distal end with naked eyes, eyesight maybe harmed by strong light.

## WARNING

- Keep the device out of reach of children.
- Do not try to modify or disassemble the unit.
- Do not pull hard or twist the insertion tube.
- Serious impact may bring breakage of lens components at distal end.
- Do not use or store the instrument at a temperature higher than 60° C or lower than -20° C.
- Store the instrument in dry and well ventilated environment.

## Parts Function

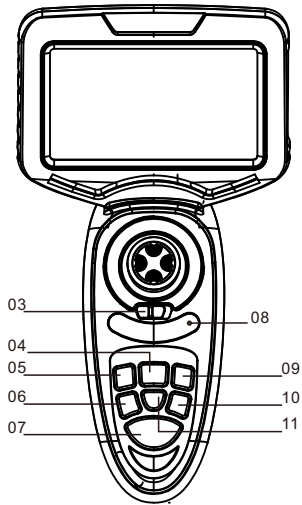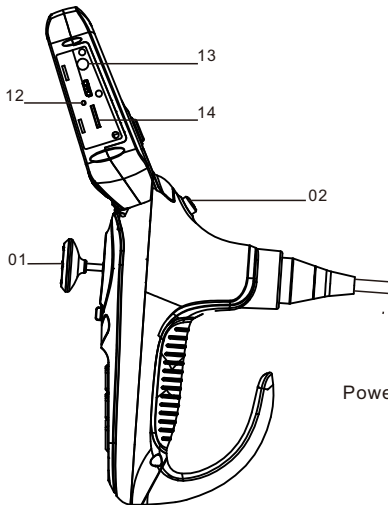

Power On/Off

01 Joystick

02 Snap

03 Locker

04


05 Power On/Off 

06 OK 

07 MENU

08 Status Indicator 

09 Dimmer 

10 

11 

12 Reset 



13 5V DC Jack

14 Micro SD Slot

# Quick Setup
  
## 1. Detachable Panel


**Take apart:** Screw off the bolt on the back of panel, then push the panel upwards, which will be taken apart from the main body. Fig01.  
The reverse operation to combine the two parts together.

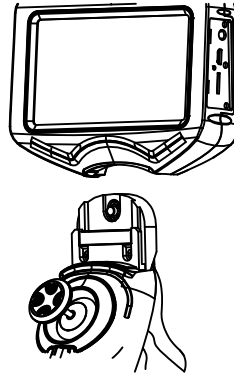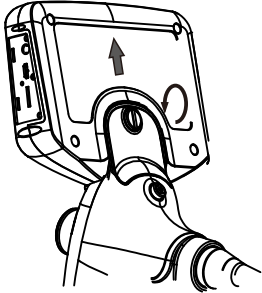

## 2. Ready for use

At shutdown status, plug in Micro SD in direction. Fig03

 Fig03.

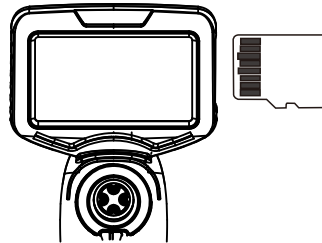


Long press button , the status indicator turns green, the device enters preview mode, real time image shows on the screen and at the same time, some icons and time information will be seen at top location. Fig04



Fig04

### NOTE

#### Definition

Press: press and release less than 1sec.  
Long press: keep press for around 3 secs.

Through button ✨ to adjust illumination, steer the joystick to control distal end to bend. Locker is to tighten or release joystick in order to distal end stay at a certain angle. Fig05.

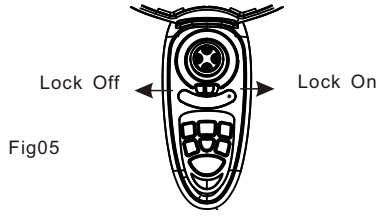 


Fig05

## MENU set up

Switch on device and enter preview mode, press **MENU** to access menu interface, use ▼▲ to select item and with OK to confirm.

The menu options listed as below:

- Time watermark
- Loop Record
- Recording
- Date/time
- Language
- Brightness
- Format
- Default setting
- Version
- WIFI

**NOTE**

By Pressing **MENU** key enable to end current menu setting job and jump to MENU interface so as to enter other items.

### Time watermark

Using ▼▲ to select **turn off** or **open**, with **OK** key to confirm, the **open** allows video to be recorded with time mark.

### Loop Record

Video files consist of consecutive clips with the same duration, the duration is optional :

- Permanent
- 1 minute
- 3 minutes
- 5 minutes

**NOTE**

Permanent means the whole video is to be recorded as a single clip.

### Sound Recording

Under this item, to select **open**, the surrounding sound and video will be recorded simultaneously. At the same time, the icon on the top of screen is changed from 🗣️ to 🗣️. The function also can be activated by shortcut key ▲.

### Date and Time

Using ▼▲ to increase or decrease the number, press OK to move to next step. Fig 06.



Fig 06.

## Language

Select required language with ▼▲, Press OK to confirm the choice.

## Brightness

Through this menu, you can change brightness of light on camera end, total 4 levels optional, and **off** to turn off the light.

### NOTE

In most cases, you should use  key to adjust brightness more often.


## Format

In some cases, micro SD card can not work properly, you can try to format the card to fix the problem. Please back up files in advance due to the data could be lost in the process.

## Default setting and Version

By the two items, you can get to factory setting and see current software version.

## WIFI

Select **On** or **Off** to choose the WIFI function to be activated or not, the color of  on the top of screen will turn gray to blue that indicates the WIFI is active.

Scan QR code on the screen to load down APP onto your smart phone, you can also search **RoadCam** in android or apple store to get the APP.

To Set WLAN on your phone, find the net: wifi\_camera\_XXXXXXXXX and join it, then open the APP, the image will be present on your phone screen.

### NOTE

The function of keys on panel is disable until the wifi net is disconnected in WLAN setting on your phone.

### NOTE

A separate using manual for WIFI function is available, please contact your dealer to get detailed information.

## Take picture and Video recording

### Take picture

In preview mode, press Snap to take a picture, the picture is stored to Micro SD card with a file name of running number.




Such as: IMG\_0000002.JPG

### Video recording

In preview mode, Long press Snap to take video, the video file name is related to date and time. Meanwhile, you can get snapshot during video recording process, the snapshot picture is stored with running number.

For example : VID\_20210116\_110110.MOV  
CAP\_0000002.JPG

## Image viewing

In preview mode, press , the image last picture or video will present, please use   to find the image wanted. Fig07.

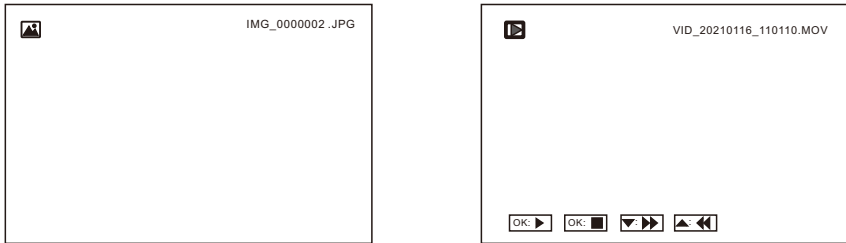 




Fig07

Press **OK** to play video, press **OK** again to pause, press **OK** once more return to play.

Press  to fast-forward,  to back-forward, repeatedly press the key to get 2x 4x 8x speed.

### Delete files

When you find targeted picture or video, press **MENU** to delete files, press **OK** to choose delete current single one or all files.

Long press **MENU**, jump to preview mode.

## Storage & Maintenance

### 1.Rechargeable battery

Charging time around 7 hours till the indicator turn off, the fully charged battery can continuously work for 5 hours with LED ring illumination, around 2 hours for fiber illumination.

### 2. Cleaning components

#### Cleaning insertion tube

Wipe thoroughly with a piece of gauze or other material moistened with neutral detergent, next clean by gauze moistened with clear water, and then wipe the insertion tube dry off all moisture.

#### NOTE

Clear the insertion tube immediately after withdrawing the insertion tube. Leave the very dirty insertion tube for long periods can cause it to be corroded.

#### Cleaning distal end

Grasping the rigid portion of camera end, use a clean soft piece of gauze or cotton swabs to wipe off dirty and water. Best results may be obtained using commercially available absolute ethanol. Fig08



Fig08

#### Cleaning unit body

Wipe with soft cloth dampened with clean water, and wipe with clear and dry cloth.

### 3. Storage precautions

- Store the instrument under normal room temperature and humidity.
- Straighten angulation section while lay into carrying case.
- Store the equipment at a clear, dry and stable place.

## Q & A

Q: No image on the screen after turning the power on

 
A: Battery is exhausted. Connect the panel to the power adapter and recharging.

Q: Unable to take photo or record video

A: SD card absent, wrongly inserted, full or faulty.

Q: Shut down

A: When all functions freeze or fail, insert an insulated needle into the hole on the side of the main unit, restart the device to find if the problem is resolved. Fig09

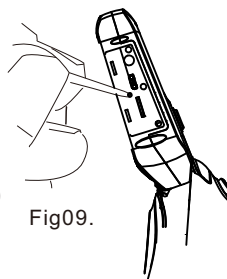

## System parameters

### Display Unit

LCD Panel	4.5" TFT LCD MicroSD Card, support 128GB
Power source	Lithium battery 3500mAh AC adapter: Input 100-240VAC 50/60Hz, Output 5VDC

### Operating Environment

Operating Temperatures	Distal end and insertion tube: 0-60° C	
	Other parts excepted of above: 0-40°C	
Operating Humidity	15-90% RH	
Water proof	Insertion tube	Ip67
	Other parts	Ip52

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.