

The **ONE**[®]
— Smart Piano —

USER GUIDE

 
Smart Keyboard Piano
COLOR



COMPONENTS LIST

Thanks for purchasing The ONE Color. Please check your box for the following items.


- Keyboard Body

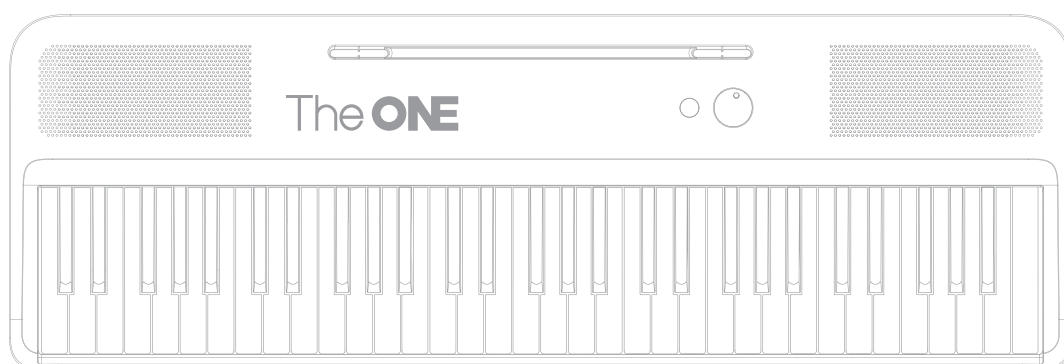

- User Manual



 
- Music Stand

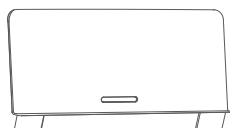

- Power Cable



 - Power Adapter




- The ONE Smart Piano app
Search "The ONE Smart Piano"
on App Store or Google Play

For more information, please visit:
<https://www.smartpiano.com/pages/sheet-music>




PRODUCT INTRODUCTION

 Front View

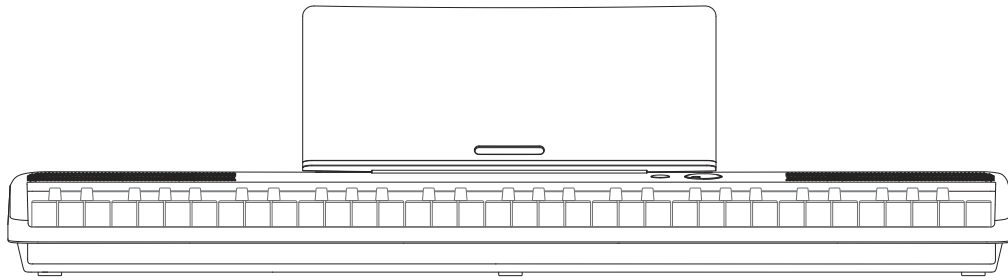

Vertical View

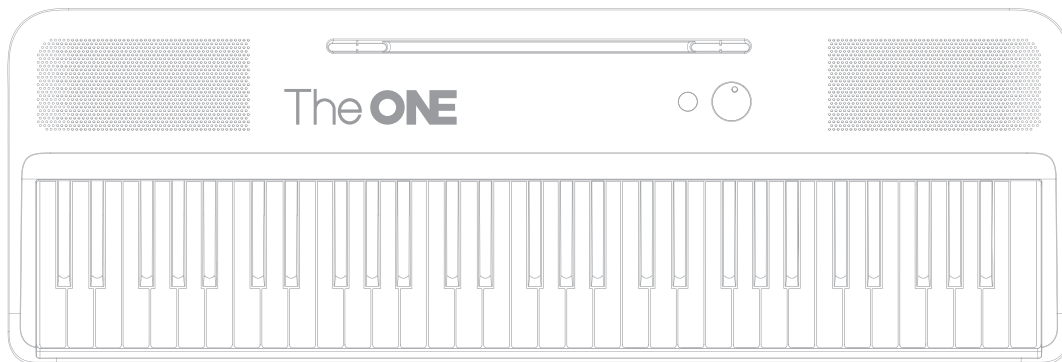 

The ONE COLOR is an affordable , fashionable, and smart musical instrument. It's designed for music hobbyist and beginners. You can connect with your device via Bluetooth or cable, and use The ONE apps to unlock more features. The supported system requires Android 5.0 and above, iOS 10.0 and above.

 
 
SET UP

This guide will help you set up and play your new instrument. Before turning on the power, please read the following instructions carefully.

POWER SUPPLY

Before turning on the instrument, turn the volume to the lowest level, both on the instrument or on any other connected system.

1. Connect the Power cable to any 5V DC power adapter.
2. Connect the 5V DC plug to a 110~220V outlet.
3. Connect the other end of Power cable (Type C) to the power plug.
4. Press the [POWER] button, and you'll see the power indicator light is on.
5. Press the power button again to turn off the keyboard.

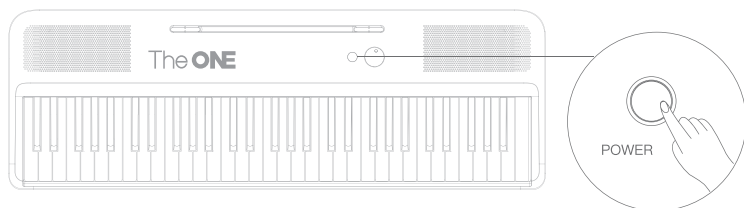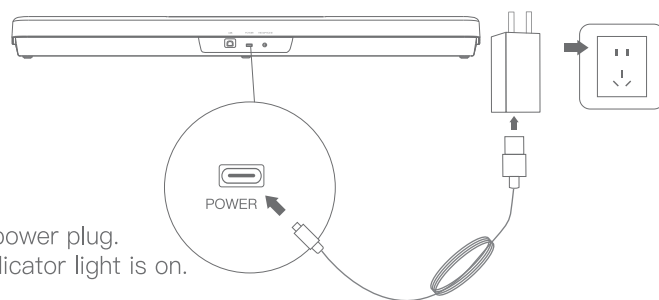

⚠ WARNING

1. The instrument has an auto-power off feature. To avoid unnecessary power consumption, the keyboard will turn off by itself after 30 minutes if no action is taken. You can use The ONE Smart Piano app to control this feature if needed.
2. For safety reasons, please do not use the instrument and turn off the power during thunderstorms.

USING THE SHEET MUSIC STAND

The sheet music stand is flat, durable, and needs to be installed separately. When using the stand, please insert the stand into the groove reserved for music stand and press it firmly. Elliptic long hole is reserved on the stand, to be used to pass and plug in USB cables. (Refer to Figure 1)

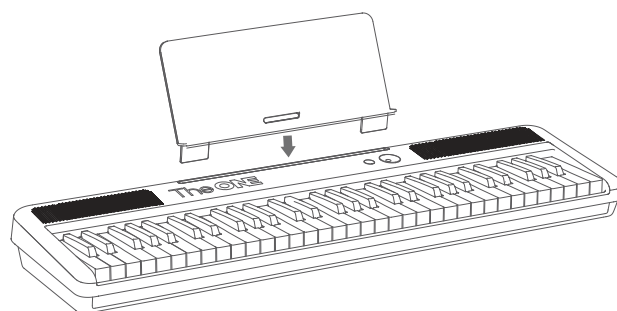 



Figure 1



PANEL CONTROLS


MAIN PANEL

 - 1 POWER SWITCH**
Turn on/off the power. When the power is on, the corresponding indicator light will light up.
- 2 MASTER VOLUME CONTROL**
Adjust the volume to an appropriate level. Rotate clockwise to increase and counterclockwise to decrease it.

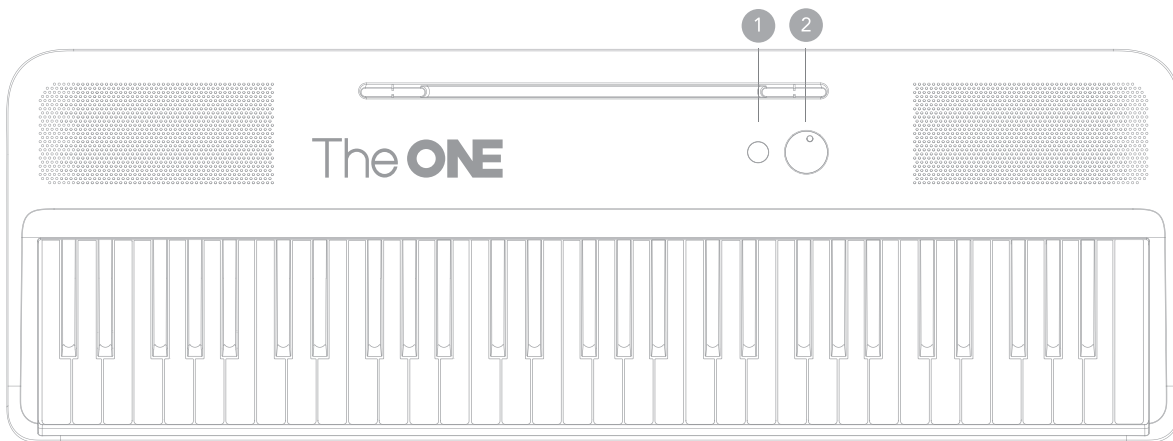

REAR PANEL

 - 3 USB MIDI SOCKET**
Connect to computer or other devices
- 4 DC POWER SUPPLY SOCKET**
Connect to 5V DC power adaptor
- 5 3.5MM HEADPHONE SOCKET**
Connects to audio output devices

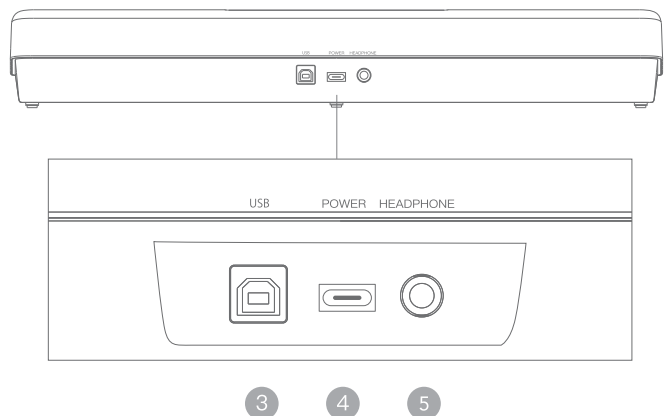



EXTERNAL EQUIPMENT

CONNECTING SMART DEVICES

 
To bring endless fun to music playing, we are integrating smart devices entertainment and music learning into this revolutionary instrument. You can connect with your devices via Bluetooth or cable, to unlock more features. The supported system requires Android 5.0 and above, iOS 10.0 and above.

Connect via Bluetooth


1. Turn on smart device's Bluetooth
2. Open The ONE Smart Piano app
3. Open Bluetooth Setting in Smart Piano app
4. Select The ONE Piano COLOR

Connect via cable:

Note: The cable is not included in the package, please contact customer service to purchase if needed.

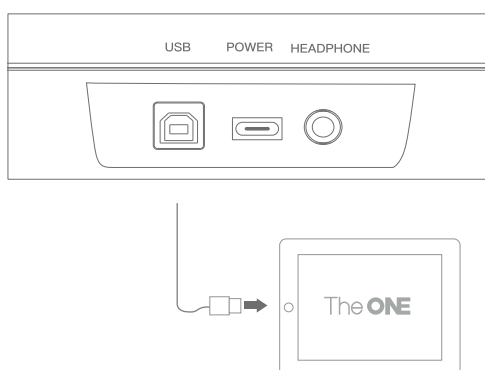


The operation steps are as follows:

 


1. Turn on smart phone's Bluetooth



 2. Open the app



 3. Open Bluetooth Setting in app



4. Select The ONE Piano COLOR

TWO-WAY USB MIDI COMMUNICATION

Once this instrument is connected with your smart device, you can record sounds from it into a sequencer on your smart device. You can also use this instrument as a speaker for your smart device to play MIDI files stored there.

USB AUDIO DISPLAY THROUGH

Use this instrument as a high quality external speakers to stream music from your smart devices, by simply connecting them.

MOBILE APPLICATIONS FOR MORE FEATURES

There are free applications for your iOS and Android devices, providing various features.

CAUTION:

Before connecting the instrument to other electronic equipment, please make sure that all the devices are turned off. And before turning on the power, please set all volume levels to the minimum.

 
EXTERNAL EQUIPMENT

CONNECTING HEADPHONES

When you need to practice in silence, you can use the headphone. Once plugged in, the instrument sound can only be heard through the headphone instead of the speaker.

CAUTION

1. Do not use headphones for a long time at a high volume level, since this can cause auditory fatigue or even permanent hearing loss.
2. The headphone socket is a standard 3.5mm (1/8'') size.

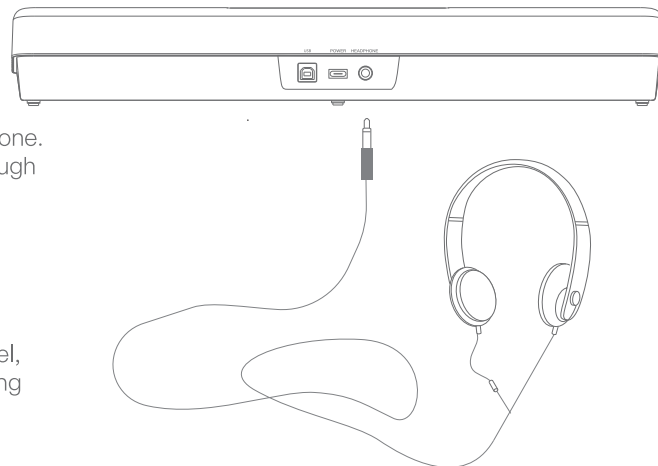

BASIC OPERATION

POWER SWITCH

USING POWER ADAPTOR:

1. First of all, please make sure you have connected the power adaptor to the DC power supply jack and plug the DC adaptor into a power outlet.
2. Press the [POWER] switch, the LED light on the button will light up, indicating power has been turned on.

NOTICE:

If the LED light on the left doesn't light up after pressing the [POWER] switch, please check whether the power adaptor has been plugged in correctly.

 
USING BATTERY:

This instrument requires 4 AA size batteries.

1. Open the battery compartment cover located on the instrument's bottom panel.
2. Insert the 4 new AA batteries, following the polarity markings on the compartment.
3. Close the compartment cover, making sure it locks firmly.
4. Up to 6 hours battery life with active playing.

! WARNING:

1. Please don't mix old and new batteries.
2. Please don't mix battery types.
3. If the instrument will not be used for an extended period, please take out all the batteries.

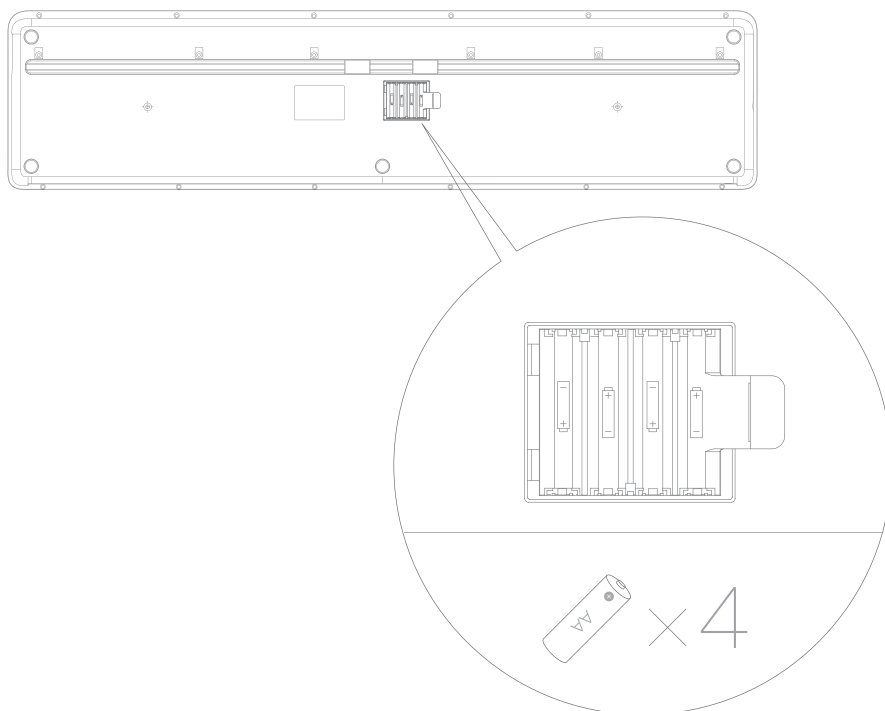



EXTRA FEATURES

SELECTING DIFFERENT TIMBERS

When connected to the app, you can choose from 256 different timbres, which greatly meets your playing needs.

⚠ WARNING:

When the piano is being used without the app, the sound will be the acoustic grand piano sound by default.

SETTING THE RANGE

Using the piano's transpose function, you don't need to read just your own notes. Use the piano to move up half semitones for the whole keyboard. You can adjust up or down 12 semi-tones.

SETTING THE OCTAVE

Through the piano, you can change the pitch of the entire keyboard up or down 1 full octave.

AUTO-OFF

The device will automatically shut off when it is timed no action. The default is set to 30 minutes.





IMPORTANT SAFETY INFORMATION

Before you use this product, read the instructions carefully. Keep this manual to refer back to later

WARNING

The functions of this product may be affected by strong electromagnetic interference. If this happens, simply follow the instructions to restart the system. If the functions still cannot work after rebooting, try to use the product in another location.

POWER CORD

When you unplug the power cord from the outlet, please grasp it by the head to take it out. Don't pull the cord out or it will risk getting damaged. Avoid using with a power strip, as it may overheat the socket.

If you're using a different power adaptor with this product, you may risk causing a fire or electric shock. For safety, disconnect the power plug when not in use or during a thunderstorm.

CONNECTION

Before connecting this device to other devices, please turn off the power switch of the device. This will effectively prevent equipment failure or prevent damage to other equipment.

PLACEMENT

In order to avoid deformation, discoloration, and other damages to the product, do not use under the following conditions:

- Under direct sunlight or heat
- Places that are dusty, hot, humid or have strong vibrations
- Close to magnetic fields

INTERFERENCE TO OTHER DEVICES

When this product is placed around TV's, radios or cellphones, it can cause interference. When using this product, please keep a distance from TV's, radios and cellphones.

PRODUCT CARE

To clean the device, use a soft and dry cloth. Do not use paint thinners, solvents, cleaning fluids or chemicals on the cleaning cloth.

Do not apply too much force on the On/Off button.

The piano is best stored in the following conditions:

15-35 degrees Celcius and a humidity level of 75%

DISPOSAL

Avoid getting paper, metal and other debris into the device. If it happens, unplug the power cord from the wall. Follow up with a professional to inspect the equipment. Before moving the product around, please disconnect the power supply.




SPECIFICATIONS

ITEMS	SPECIFICATIONS
Appearance	The ONE Keyboard COLOR
Keyboard	61 non-weighted keys, standard piano keyboard texture
Polyphony	64 Polyphony
Timbre	256 timbres setting via “The ONE Smart Piano” App; Only acoustic piano timber after power on.
LED	Red LED light on 61 keys
Device connection	Support devices which have Bluetooth BLE5.0 +; Bluetooth connection for iOS 10.0+ iPad/iPhones; Bluetooth and cable connection for Android 5.0+ devices with USB Host/OTG supported
Audio socket	One 3.5mm headphone socket

 NOTE: Specifications are subject to change without notifications, the actual product shall prevail.








TROUBLE SHOOTING

ISSUE	HOW TO FIX IT
There is noise when the instrument is turned on or off.	This is normal current noise, there is nothing that needs to be fixed.
The piano makes no sound when playing the keyboard.	Check if the volume is too low, and check if the headphone jack is in.

Declaration of Toxic and Hazardous Substances in Products

component	Toxic and harmful substances or elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	hexavalent chromium (Cr(VI))	polybrominated biphenyls (PBB)	polybrominated diphenyl (PBDE)
Body shell and all plastic parts	○	○	○	○	○	○
Speake	○	○	○	○	○	○
Wires	○	○	○	○	○	○
Hardware	○	○	○	○	○	○
All packaging materials	○	○	○	○	○	○
Printed circuit board assembly	×	○	○	○	○	○
Part of copper alloy accessories	×	○	○	○	○	○
○	Indicates that the content of this toxic and hazardous substance in all homogeneous materials of this part is below the limit requirement specified in the GB/T26572-2011 standard.					
×	Indicates that the content of the toxic and hazardous substance in at least one of the homogeneous materials of the part exceeds the limit requirement specified in the GB/T 26572-2011 standard. At present, there is no mature technical solution in the world to replace or reduce the content. It is an exemption item/product in the EU RoHS (2011/65/EU), and this product meets the EU RoHS environmental protection requirements.					

   

The **ONE**[®]
— Smart Piano —

NO.210611

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and (2) this device

must accept any interference received, including interference that may cause undesired

operation.

This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.