

 
The **ONE**

The **ONE**


User Guide

External Speaker


Dear customer, after you receive the product, please check whether the following items are included:

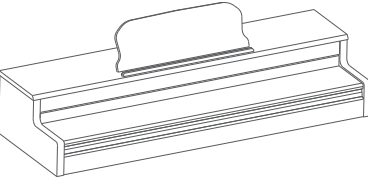


Piano Body

 


Pedals

 


External Speaker

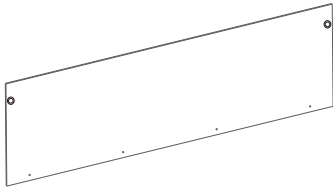 


Back plate

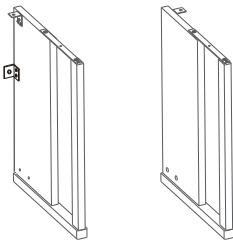 

Piano legs (left and right)

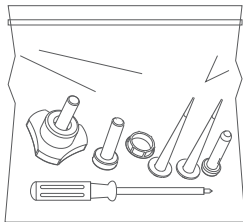 


Toolkit

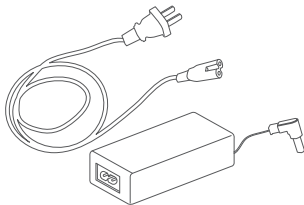 

Power source DC 15V



 User guide

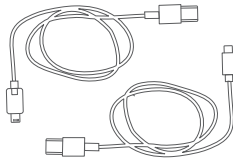



Cables

Buy other cables from:
www.smartpiano.com

Product Introduction

The ONE Smart Piano

  The ONE piano is a smart instrument aimed at changing the way you and your family learn to play piano. Combining piano education with fun exercises and your favorite songs, The ONE is suited for both seasoned piano performers as well as beginners. Its sound quality resembles a grand piano and its functions are endless when connected with an App for your mobile devices.

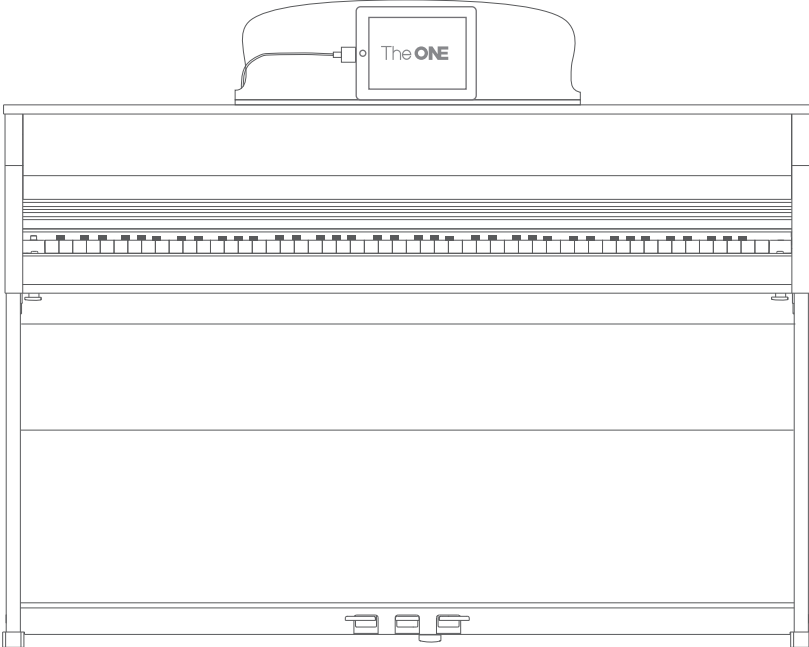
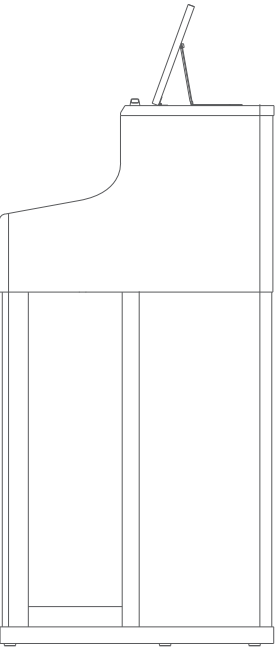








  - Search "The ONE Smart Piano" on App Store or Google Play
- For more information, visit:
<https://www.smartpiano.com/pages/sheet-music>

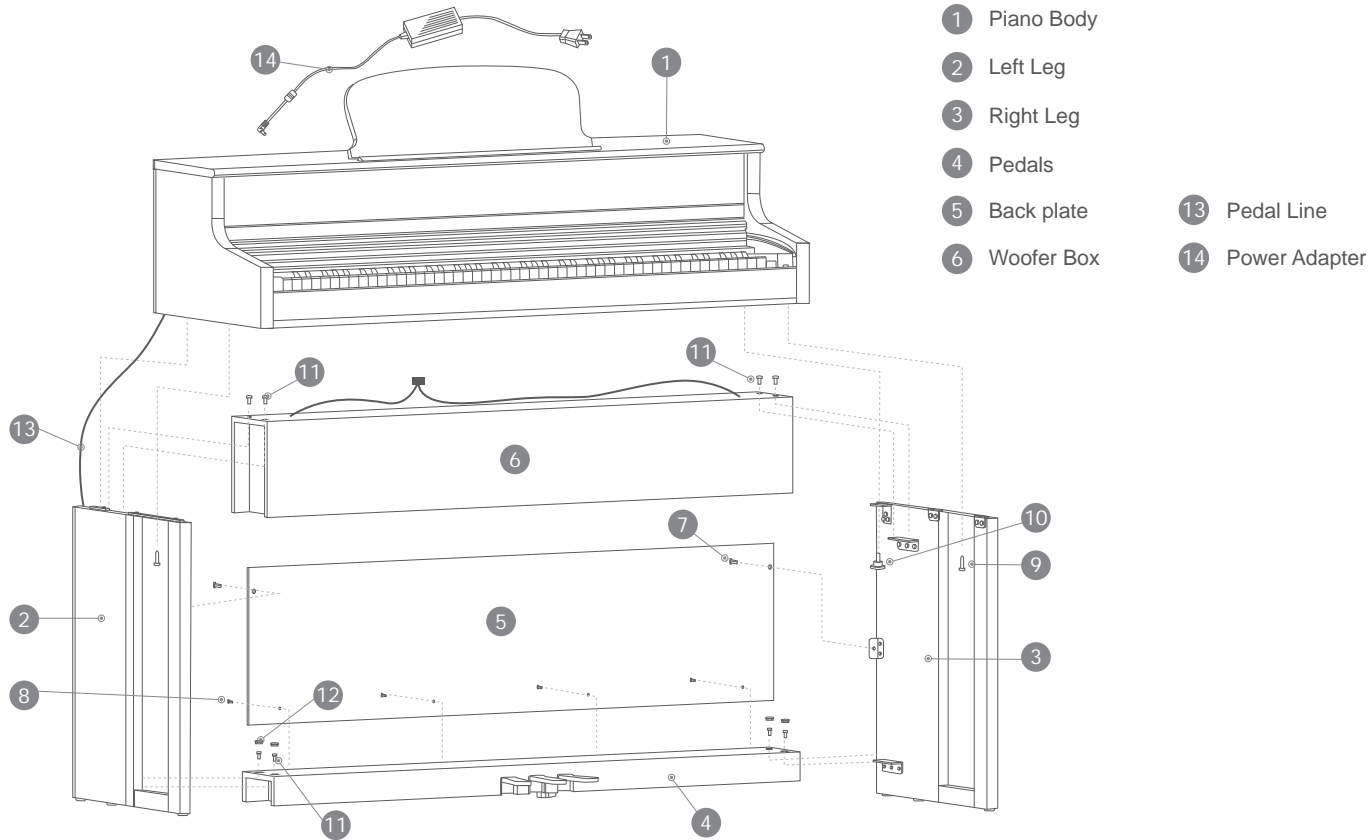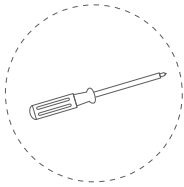System Components

When you are ready to install the piano, please find the screwdriver in the parts bag. Please confirm that the following parts are in the packing box.


▲ (Note: the piano body is very heavy. It is recommended that two people install it together.)



- | | | |
|---|--|--|
| 7  Philip's Head Screw*2 | 8  Self-tapping Screw*4 | 9  Self-tapping Screw*2 |
| 10  Hand Screw*2 | 11  Philip's Head Screw*8 | 12  Plastic Screw Cap*4 |


Assembly Instructions

 A. Place the left leg 2 and the right leg 3 on both sides of the pedals 4 respectively. Then use Phillips screws*4 11 to align the screw holes on the pedals 4, left 2 and right piano legs 3, fix them with a screwdriver, and then cover the screw caps 12. As shown below:

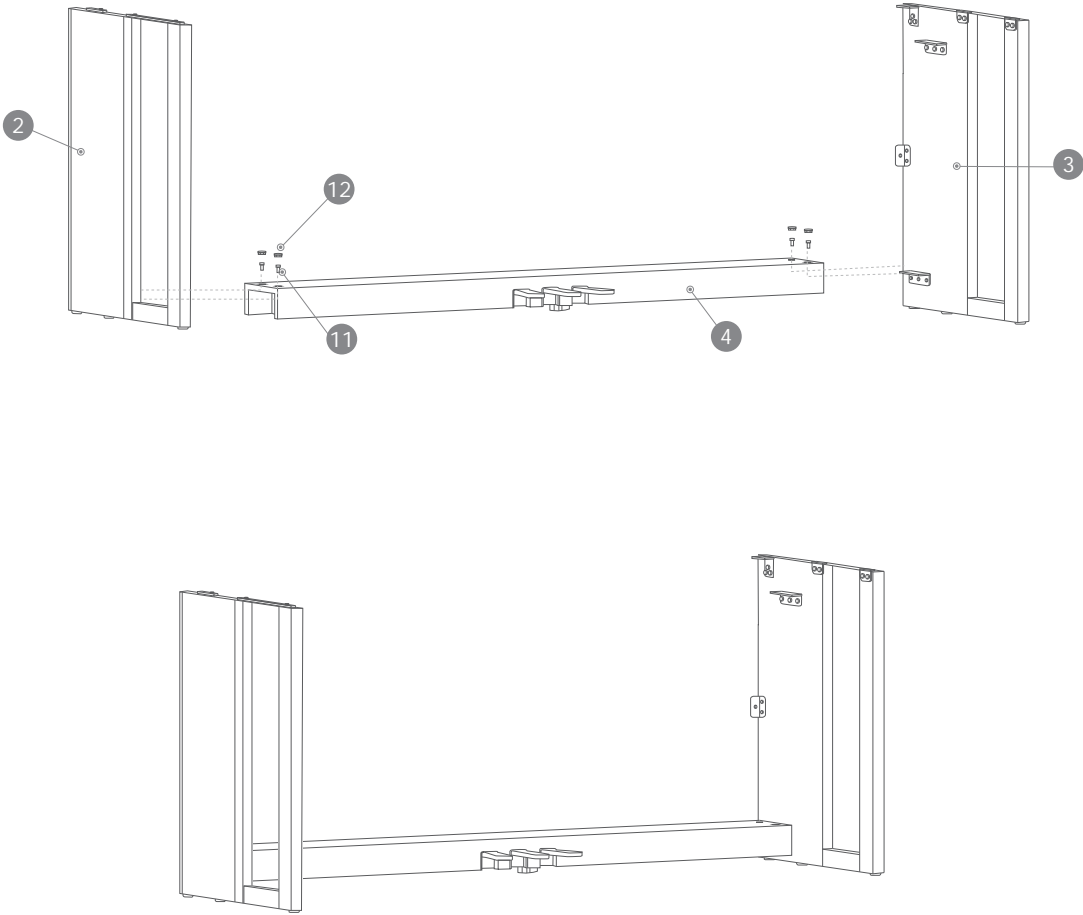


Assembly Instructions

 B. Use Phillips screws*2 7 and self-tapping screws*4 8 to fix the back plate 5 to the left leg 2 , right leg 3 and pedals 4 . As shown below:

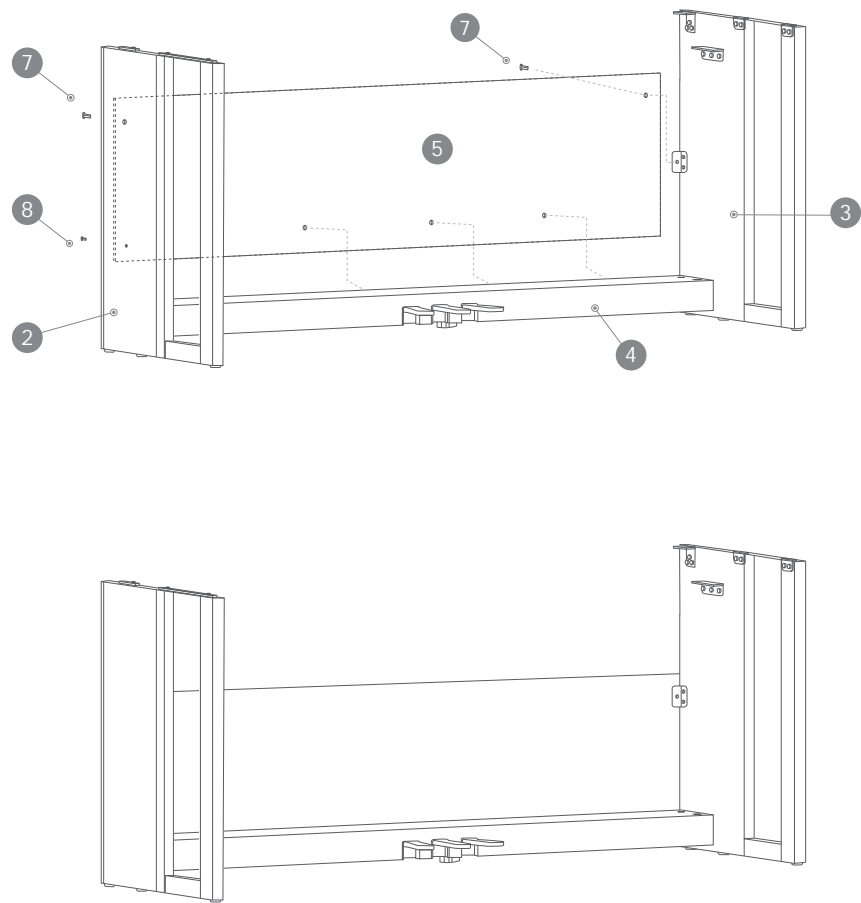


Assembly Instructions

 C. Place the woofer box 6 on the installed step B and fix it with Phillips screws*4 11 . As shown below:

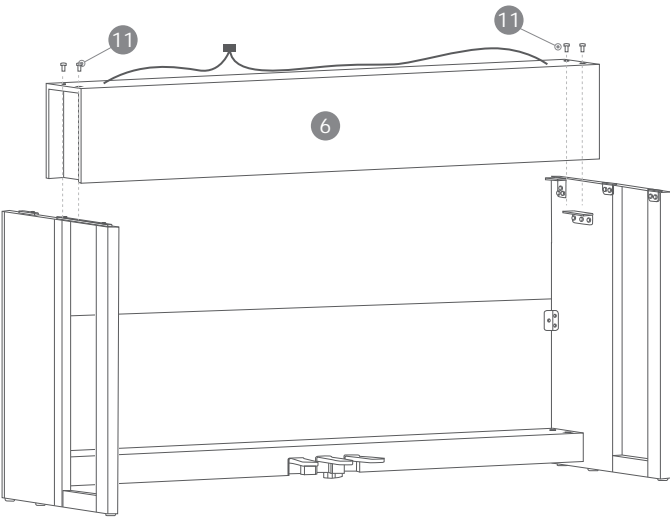


 D. Place the body 1 on the installed step C and fix it with self-tapping screws*2 9 and hand screws*2 10 . As shown below:

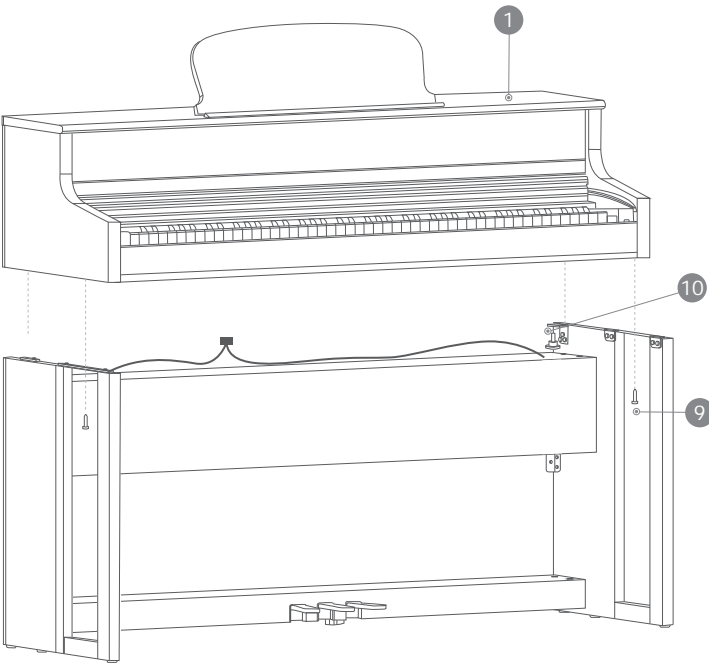

Assembly Instructions

 
E. Connect the pedal line 13 and the cable of woofer box to the corresponding jack at the bottom of the piano body 1. Insert one end of the power adapter 14 into the 15V jack on the back plate. Connect to the power supply to turn the piano on. As shown below:

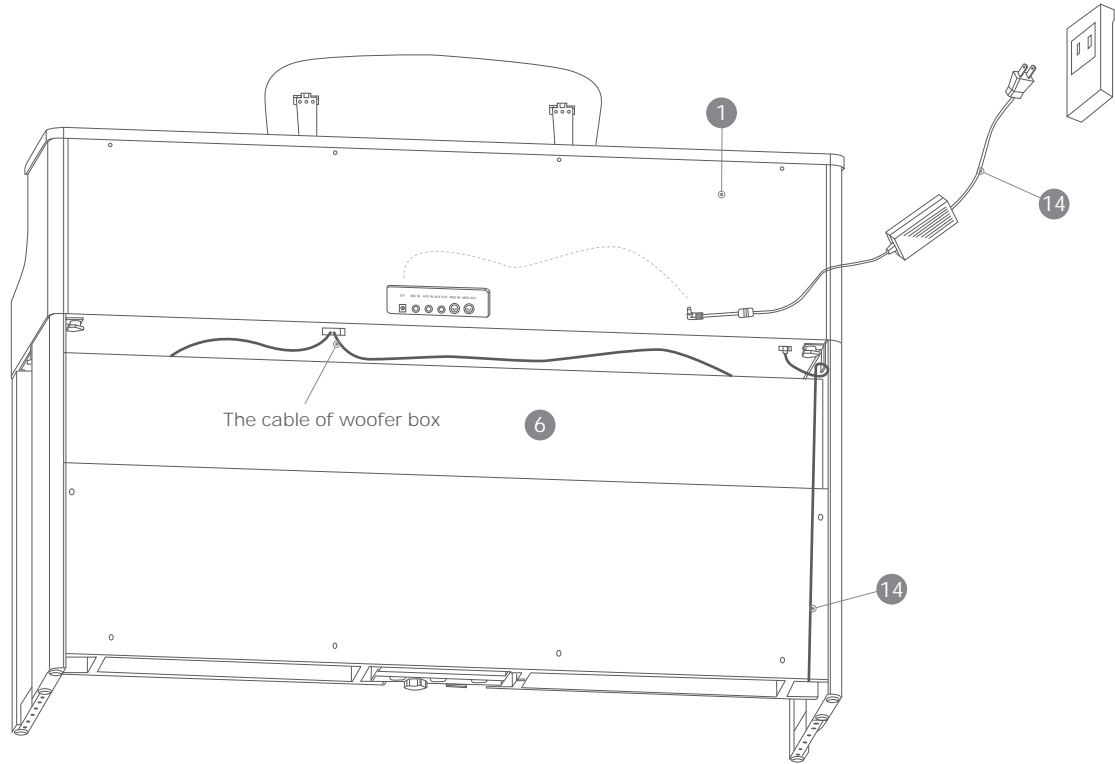

How to Use

Start-up

 1. Make sure the power is off. Before you switch the instrument on, dial down the volume on the keyword as well as the volume of any connected audio equipment to a minimum level.
2. Connect the AC/DC power adapter to the power socket on the backside of the main body and plug the other side into the power outlet.
3. Switch on the piano. Lit LED lights indicate that the piano is turned on.

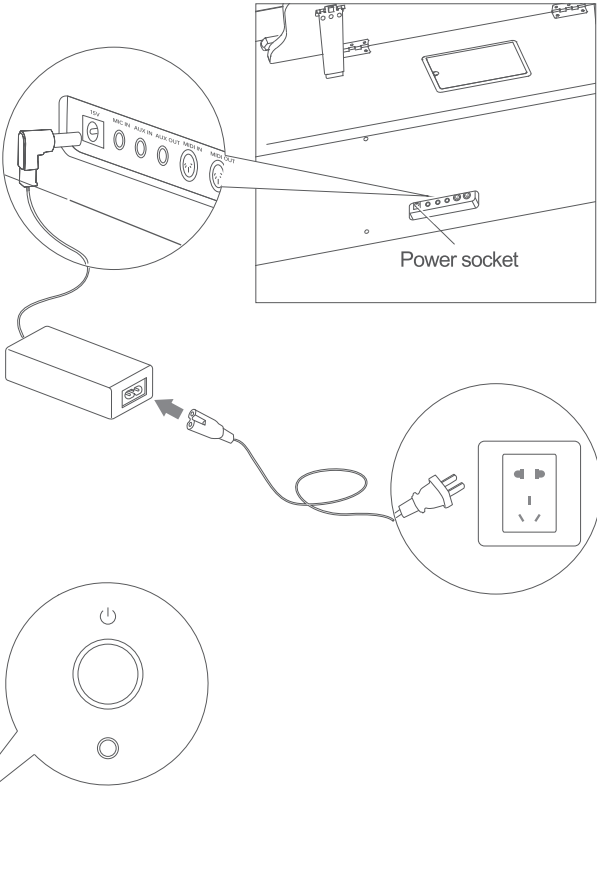


4. To turn off the product, press the "Power" button. To prevent accidental power-offs, the product can be turned off only when the button is pressed for a longer time...

Note:
For safety reasons, unplug the instrument when not in use for extended periods of time, or during thunderstorms.

Connect


To Use the Stand

 The music stand sits on the top of the piano.
You can flip up the stand fold to place scores or tablet devices.

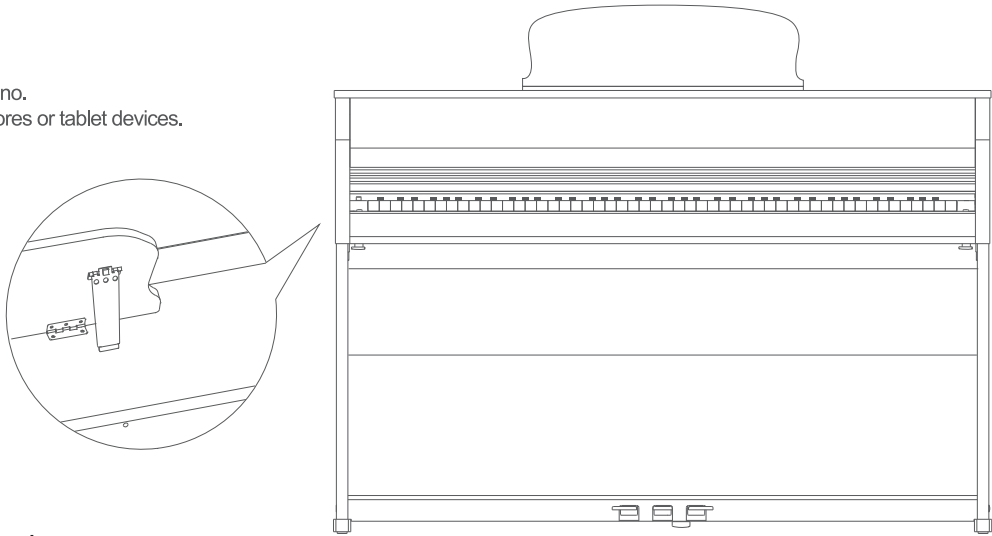


Connecting with Smart devices

 
Using the cable



 
A. Gently press the cover of the box to open the box

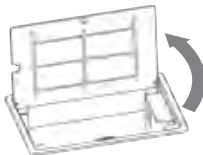

B. Flip the cover over



 
C. Plug in the cable along the direction illustrated.

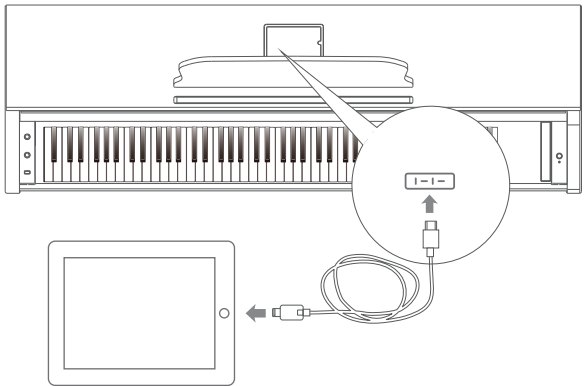

Connect


Download the “The ONE Smart Piano” app to access extended and additional features.

 You can also play music from your iPad through The ONE piano.
You can use the piano as a form of high-quality speakers for your iPad music.

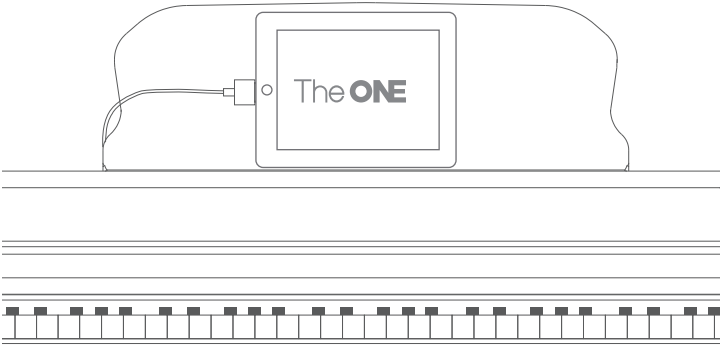


MIDI Function

 When connected to a computer, this instrument can be used as a MIDI keyboard. When connected with tablets, USB MIDI bidirectional data transmission is available. For example, you can record the music you play on this instrument into your tablet. You can also use the instrument as speakers to play music directly from your tablet devices.

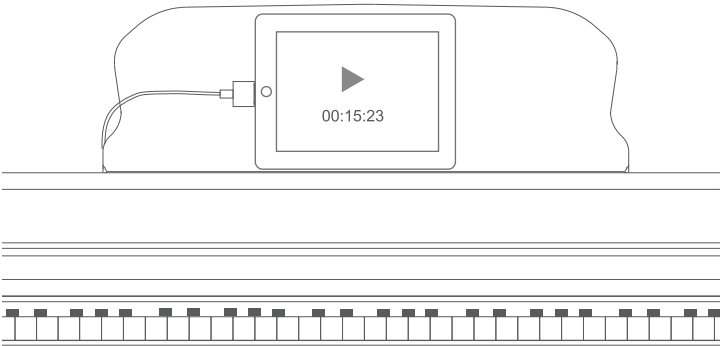

Bluetooth Speaker Function

 You can also connect your iPad via Bluetooth to play music. At this time, all the sound of the tablet device will be played through the speakers of the electric piano, which is equivalent to connecting a high-quality speaker to your tablet device.

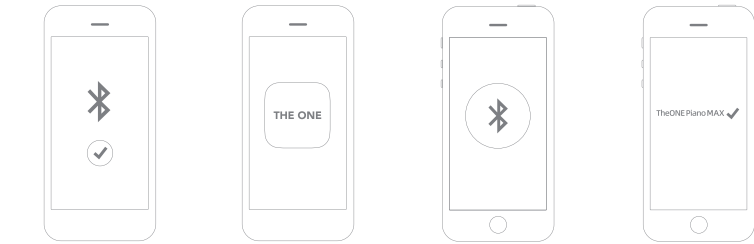

1. Turn on the phone's Bluetooth
2. Open the app
3. Turn on the Bluetooth of the APP
4. Select TheONEPianoMAX

Functions

Master Volume Knob

After start-up, turn the volume knob to the right to increase the volume, and turn the volume knob to the left to decrease the volume. You can adjust in both directions to change the volume.

Keyboard

88-key graded hammer action piano keyboard2.0 keyboard that supports a max of 128 key sounds at one time. As you play the piano, you'll experience a touch and feel similar to that of a grand piano.

Using the Metronome

 
 
When you are practicing or recording your music, the metronome helps you to learn rhythms. Use the metronome function to help you keep a steady tempo as you play.

1. Press the “Metronome” button to activate it.
2. Press the “Metronome” again to turn it off.You can adjust the beat for different needs.The speed ranges from 30 – 280.

The beat goes higher when you turn the speed knob to the right, and it goes lower when you turn the speed knob to the left.

Using the Pedals

This piano equipped soft, sostenuto and sustain pedals.

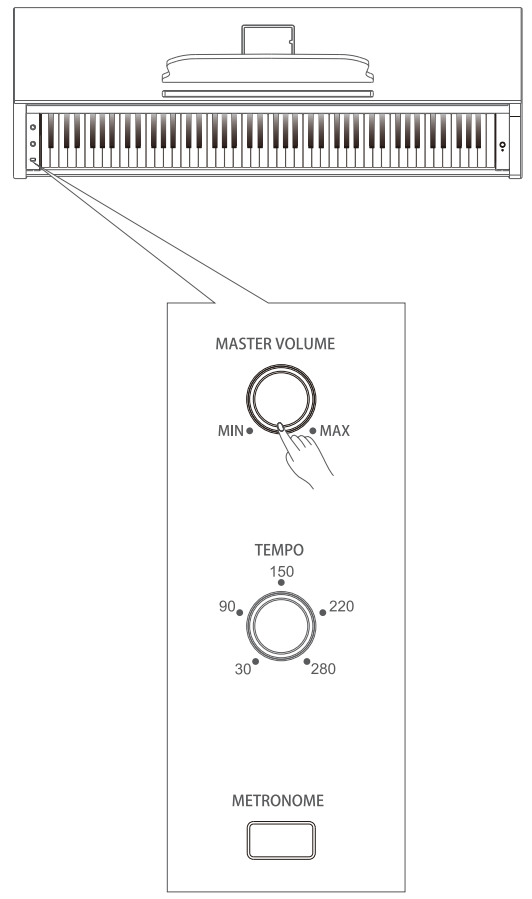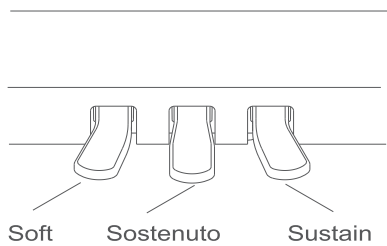

Functions

Connecting Earphones

When practicing late at night, you can play the piano with your earphones as illustrated.
Socket : If you plug into these socket, the sound will only come out from the earphones.

- Note :
1. Avoid using the earphones for long periods of time at a high volume, since extended use can cause ear fatigue or even hearing damage.
 2. The size of the earphone sockets are 3.5mm and 6.5mm.

Extended Functions

Setting Up the Timbre

There are 128 GM timbres and 4 drum combinations for you to choose from your smart device.

- Note :
1. For specific tablet set-up instructions, refer to the App description in the App Store.
 2. This product's default instrumental sound is that of a grand piano.

Microphone Function

 
Support external microphone, support 12 kinds of vocal effects. Connect a microphone to enjoy singing while playing.
Note: This product does not come with a microphone.

Effect Enhancement

The performance effect can be adjusted through app. It supports 11 kinds of global reverberation, 12 kinds of global chorus effects, 15 kinds of plug-in DSP effects and 6 kinds of speaker equalizers.

Recording Function

Simply tap the feature to start recording what you play and to share it on your social networks.

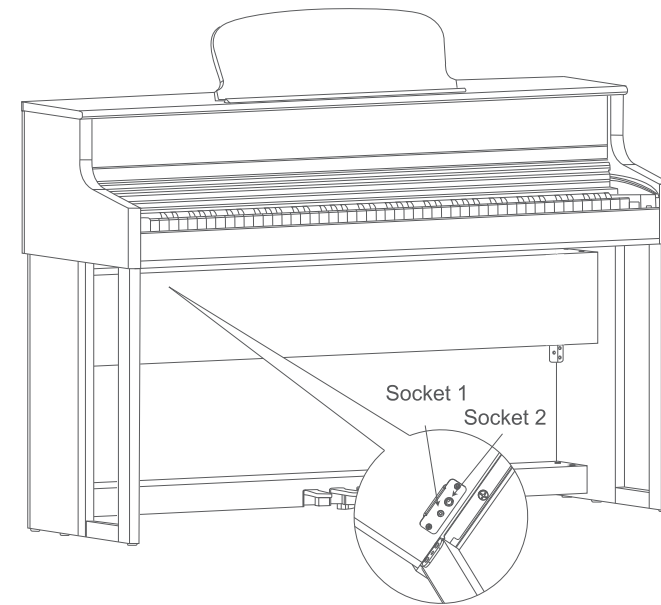

Auto Power-off


You can set auto power-off from your smart devices. Options: Power-off, 30 mins, 60mins. Default value: 30 mins.

- Note :
- When the product works independently, the default power-off setting is 30 mins.
 - This module lists the main functions of the piano. For more details on additional features, refer to the "Settings - piano settings" in The One App.

Specifications

	Specifications
Size	Length: 54 Inches Width: 18 Inches Height: 35 Inches Keyboard: 88-key graded hammer action piano keyboard 2.0
Weight	136.4 lbs
Devices supported	iOS 10.0+ Phone6/7/8/SE/X/11above iPad 5th generation above, iPad mini 2 above, iPad Air above, iPad Pro above. Android 5.0+, support USB Host / OTG *For more detail information, please contact support@smartpiano.com
Basic Parameters	Keyboard : 88-key graded hammer action piano keyboard2.0 Maximum Polyphony: 128-note polyphony Tones: 128 GM-programmed timbres and 4 drum sets (only the timbre of a grand piano is available for demo play) Audio Sampling rate: 44.1KHz Rated output power: 30W Sampling Tones: 16-bit stereo Speaker Size: Tweeter 1.25"*2 + Woofer 6"*2
Basic Functions	On/Off*: You can set auto power-off Volume: Adjust the volume of the sound. Metronome: Optional to use. Turn the knob to adjust the tempo. Pedals: Three pedals. Soft, Sostenuto, and Sustain respectively from left to right. Microphone function*: 12 kinds of vocal effects DSP effects*: 12 kinds of global chorus effects, 15 kinds of plug-in DSP effects, 6 kinds of speaker equalizers Effect Enhancement*: touch response, sustain effect, dual piano, classical rhythm, timbre brightness adjustment, dual timbre, split mode Speaker equalization: 6 kinds of equalization effects (Functions marked with * need to be used with the app)

 Specifications

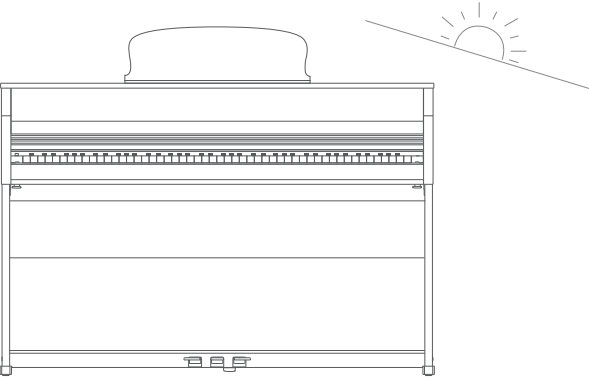	Specifications
Interface	Power Source: 15V power cord connected to the back of the piano. Cable Interface: The port is visible by pressing on and opening the small box on top of the piano. The interface supports four specialized cables for The ONE Smart Piano (USB Type-C, Apple lightning connector). Headphone Jack: One 3.5mm, one 6.5mm headphone jacks. AUX IN/OUT: 6.5mm Auxiliary audio input/output interface Microphone interface USB MIDI interface
Accessories	Mounting screws Screwdriver The ONE Smart Piano Cable - 2 (Apple lightning connectors, USB Type-C) User Manual
Care Instructions	<div>1. Avoid direct sunlight. It will cause damage to the piano.</div> <div></div> <div>2. Do not disassemble the piano. Disassembling may cause damages that are not covered under the warranty.</div>

Trouble-shooting

Problem	Possible cause and solution
A noise is heard when turning on or off the piano.	It's normal to hear some noise when turning the piano on or off. The noise may be due to interference caused by the use of a mobile phone in proximity to the instrument. Turn off the mobile phone, or place it far away from the instrument.
Speakers do not work when playing the piano	Check if the volume is too low or completely turned off. Then check if anything is plugged into the earphone socket.

SPECIAL NOTICE

Warning

Functions of the product may be subject to strong electromagnetic interference. If it happens, simply follow the user manual to restore the initial settings. When the product stops working, store it in an unused location.

Interference with other devices

Do not use the instrument in the vicinity of a TV, radio, stereo equipment, mobile phone, or other electronic device. Otherwise, the instrument may generate noise.

Maintenance

When cleaning the instrument, use a soft and dry cloth. Do not use paint thinners, solvents, cleaning fluids, or any chemical cleaning cloths.

Caution

Do not press too hard on switches or controls. Avoid getting paper, metal or other materials into the internal device. If this happens, unplug the device immediately. Then ask for help from a qualified service personnel to inspect the equipment.

Before moving the instrument, remove all connected cables.

Before using the product, please read the following instructions carefully.Please keep this manual for inspection at any time in the future.

Power

Please make sure that the power adapter is connected to a Power outlet with the correct voltage. Do not use a power source with the wrong voltage. When the device isn't in use, or during a thunderstorm, disconnect the power supply.

Connection

Before connecting the product to another device, first turn off the power on both devices. This will effectively prevent equipment breakdowns or possible damage to the other device.

Location

Do not place the product in the following environments in order to avoid deformation, discoloration, or other serious damages. Do not expose the instrument to excessive dust or vibrations, or extreme temperatures (such as in direct sunlight or near a heater), or in a car to prevent panel disfiguration or possible damage to the internal components. Do not place vinyl, plastic or rubber objects on the instrument, since the panel or the keyboard may get discolored.

CONTACT US

Email: support@smartpiano.com
Facebook: facebook.com/onesmartpiano

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following

two conditions: (1) This device may not cause harmful interference, and (2) this device

must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital

device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the

user is encouraged to try to correct the interference by one or more of the following measures:

—Reorient or relocate the receiving antenna.

—Increase the separation between the equipment and receiver.

—Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible

for compliance could void the user's authority to operate the equipment.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

This equipment should be installed and operated with minimum distance 20cm between the radiator&your body.