 


The ONE Sing

TheONE Sing Smart Piano


theonemusic.com



Packing List

Dear user, please check if the following components are complete in your package.

• Keyboard body

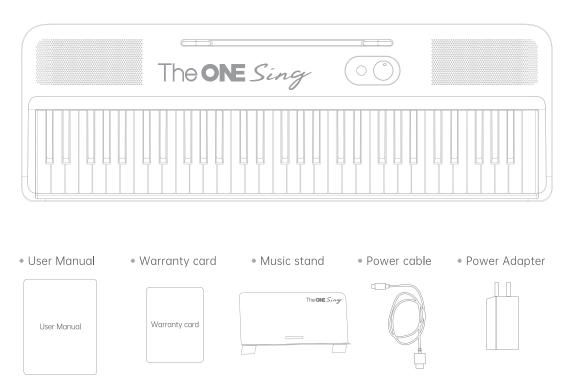

• We've prepared two apps for you to unlock the full potential of **TheONE Sing.**




TheONE Sing enjoy the fun of singing and piano playing



TheONE Smart Piano learn to play the piano like a pro

Introduction

• Front View

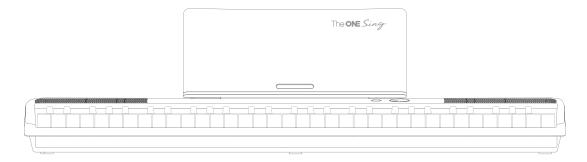

Top View



TheONE Sing Smart Piano is a smart instrument designed specifically for music lovers.

You can connect to the TheONE Sing app through Bluetooth on your phone or tablet to fully experience the fun of playing and singing and enjoy your musical life.


Control Panel

Main Panel

- 1 Power Switch


 Turn on/off the power. When the power is on, the corresponding button indicator light will remain on.
- 2 Master Volume Knob

 Adjust the volume to an appropriate level. Rotate clockwise to increase and counterclockwise to decrease it.

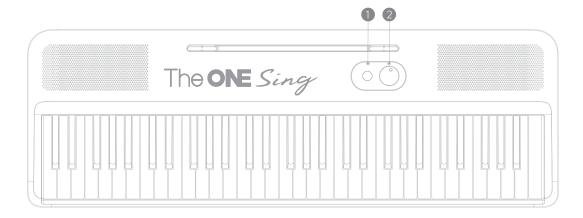

Rear Panel

- 3 USB MIDI Interface It can be used as a MIDI keyboard by connecting computers and other devices through the interface.
- Power Interface Connect a 5V DC power supply.
- 3.5mm Headphone Interface External devices can be connected through this interface.

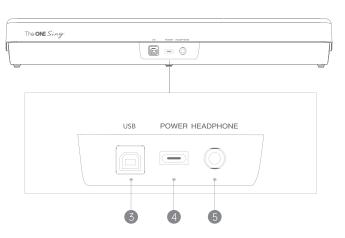



Setting

Before turning on the power, please read the section carefully.

USING POWER ADAPTOR

- 1. Please connect the USB end of the power cable to the 5V power plug.
- 2. Please connect the 5V power plug to a 220V power outlet.
- 3. Please connect the type-c end of the power cable to the power plug.
- 4. Press the [Power] switch, and the corresponding indicator light will light up, indicating the instrument has been turned on.
- 5. Press the [Power] switch again to turn off the power.

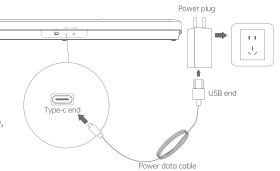

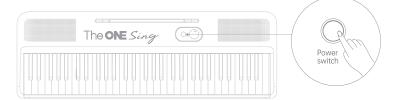


Tips:

- 1. The instrument is designed with an automatic shutdown function. To avoid unnecessary power consumption, the power will be automatically turned off after 30 minutes of inactivity on buttons or keys.
- 2. considering safety reasons, please disconnect the power supply of this instrument when it is not in use or when it is in thunderstorm weather.

USING BATTERY:

This piano can be powered by 4 AA (size 5) batteries.

- 1. Open the battery cover on the bottom of the piano.
- 2. Carefully insert the battery according to the positive and negative indications.
- 3. Close the battery cover and ensure that it is secure.
- 4. The brand new battery can support you to play continuously for 6 hours.
- *The maximum usage time of battery power is 6 hours, and the actual usage time may vary depending on the mode and conditions of use.

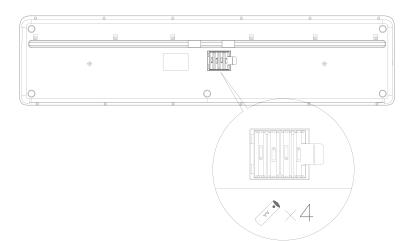


1 Tip

- 1. Don't mix new and old batteries.
- 2. It is necessary to use the same type of battery.
- 3. Please remove the battery if it will not be used for a long time.

Using a music stand:

The design of the music stand is flat and durable, and needs to be installed separately. When using the music stand, please insert it into the designated slot on the piano and press down firmly. Long elliptical holes have been reserved on the music stand, which can be used to insert the data cables. (Please refer to Figure 1 on the right)

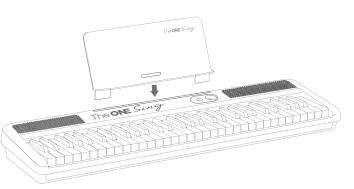

External Connection

Connect your phone or tablet

You can use Bluetooth to connect TheONE Sing App with your phone or tablet to discover more unexpected surprises.

Bluetooth Connection

The operation steps are shown below.



1.Open "Bluetooth" in the phone settings



2. Open the TheONE Sing app



3. Click on the "menu bar" in the upper left corner



4. Select "Connect the Piano"



5. Click to connect to "TheONE Sing"


Connect the headphones

When you need to practice alone or play and sing late at night, you can plug the stereo headphones into the headphone jack as shown in the picture.

After inserting the headphone connector into this jack, it will automatically cut off the instrument's speakers, and the sound can only be heard from the headphones.

Note:

- 1. Please avoid using headphones at high volume for extended periods of time, as this may cause ear fatigue and even hearing damage.
- 2. The headphone jack of this piano is a conventional 3.5mm stereo headphone jack.

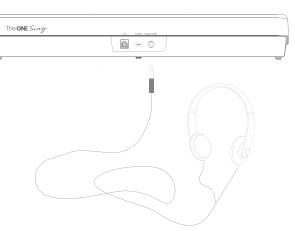

Extended Function

Choose a richer playing timbres

Using the matching TheONE app on your phone or tablet, you can choose from 256 different timbres to meet a wider performance needs.

Tips:

When the product works independently, it will automatically switch to the original grand piano timbre. For a better experience of playing and singing, the product comes with the sostenuto effect when it is turned on. If you want to cancel the sostenuto effect, please close it in the app.

Set up transposition

You can set up the transposition by using the matching app, the pitch of the entire keyboard can be adjusted in semitones without changing the playing method. The adjustable range is \pm 12 semitones.

Set octaves

By using the matching app, the pitch of the entire keyboard can be changed in octaves, with an adjustable range of ± 1 octave.

• Automatic shutdown

When this product works independently, it is set to being shut down after 30 minutes by default.

Bidirectional data transmission between USB and MIDI.

This product can be used as a MIDI keyboard for MIDI music production through data cable connection.

Precautions **A**

Before using, please carefully read the following content.

Please keep this User Guide in a safe place for future reference at any time.

Warning

The normal function of the product may be subject to strong electromagnetic interference. If it occurs, you can simply follow the User Guide to restore the product to its initial settings. When the function of the product cannot be restored, please use the product in another location.

Power supply

When unplugging the power cord from the power outlet, do not directly pull the power cord, otherwise it may cause damage. Do not use multiple connectors to connect the device to a power outlet, as this may cause the outlet to overheat.

If other types of power adapters are used, it may cause fire and electric shock. To ensure safe use, please unplug the power plug from the outlet when the device is not in use or during thunderstorms and windstorm.

Connection

Before connecting the device to other devices, please turn off the power switch of all devices. It will effectively prevent equipment failure or damage to other devices.

Location

Do not place the device in the following environment to avoid deformation, discoloration, or other more serious damage:

- Direct sunlight environment, next to the heating system
- Environments with large dust, high temperature, humidity, or locations where strong vibrations or shocks may occur Environments near the magnetic field

Maintenance

You can only use a soft dry cloth to clean this device. Do not use paint thinner, solvent, cleaning solution, or rag soaked in chemicals to clean this device.

Do not apply excessive force to switches or control buttons.

The piano is best used in the following environments:Temperature: 15 °C~35 °C Humidity: 75%

Processing

Prevent paper, liquid, metal, or other debris from entering the interior of the device. If it occurs, please unplug the plug from the wall power outlet. Then have the device inspected by maintenance personnel.

Before moving the device, please disconnect all power supplies.

Specifications

Name	Specification parameter				
Exterior	TheONE Sing Smart Piano				
Size	892mm×298mm×85.5mm				
Keyboard	61-key force sensing keyboard, appearance texture of piano keyboard				
Polyphony	64				
Timbre	256 different timbres can be set through the matching TheONE app The startup timbre is only displayed as the original grand piano timbre				
LED	61 red keyboard LEDs				
Connection method/device	Bluetooth connection Support Bluetooth BLE 5.0 device connection (iOS system 10.0 and above; Android system 5.0 and above)				
Headphone jack	1 3.5mm headphone jack				

This device includes a model approval code of CMIITID: 2020DP3089.

^{*} Kind reminder: In case of any changes in specifications, the actual product shall prevail.

Troubleshooting

ISSUE	Reason and countermeasure				
There is noise when the instrument is turned on or off	It is a electric current sound, which is a normal phenomenon.				
No sound is produced from the instrument speaker when playing the keyboard	It could be that the master volume is too low or off, and then check the headphone jack to see if something is plugged in				

Statement of Toxic and Harmful Substance in the Product

Component Name	Reason and countermeasure							
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent chromium (Cr(V1))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)		
Body shell and all plastic component	0	0	0	0	0	0		
Speaker	0	0	0	0	0	0		
Wire	0	0	0	0	0	0		
Hardware components	0	0	0	0	0	0		
All packaging materials	0	0	0	0	0	0		
Printed circuit board assemblies	×	0	0	0	0	0		
Partial copper alloy fittings	×	0	0	0	0	0		

- indicates that the content of the toxic and harmful substance in all homogeneous materials of the component is below the limit requirements specified in the GB/T26572-2011 standard
- indicates that the content of the toxic and harmful substance in at least one homogeneous material of the component exceeds the limit requirements specified in the GB/T26572-2011 standard. At present, there is no mature technological solution internationally to replace or reduce the content, which is an exemption under the EU RoHS (2011/65/EU). This product complies with the environmental requirements of EU RoHS.

FCC Statement:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarant ee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- —Reorient or relocate the receiving antenna.
- —Increase the separation between the equipment and receiver.
- —Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- —Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

 
This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environm ent. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

IC Statement:

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:

- (1) This device may not cause interference; and
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



CONTACT US Tel.:833-970-2670(US)

E-mail: support@theonemusic.com Website:www.theonemusic.com

The **ONE**®

NO.Sing2406017