

C-10785US UM 330*102mm正反面印 21.8.7



PLEASE DO NOT RETURN THIS PRODUCT

There are good days and bad days. If there is a problem with your product or you are unhappy with it, **PLEASE GIVE US A CHANCE and WE WILL MAKE IT RIGHT**

Email: support@fosmon.com
US Toll Free: 1-833-3-FOSMON
(833-336-7666)
Local/International: 1-612-435-7508

Fosmon [ETL Listed] 125V/15A
Wireless Outlet Plug with 3-Button
Wall Switch & Braille (On/Off) Mark
White (3 US Outlet +
1 Remote Control w/ 3 buttons)

Thank you for purchasing this Fosmon product. For optimum performance and safety, please read this user manual carefully before operating and keep it for future reference.

Fosmon's Indoor wireless outlet plug will allow you to turn on/off indoor light fixtures and electrical appliances with a wireless wall switch. The braille on the switch makes the system easy to use for visually impaired people.


Package Includes

- 3x Wireless Outlet Plugs
- 1x Wall Switch with 3 Buttons
- 1x Back Wall Plate
- 2x Screws & Anchors
- 2x 3M Tapes
- 1x CR2032 Battery
- 1x User Manual

Specifications

Voltage	125VAC 60Hz
Maximum Load	15A 1875W Resistive or General Purpose
Purpose	10A 1250W Tungsten
Remote Battery	3V CR2032
Radio Frequency	433.92 MHz
Transmitter Duty Cycle	<10%
Receiver Category	Class 3
Operation Distance	80ft (Open Area)

Product Diagram

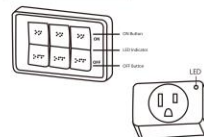

Operations

Pair the switch and plug

1. Open the battery cover of the transmitter (switch) and put one piece of CR2032 battery in it. The positive (+) side of the battery should be face-up. Then press ON or OFF button to see if the LED indicator turns on. If it turns on, the switch is functioning.
2. Plug the receiver (plug) into a 3-prong AC outlet. The receiver's LED indicator flashes slowly, indicating that the receiver is in the pairing mode.
3. While the LED indicator on the receiver flashes slowly, press the selected ON button once to pair with the receiver. The receiver will exit pairing mode after either paired or 29 seconds.
4. Now you can turn on/off the receiver by pressing the selected buttons on the switch.

Unpair the switch and plug

1. Unplug the receiver and plug it back in again. The LED indicator on the receiver will flash slowly, indicating that it is in pairing mode.
2. Press the selected OFF button once to unpair with the receiver. The receiver's LED will flash quickly for 4 seconds. After this, the receiver will return back to pairing mode.
3. Unplug the receiver, or wait until the receiver's LED stopping flashing.
4. The receiver should now be unpaired with the selected buttons.

Helpful Tips

1. The transmitted coded pattern is random/learning code. The repeat probability is 1/1,048,575.
2. One receiver (plug) can memorize a maximum of 10 different transmitters. If the eleventh transmitter is paired, the first transmitter will be unpaired.
3. One transmitter (button) can pair with multiple receivers and turn them on/off simultaneously.

Warnings

- Risk of Electric Shock
 - Keep children away.
 - Do not use in wet locations.
- Do not plug two or more outlet plugs together.
- Always ensure the plug of any appliance is fully inserted into the outlet plug.
- If cleaning of the outlet plug is required, remove from mains power and wipe it with a dry cloth.
- Do not immerse the outlet plug in water or any other liquid.
- For indoor use only.
- Risk of Fire
 - Don't plug in an appliance where the load exceeds rated capacity.
 - Do not use with extension cords.
 - Do not use to control appliances that contain heating elements (cooking appliances, heaters, irons, etc.).

Caution

- Do not install/operate this product unless it could be wired with minimum 15Amp circuit breaker.
- Suggestion: Do not plug the device into the outlet plug directly, please use a circuit breaker between these two.

FCC Information

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Limited Lifetime Warranty

Visit [fosmon.com/warranty](https://www.fosmon.com/warranty) for Product Registration, warranty and limited liability details.

Recycling the Product

To dispose this product properly, please follow the recycling process regulated in your area.

Follow Us On Social Media



www.fosmon.com

support@fosmon.com

© 2021 Fosmon Inc. All rights reserved.
All trade names are registered trademarks of respective manufacturers listed.