


## FUNCTIONS

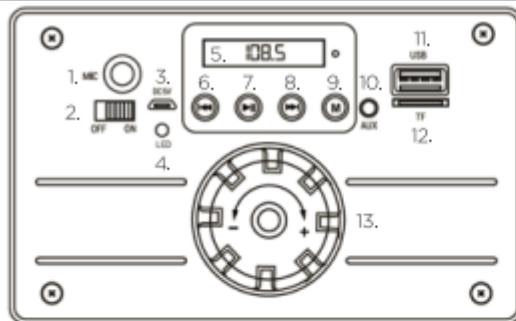

1. MIC Input
2. Power (On/Off)
3. Power Input
4. LED Indicator
5. Display LED
6. Previous Track
7. Play/Pause
8. Next Track
9. Mode
10. AUX Input
11. USB Input
12. Micro SD Input
13. Volume Knob

## INSTRUCTIONS

### SWITCHING BANGER ON/OFF

- To turn on/off BANGER, simply switch the on/off button on the panel.

### FUNCTIONS

1. DC 5V: Plug the Micro USB cable to the speaker and connect other end USB port to the power source. (DC 5V)
2. USB Slot: Used to read the Mp3 files
3. TF slot: Used to read the Mp3 files
4. Play/Pause: Under USB/TF/Bluetooth mode, short press for play and pause
5. M: To change mode during USB/TF, Bluetooth, FM and Aux-in mode.  
**Press and hold to switch on and off the light**
6. PREV: USB/TF/Bluetooth/FM mode: Press to move to previous FM channel / track. Long press to decrease the volume.
7. NEXT: USB/TF/Bluetooth/FM mode: Press to move to next FM channel / track. Long press to increase the volume.
8. MIC-IN: Connect with the MIC when you need.
9. Aux-in: Audio input jack.

## BLUETOOTH

- After turning on the speaker, It will automatically be ready to connect in Bluetooth mode.
- Turn on the Bluetooth function of the device you wish to connect and search for "IJOY BANGER". From the list of found devices, select "IJOY BANGER".
- BANGER is now connected to your device.

## AUX-IN

Connect the AUX cable to the AUX jack on the front panel. Press M to switch to Aux-in Mode. To change to Next/Previous Track, you must select the track on your device. Next/Previous Track buttons on BANGER will not work in AUX mode.

## USB/TF CARD

Insert the USB flash memory or Micro-TF card into the USB/TF slot. It will read the MP3 format music automatically. Press **▶||** to Play/Pause, short time press **◀◀** and **▶▶** for Previous and Next track.

## FM RADIO

Press M to switch to FM Mode. Short press **◀◀** and **▶▶** to the frequency station. Press the **▶||** to search the frequency station and record automatically, press and hold **◀◀** and **▶▶** button to turn down and turn up the Volume. Or rotate the knob to adjust the volume

## CHARGING BANGER

- Plug one end of the charging cable into BANGER charging input and the other end into a USB Power Adapter or Laptop/Desktop.
- The Red LED turns on to indicate that the speaker is charging.
- Once completely charged the LED will turn off.
- For your safety, it is recommended that you refrain from using the speaker while it is charging.

## FCC WARNING

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

To maintain compliance with FCC's RF Exposure guidelines, This equipment should be installed and operated with minimum distance between 20cm the radiator your body: Use only the supplied antenna.