




# Double Sided Print, Black and White Copy

<div data-bbox="622 204 936 323"> <b>GLOBOX</b> PORTABLE LIGHTSHOW BLUETOOTH® SPEAKER</div> <div data-bbox="611 376 947 691"></div> <div data-bbox="723 730 842 748"><b>XBS9-1070-BLK</b></div> <div data-bbox="658 767 907 782">855.999.8041   WWW.XTREMECABLES.COM</div>	<div data-bbox="969 225 1030 239"><b>FEATURES</b></div> <div data-bbox="969 244 1283 312"><ul style="list-style-type: none"><li>• Play wireless audio while watching a dazzling multicolor LED light show</li><li>• Compatible with all Bluetooth® enabled devices</li><li>• Built-in audio controls for seamless control over your music</li><li>• Wireless Bluetooth® range of up to 33ft</li><li>• Lightweight and portable to bring along anywhere!</li></ul></div> <div data-bbox="1019 323 1249 552"></div> <div data-bbox="969 560 1283 632"><div><div>1 Mic Echo Port</div><div>2 Aux Port</div><div>3 Micro SD Card Reader</div><div>4 Flashdrive Reader</div><div>5 On/Off Switch</div><div>6 Previous Track/ Volume Down</div><div>7 Play/Pause</div><div>8 Next Track/ Volume Up</div><div>9 Mode</div><div>10 Micro USB Charging Port</div></div></div> <div data-bbox="969 639 1249 791"><div><div><b>Operation:</b></div><div><ul style="list-style-type: none"><li>• Power Switch Knob: Turn the switch side to side on/off</li><li>• Mode button: Short press the mode button to switch between 4 different modes:<div><div>1. Bluetooth mode</div><div>2. TF card mode</div><div>3. Aux In mode</div><div>4. USB drive mode</div></div></li></ul></div></div></div>
--	--