

# **Buds Air**

## **User Manual**

### **Welcome**

Thank you for choosing our products. The company Bluetooth earphone has a fashionable design, powerful functions, and high compatibility, providing you with hands-free convenience in making calls and listening to music. It is your best choice in office and during traveling and driving.

### **Bluetooth Wireless Technology**

With the Bluetooth wireless technology, you can connect the earphone to its compatible communication devices without using cables. The Bluetooth wireless connection allows you to use a cell phone without holding it against the earphone, but the maximum distance between them cannot exceed 10 meters (about 30 feet). The Bluetooth wireless connection may be interfered by obstacles (such as walls) or other electronic devices.

In some areas, use of the Bluetooth wireless technology may be subject to some constraints. Please consult your local authority or service provider for details.

*Fully charge the earphone before using. For details about how to charge the earphone, see "Charger and Battery" in this manual. Meanwhile, choose the cell phone that is compatible with the earphone or other Bluetooth devices to pair with the earphone. For details about pairing, see "Basic Operations".*

*Tips: Keep the earphone away from your credit card or other magnetic storage media; otherwise, the stored information may be lost due to demagnetization.*

## How to connect with the Bluetooth earphone (Note: Use iPhone for example)

### ●Initial set up of the earphone

1. Take out both left and right earphones from the charging box when using it for the first time. Put both earphones back into the charging box. The headset is activated.
2. Open the cover of the charging box. Take earphone out from the charging box. The headset is automatically powered on and enters pairing status, with a prompt tone when completing the TWS pairing.
3. Turn on the phone's Bluetooth and search for Bluetooth headset devices. After finding the Bluetooth headset, click Pair to complete the connection.



## Basic Operations

- **Connecting and Pairing:** Open the cover of the charging box and take out the headsets from the charging box. The headset is automatically powered on and enters pairing status. Search for the pairing target name on your mobile phone, tap Connect. When the headsets are connected, you will hear an electronic prompt tone rings or voice prompt “Connected”. Headsets automatically shut down after 180 seconds of pairing timeout.
- **Manual Start:** When the headset is turned off, touch and hold the left and right headsets for about 7 seconds. Headsets will be turned on with a "Power On" voice prompt.
- **Manual Shutdown:** When the headset is turned on, touch and hold the left and right headsets for about 10 seconds. Headsets will be shut down with a "Power Off" voice prompt.
- **Receive a call:** When there is an incoming call, tap the earphone (L) or earphone (R) twice consecutively to answer the call.
- **Terminate a call:** During a call, tap the earphone (L) or earphone (R) for two consecutive times to hang up the phone.
- **Reject a call:** When there is an incoming call, you can touch and hold the left earphone (L) or right earphone (R) to reject the call.

- Playing or pausing music: When the music is being played, you can tap the left earphone (L) or right earphone (R) to pause the music, or repeat the same operation to play the music again.
  
- Next Track: When the music is being played, you can double-tap the left earphone (L) or right earphone (R) to skip forward a track, with an electronic prompt tone.
  
- Auto power-on/off: open the cover of the charging box, take out the earpiece and it turns on automatically.
  
- Auto power-on/off: Put the earphone into the charging case, and the earphone disconnects and enters the charging state.
  
- Automatic re-connection: After the earphone are powered on, they are actively re-connected to the last paired one devices.
  
- iOS battery level display: After the earphone is connected to the iOS, the battery level of the earphone can be displayed.
  
- Enabling/Disabling Voice Assistant: When the headset is playing music/standby, touch the headset (L) or headset (R) three times to activate the voice assistant, and repeat the operation to cancel the voice assistant.
  
- Low-battery alarm: A voice prompt “Low Battery, Please Charge” is played every 5 minutes until the headset is powered off.

## **Charger and Battery**

Before using any charger to charge this earphone, check whether the specifications of the charger meet requirements. The recommended output voltage of the charger is DC5V $\pm$ 0.25V, and the recommended output current is 100 mA to 500 mA. An over-high charging voltage may damage the earphone.

*Warning: Use the recommended charger whenever possible. Use of other types of chargers may violate the warranty terms of the equipment and results in danger. If the charging cable is delivered with the earphone, connect the cable to a CCC-certified charger or computer to charge the earphone.*

## **Charging the Battery**

The earphone use embedded charging battery that cannot be removed. Do not attempt to remove the battery from the earphone or the charging box; otherwise, the earphone may be damaged. If the earphone is not used in a long time, keep it in a cool and well-ventilated place, and charge the earphone once every two months.

1. When you hear a prompt voice “Low Battery, Please Charge”, put the earphone into the charging box. Otherwise the earphone will power off automatically.
2. If both the earphone and charging box are out of power, insert the cable of the charger into the charging port on the charging box, and plug the charger into the AC socket. The charging box and earphone will be charged simultaneously.
3. The earphone is charged through two metal contacts during charging in the box. The full charge takes about two hours. Then you can take out your earphone for use. The LED indicator on charging box become steady white when the charging box is fully charged. The full charge takes about two hours. Then you can disconnect the charger from the socket and charging box.

## Troubleshooting

Problem Description	Solution
Can't charge or boot	First, make sure that the charging box is fully charged, and try to replace the charging cable or charger. Pick up the earphone and put it back in the charging box after adjusting the angle. After plugging in the power supply, check whether the earphone has an indicator light
Headphones are noiseless and sound quality deteriorates	Listen to the voice prompt when you turn it on, reconnect your phone, and change the sound source for listening. If the Bluetooth headset is connected to the computer, due to the complexity of the computer system and hardware and imperfect driving, it may be necessary to manually select the audio device protocol or use other devices to connect and play.
Unable to switch songs, adjust the volume	Use the default player or trying another phone can improve this problem.
Bluetooth headset cannot be found, mobile phone cannot be connected, and Bluetooth connection is unstable.	Try to put the phone close to the headset, check whether to enter the pairing state or confirm whether the pairing operation is correct, clear the Bluetooth list of the phone and try to pair again.
Unable to connect Bluetooth	Please put the left and right headphones into the charging box, then take out the left and right headphones to reconnect again; Or reset or renew the pairing information.

## ***Tips***

1. *To extend the service life of the battery, you are advised to charge the earphone at least once a month.*
2. *Adjust the volume to an appropriate degree when using the earphone.*
3. *DO NOT wear the earphone when sleeping; otherwise, the earphone may be damaged or cause injuries to you.*
4. *When driving, you are advised to use the company Bluetooth earphone to ensure your driving safety. It is dangerous to directly use cell phones when driving.*
5. *Keep the earphone away from kids. Small components of the earphone may cause suffocation or other injuries to kids.*

**FCC Caution:**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.