

MANUAL - WINGS 100 PRO

DEVICE LAYOUT

A Charging Case X 1 B Earphones X 1 C Type-C Cable X 1 D Ear Tips X 2 E Manual X 1 F SADES® Sticker X 1 G Warranty Card X 1

* This product is equipped with different types of ear tips. Different users should choose suitable ear tips to wear.
(Pictures are for reference only.)

OPERATION GUIDELINE

POWER ON: Uncover the charging case, the earphones will turn on automatically.

POWER OFF: Put the earphones back into the charging case and close the cover, they will automatically turn off and start charging.

EARPHONES PAIRING: The earphones will automatically pair to each other after the cover is open when they are in the case.

* Note: Above functions are available for either earphone in individual or stereo mode.

BLUETOOTH PAIRING TO THE DEVICE

1. To connect to your device during first use, turn the earphones on to enter pairing mode.

2. Enable Bluetooth function on your device, connect the "Wings 100 pro". You will hear "Connected" in a voice. Connection is succeeded.

3. After first successful pairing, earphones will automatically connect to your device.

4. To pair with a new device, put earphones back into the case, unpair the original device at first.

Note: Above functions are available for either earphone in individual or stereo mode.

FCC

FCC RF exposure statement:
The equipment complies with FCC Radiation exposure limit set forth for uncontrolled environment.
Warning: Changes or modifications to this unit not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.
This device complies with Part 15 of the FCC Rules.
Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC ID: 2A3FLSZSADES

FAQ

1. Why the earphones cannot be turned on?
Check if your Wings 100 pro have enough battery life. If not, please charge them for at least 30 minutes

2. Why the earphones cannot play music after successfully connecting to my Android device?
After pairing successfully, on the Bluetooth menu of your device, tap the icon on the right of your device name and make sure the "Media Audio" option is on.

3. Why there is no sound from the earphones while making phone calls after successfully connecting to my Android device?
After pairing successfully, on the Bluetooth menu of your device, tap the icon on the right of your device name and make sure the "Phone Audio" option is on.

4. Why the Bluetooth connection is not stable and causes some interruptions?
1)Try shortening the distance between your earphones and device. Avoid solid barriers in between.
2)Please keep away from strong interference sources, such as Wi-Fi and GPRS.
3)Please make sure the Bluetooth antenna of your device is not blocked.

5. Why some control functions do not match those in the manual while using third party music/video player Apps?
Your operating system and the third party music/video player apps may have different settings for control functions.
We recommend that you use the music/video player apps that your device has originally provided.

6. I turned the earphones up and maximum volume, but why the actual volume still sounds low?
In different operating systems, especially some Android systems, the apps and your device have separate volume control systems.
Please adjust the volume controls on both the device and the apps according to your preference.
For more detailed product FAQs, please visit the product support section under www.sades.gg

sadesesports

www.sades.gg

CHARGING METHODS

With the Type-C Cable, a full charge will take around 2 hours.
And the 3 LED lighting of charging case indicates full battery.

Tips
1. Please fully charge the battery before first use.
2. If the earphones have been unused for more than 3 months, we recommend that you charge them. This will improve battery capacity.

BATTERY NOTIFICATION

(1) When the battery is low on earphones, the LED indicator will flash, you will hear the notification sound "Low Battery".

(2) When case battery is too low on charge, there is only 1 LED indicator flashing.

TAP CONTROLS

MODE	TAPPING COUNT
MUSIC	X 1 L/ R: Pause/ Play X 1 L: X2s Previous track X 1 R: X2s Next track
PHONE	X 1 L/ R: Answer/ Hang up X 1 L/ R: X 2s Reject
GAME	X 2 R: On/ Off Switch