



CONTENTS

- DISCLAIMER AND SAFETY GUIDELINES 01
- MAINTENANCE AND CARE 03
- PRODUCT OVERVIEW 04
- FLIGHT PREPARATION 05
- FLIGHT OPERATION GUIDE 08
- Remote Operation Guide 09
 - 1. Pair the Remote with the Drone 09
 - 2. Flight Calibration 10
 - 3. Flight Instructions 10
 - Take-off 10
 - Landing 12
 - Flight Directions 12
 - Speed Switch 14
 - Headless Mode 14
 - 360° Flip 15
 - One Key Return 16
 - High-Speed Rotation 16
 - Circle Fly 17
 - Photo/Video 18
 - Altitude Hold/Hover 18
 - Emergency Stop 18
- App Operation Guide 19
 - 1. App Downloading and Installation 19
 - 2. Link the App with the Drone 20
 - 3. Function Overview of the App 22
- TROUBLESHOOTING GUIDE 22
- SPECIFICATIONS 26

DISCLAIMER AND SAFETY GUIDELINES

1. DO NOT look directly into the drone light.
2. DO NOT treat the product as household waste.
3. DO NOT fly above or near obstacles, crowds, open water, public road, high voltage power lines or trees.
4. DO NOT use the drone in severe weather conditions. These include wind, snow, rain, fog, hail, lightning, tornadoes or hurricanes.
5. Stay away from the rotating propellers and motors to avoid some tiny objects (e.g. hair) to get into them.
6. This product is not a toy and not recommended for users under age 14.
7. Please maintain line-of-sight of your drone at all times after it is powered up. Do not rely on the camera image to control your drone.

EN 01

8. This drone does not come with a GPS module. Please fly the drone within the control range and always keep an eye on the flying.

GPS

9. This product is not intended for professional aerial drone photography.

10. Be sure to observe all local regulations, obtain appropriate authorizations and understand risks. Please note it is solely your responsibility to comply with all flight regulations.

DYNALOG accepts no liability for damage, injury or any legal responsibility incurred directly or indirectly from the use of this product. The user shall observe safe and lawful practices including, but not limited to, those set forth in these Safety Guidelines. DYNALOG reserves the right to update this user manual.

EN 04

MAINTENANCE AND CARE

1. Thoroughly check the drone after a crash or violent impact.
2. Do not charge battery if it is hot. Let it cool down first.
3. Remove the batteries from both the drone and the remote if they will not be used for a long time.
4. Unplug the charger once the battery is fully charged.
5. Store the drone and remote in a cool, dry place away from direct sunlight.
6. Avoid direct contact of the camera with water or other liquids. Wipe dry with a soft absorbent cloth if it gets wet.
7. Do not charge the battery next to inflammable materials, such as carpet, wood floors or countertops etc., or on surfaces that are electrically conductive. Do not leave the battery unattended while charging.
8. To extend the battery's lifespan, recharge it at least once every three months if not using it for long.
9. Please use the original battery provided. Use an incorrect type of battery may lead to fire hazards.
10. Do not dispose of the battery in fire or a hot oven, cut or mechanically crush the battery, as this may cause explosions.
11. Do not leave the battery in an extremely high temperature environment that can result in an explosion or the leakage of flammable liquid or gas.
12. Do not expose the battery to the extremely low air pressure, as this may result in an explosion or the leakage of flammable liquid or gas.

EN 03

